

Shop Manual

BULLDOZER

D51EX-24
D51PX-24

SERIAL NUMBERS D51EX- B20001 and up
 D51PX- B20001

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-19
FOREWORD, SAFETY, BASIC INFORMATION	00-25
HOW TO READ THE SHOP MANUAL	00-25
SAFETY NOTICE FOR OPERATION	00-27
PRECAUTIONS TO PREVENT FIRE	00-35
ACTIONS IF FIRE OCCURS	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-39
PRECAUTIONS FOR DEF	00-40
STORE AdBlue/DEF	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-55
PRACTICAL USE OF KOMTRAX	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-71
HOW TO READ ELECTRICAL WIRE CODE	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-76
STANDARD TIGHTENING TORQUE TABLE	00-79
CONVERSION TABLE	00-86
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-13
WEIGHT TABLE	01-23
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA)	01-27
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION)	01-29
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM	10-14
COMPONENT PARTS OF UREA SCR SYSTEM	10-31
BOOT-UP SYSTEM	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-40
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL-	10-41
LER)	
SYSTEM OPERATING LAMP SYSTEM	10-42
BATTERY DISCONNECT SWITCH	10-45
ENGINE SYSTEM	10-46
LAYOUT DRAWING OF ENGINE SYSTEM	10-46
ENGINE CONTROL SYSTEM	10-48
AUTOMATIC IDLE STOP SYSTEM	10-60

COMPONENT PARTS OF ENGINE SYSTEM	10-64
COOLING SYSTEM.....	10-81
LAYOUT DRAWING OF COOLING SYSTEM	10-81
COOLING FAN CONTROL SYSTEM.....	10-83
COMPONENT PARTS OF COOLING SYSTEM.....	10-86
CONTROL SYSTEM.....	10-95
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-95
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-96
MACHINE MONITOR SYSTEM	10-97
KOMTRAX SYSTEM.....	10-99
COMPONENT PARTS OF CONTROL SYSTEM.....	10-101
HYDRAULIC SYSTEM.....	10-138
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-138
CLSS	10-139
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-142
POWER TRAIN SYSTEM	10-174
LAYOUT DRAWING OF HST SYSTEM	10-174
OPERATION OF HST SYSTEM.....	10-175
STEERING AND BRAKE CONTROL SYSTEM	10-177
HST CONTROL SYSTEM.....	10-179
PARKING BRAKE CONTROL SYSTEM	10-190
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-193
WORK EQUIPMENT SYSTEM	10-229
WORK EQUIPMENT CONTROL	10-229
LAYOUT DRAWING OF FRONT WORK EQUIPMENT	10-231
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-232
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-233
UNDERCARRIAGE AND FRAME.....	10-249
MAIN FRAME	10-249
SUSPENSION	10-250
TRACK FRAME AND IDLER CUSHION	10-253
WORK EQUIPMENT.....	10-255
STRUCTURE OF FRONT WORK EQUIPMENT	10-255
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-256
CAB AND ITS ATTACHMENTS	10-257
ROPS CAB	10-257
CAB MOUNT	10-260
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: D51EX-24	20-9
STANDARD VALUE TABLE FOR ENGINE: D51PX-24	20-13
STANDARD VALUE TABLE FOR MACHINE.....	20-17
STANDARD VALUE TABLE FOR MACHINE: D51EX-24	20-17
STANDARD VALUE TABLE FOR MACHINE: D51PX-24	20-33
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-47
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-18
ENGINE AND COOLING SYSTEM.....	30-21
TEST ENGINE SPEED	30-21
TEST BOOST PRESSURE.....	30-23
TEST EXHAUST GAS COLOR.....	30-24
TEST AND ADJUST VALVE CLEARANCE	30-26

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$