

Shop Manual

BULLDOZER

D51EXi-24
D51PXi-24

SERIAL NUMBERS D51EXi-B20001 and up
 D51PXi-B20001

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-21
FOREWORD, SAFETY, BASIC INFORMATION	00-27
HOW TO READ THE SHOP MANUAL	00-27
SAFETY NOTICE FOR OPERATION	00-29
PRECAUTIONS TO PREVENT FIRE	00-37
ACTIONS IF FIRE OCCURS	00-39
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-40
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-41
PRECAUTIONS FOR DEF	00-42
STORE AdBlue/DEF	00-43
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-44
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-47
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-56
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-57
PRACTICAL USE OF KOMTRAX	00-58
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-59
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-63
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-73
HOW TO READ ELECTRICAL WIRE CODE	00-74
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-78
STANDARD TIGHTENING TORQUE TABLE	00-81
CONVERSION TABLE	00-88
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-13
WEIGHT TABLE	01-24
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA)	01-28
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION)	01-30
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-14
FUNCTION OF UREA SCR SYSTEM	10-15
COMPONENT PARTS OF UREA SCR SYSTEM	10-32
BOOT-UP SYSTEM	10-41
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-41
LAYOUT DRAWING OF BOOT-UP SYSTEM (MACHINE WITH GATEWAY FUNCTION CONTROL-	10-42
LER)	10-42
SYSTEM OPERATING LAMP SYSTEM	10-43
BATTERY DISCONNECT SWITCH	10-46
ENGINE SYSTEM	10-47
LAYOUT DRAWING OF ENGINE SYSTEM	10-47
ENGINE CONTROL SYSTEM	10-49
AUTOMATIC IDLE STOP SYSTEM	10-61

COMPONENT PARTS OF ENGINE SYSTEM	10-65
COOLING SYSTEM.....	10-82
LAYOUT DRAWING OF COOLING SYSTEM	10-82
COOLING FAN CONTROL SYSTEM.....	10-84
COMPONENT PARTS OF COOLING SYSTEM.....	10-87
CONTROL SYSTEM.....	10-96
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-96
LAYOUT DRAWING OF CONTROL SYSTEM (MACHINE WITH KOMTRAX TERMINAL)	10-97
MACHINE MONITOR SYSTEM	10-98
KOMTRAX SYSTEM.....	10-100
COMPONENT PARTS OF CONTROL SYSTEM.....	10-102
HYDRAULIC SYSTEM.....	10-139
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-139
CLSS	10-140
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-143
POWER TRAIN SYSTEM	10-175
LAYOUT DRAWING OF HST SYSTEM	10-175
OPERATION OF HST SYSTEM.....	10-176
STEERING AND BRAKE CONTROL SYSTEM	10-178
HST CONTROL SYSTEM.....	10-180
PARKING BRAKE CONTROL SYSTEM	10-191
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-194
WORK EQUIPMENT SYSTEM	10-230
WORK EQUIPMENT CONTROL	10-230
LAYOUT DRAWING OF FRONT WORK EQUIPMENT	10-232
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-233
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-234
ICT SYSTEM	10-250
LAYOUT DRAWING OF ICT SYSTEM.....	10-250
ICT CONTROL SYSTEM DIAGRAM.....	10-252
BLADE CONTROL SYSTEM	10-254
SMOOTH START SYSTEM	10-260
SLIP CONTROL SYSTEM	10-262
ASSIST CONTROL SYSTEM	10-263
HST SPEED RANGE CONTROL SYSTEM	10-265
COMPONENT PARTS OF ICT SYSTEM	10-267
UNDERCARRIAGE AND FRAME.....	10-290
MAIN FRAME	10-290
SUSPENSION	10-291
TRACK FRAME AND IDLER CUSHION	10-294
WORK EQUIPMENT.....	10-296
STRUCTURE OF FRONT WORK EQUIPMENT.....	10-296
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-297
CAB AND ITS ATTACHMENTS	10-298
ROPS CAB	10-298
CAB MOUNT	10-301
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: D51EXI-24	20-9
STANDARD VALUE TABLE FOR ENGINE: D51PXI-24	20-13
STANDARD VALUE TABLE FOR MACHINE.....	20-17
STANDARD VALUE TABLE FOR MACHINE: D51EXI-24	20-17
STANDARD VALUE TABLE FOR MACHINE: D51PXI-24	20-34
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-49
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$