

Shop Manual

BULLDOZER

D65EX -16

D65PX -16

D65WX -16

SERIAL NUMBERS

D65EX- 80001

D65PX- 80001

and up

D65WX-80001

ecot3

KOMATSU

BULLDOZER

D65EX-16

D65PX-16

D65WX-16

Machine model	Serial number
D65EX-16	80001 and up
D65PX-16	80001 and up
D65WX-16	80001 and up

00 Index and foreword

100 Index

Composition of shop manual.....	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04887-07
00 Index and foreword	SEN04923-07
100 Index	SEN04931-07 ●
200 Foreword and general information	SEN04932-01
01 General	SEN04924-01
100 Specification and technical data	SEN04933-01
10 Structure, function and maintenance standard	SEN04925-03
100 Engine and cooling system	SEN04963-00
201 Power train, Part 1	SEN04964-00
202 Power train, Part 2	SEN04965-01 ●
300 Undercarriage and frame	SEN04966-02
401 Hydraulic system, Part 1	SEN04967-00
402 Hydraulic system, Part 2	SEN04968-01
403 Hydraulic system, Part 3	SEN04969-00
500 Work equipment	SEN04970-00
600 Cab and its attachments	SEN04971-01
700 Electrical system	SEN04972-01 ●
20 Standard value table	SEN04926-01
100 Standard service value table	SEN05118-01
30 Testing and adjusting	SEN04927-04
101 Testing and adjusting, Part 1	SEN05119-02
102 Testing and adjusting, Part 2	SEN05120-02
103 Testing and adjusting, Part 3	SEN05121-02
104 Testing and adjusting, Part 4	SEN05122-01
40 Troubleshooting	SEN04928-02
100 Failure code table and fuse locations	SEN05029-01
200 General information on troubleshooting	SEN05030-01
301 Troubleshooting by failure code (Display of code), Part 1	SEN05031-00
302 Troubleshooting by failure code (Display of code), Part 2	SEN05032-01
303 Troubleshooting by failure code (Display of code), Part 3	SEN05033-01
304 Troubleshooting by failure code (Display of code), Part 4	SEN05034-01

305	Troubleshooting by failure code (Display of code), Part 5.....	SEN05035-00
306	Troubleshooting by failure code (Display of code), Part 6.....	SEN05036-01
400	Troubleshooting of electrical system (E-mode)	SEN05037-01
500	Troubleshooting of hydraulic and mechanical system (H-mode).....	SEN05038-00
600	Troubleshooting of engine (S-mode).....	SEN05039-00
50	Disassembly and assembly	SEN04929-03
100	General information on disassembly and assembly.....	SEN05110-01 ●
200	Engine and cooling system	SEN05111-00
300	Power train	SEN05112-01 ●
400	Undercarriage and frame	SEN05113-02
500	Hydraulic system	SEN05114-00
600	Work equipment	SEN05115-00
700	Cab and its attachments.....	SEN05116-01
800	Electrical system	SEN05117-00
80	Appendix.....	SEN05040-00
100	Air conditioner	SEN05041-00
90	Diagrams and drawings.....	SEN04930-02
100	Hydraulic diagrams and drawings	SEN04934-00
200	Electrical diagrams and drawings.....	SEN04935-02 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$