

SM228

BEE08E1-01

SERVICE MANUAL

EX50 FORKLIFT TRUCK

S/N 7001~

FD100/115/135-8

FD150/160E-8

EX50



WARNING

Read and observe all warnings on this unit before operating it.

DO NOT operate this equipment unless all factory-installed guards and shields are properly secured in place.

KOMATSU®

MAY 2015

The information and specifications contained herein were accurate at the time of publication, but may change without notice as required for product improvements. Neither Komatsu Forklift U.S.A. nor its parent company nor any of its subsidiaries will be held responsible for damages due to misuse or inappropriate use of its products.

© Copyright 2014, Komatsu Forklift U.S.A., LLC. No part of this document may be photocopied or reproduced in any way without prior written consent of Komatsu Forklift U.S.A.

CONTENTS

CONTENTS	3
INTRODUCTION	11
PRECAUTIONS WHEN PERFORMING SERVICE WORK	11
DESCRIPTION OF SYMBOLS	12
ENGINE MOUNTED IN THIS TRUCK	12
SAFETY	13
1. GENERAL INFORMATION & SPECIFICATIONS	
1.1 SPECIFICATIONS.....	1-3
1.2 PERIODIC REPLACEMENT OF CONSUMABLE PARTS.....	1-9
1.3 STANDARD TIGHTENING TORQUE.....	1-10
1.3.1 BOLTS.....	1-10
1.3.2 ELBOWS, NIPPLES AND UNIONS.....	1-11
1.4 HOW TO USE LOCTITE.....	1-12
2. TESTING & ADJUSTING	
2.1 SERVICE DATA.....	2-3
2.2 DEPRESSURIZE HYDRAULIC SYSTEM.....	2-5
2.3 REPLACE ENGINE OIL/ENGINE OIL FILTER.....	2-6
2.3.1 CHANGE ENGINE OIL.....	2-6
2.3.2 REPLACE ENGINE OIL FILTER.....	2-6
2.4 REPLACE FUEL FILTERS.....	2-7
2.4.1 REPLACE FUEL PRE-FILTER CARTRIDGE.....	2-7
2.4.2 BLEED AIR FROM FUEL PRE-FILTER.....	2-8
2.4.3 REPLACE FUEL MAIN FILTER CARTRIDGE.....	2-8
2.4.4 BLEED AIR FROM FUEL MAIN FILTER.....	2-8
2.5 CLEAN INSIDE THE COOLING SYSTEM.....	2-9
2.6 AIR CLEANER.....	2-10
2.6.1 CLEAN FILTER ELEMENT.....	2-10
2.6.2 REPLACE FILTER ELEMENT.....	2-10
2.7 ADJUST VALVE CLEARANCE.....	2-10
2.8 CHECK COMPRESSION PRESSURE.....	2-10
2.9 TIGHTEN CYLINDER HEAD MOUNTING BOLTS.....	2-10

CONTENTS

2.10	DIFFERENTIAL CASE	2-11
2.10.1	CHECK OIL LEVEL	2-11
2.10.2	REPLACE OIL	2-11
2.11	TORQFLOW TRANSMISSION CASE	2-12
2.11.1	CHECK OIL LEVEL	2-12
2.11.2	REPLACE OIL AND CLEAN STRAINER	2-12
2.12	SERVICE HYDRAULIC TANK	2-13
2.13	REPLACE BRAKE COOLING OIL (WET DISC BRAKE)	2-14
2.14	MEASURE HYDRAULIC DRIFT OF LIFT AND TILT CYLINDERS	2-15
2.15	ADJUST BRAKE/INCHING PEDAL (HYDRAULIC DRUM BRAKE)	2-16
2.15.1	ADJUST BRAKE PEDAL	2-16
2.15.2	ADJUST INCHING PEDAL	2-17
2.16	ADJUST BRAKE/INCHING PEDAL (WET DISC BRAKE)	2-18
2.16.1	ADJUST BRAKE PEDAL	2-18
2.16.2	INCHING PEDAL	2-18
2.17	ACCUMULATOR FOR BRAKE	2-19
2.17.1	CHARGE ACCUMULATOR WITH NITROGEN GAS (HYDRAULIC DRUM BRAKE)	2-19
2.17.2	CHARGING ASSEMBLY	2-21
2.17.3	JOINT ASSEMBLY	2-22
2.17.4	CHARGE ACCUMULATOR WITH NITROGEN GAS (WET DISC BRAKE)	2-22
2.17.5	MEASURE ACCUMULATOR CHARGE VALVE PRESSURE (WET DISC BRAKE)	2-23
2.17.6	ADJUST ACCUMULATOR CHARGE VALVE PRESSURE (WET DISC BRAKE)	2-23
2.18	ADJUST ACCELERATOR PEDAL OPERATION	2-23
2.19	ADJUST PARKING BRAKE	2-24
2.19.1	ADJUST LEVER OPERATING EFFORT	2-24
2.19.2	ADJUST PARKING BRAKE SHOE CLEARANCE	2-24
2.20	BLEEDING AIR	2-25
2.20.1	BRAKE PIPING (HYDRAULIC DRUM BRAKE)	2-25
2.20.2	LIFT CYLINDER	2-25
2.20.3	BRAKE (WET DISC BRAKE)	2-25
2.21	CHECK WEAR OF BRAKE DISC (WET DISC BRAKE)	2-26
2.22	ADJUST STEERING AXLE	2-27
2.22.1	ALIGNMENT	2-27
2.22.2	TURNING ANGLE	2-27
2.23	INSPECT THE AIR CONDITIONER (OPTION)	2-28
2.24	INSPECT BATTERY	2-29

2.25 OIL AND GREASING CHART 2-30
 2.26 LUBRICANT LIST 2-31

3. INSPECTION

3.1 GENERAL LOCATIONS 3-3
 3.2 WEIGHT TABLE 3-4
 3.3 INSPECTION CHECKLIST BY COMPONENT 3-5
 3.4 REMOVAL AND INSTALLATION OF COMPONENTS 3-22
 3.5 REMOVAL AND INSTALLATION FLOW CHART 3-24
 3.6 MAST 3-25
 3.6.1 MAST REMOVAL - TYPICAL 3-25
 3.6.2 MAST INSTALLATION - TYPICAL 3-26
 3.6.3 BLEED AIR FROM LIFT CYLINDER 3-26
 3.7 POWER TRAIN 3-27
 3.7.1 REAR AXLE SUPPORT BUSHING 3-27
 3.7.2 CENTER DRIVE SHAFT 3-27
 3.7.3 CENTER ENGINE MOUNTS 3-27
 3.7.4 WHEEL INSTALLATION 3-27
 3.7.5 TIRE CLAMP TIGHTENING INSTRUCTION 3-28
 3.7.6 ADJUST RUNOUT 3-29
 3.8 BRAKE SYSTEM (HYDRAULIC DRUM BRAKE) 3-30
 3.8.1 METHOD OF BLEEDING AIR 3-30
 3.8.2 METHOD OF REMOVING HIGH PRESSURE OIL 3-30
 3.9 WORK EQUIPMENT CONTROL LEVER 3-31

4. DISASSEMBLY AND ASSEMBLY

4.1 TORQUE CONVERTER 4-3
 4.2 TORQFLOW TRANSMISSION 4-9
 4.2.1 CONTROL VALVE (SOLENOID VALVE) 4-11
 4.2.2 DISASSEMBLY 4-14
 4.2.3 DISASSEMBLY OF CLUTCH PACK ASSEMBLY 4-18
 4.2.4 PRECAUTIONS WHEN ASSEMBLING 4-21
 4.2.5 CONNECTORS FOR SOLENOID VALVES 4-22
 4.2.6 ASSEMBLY OF F/R (INPUT SHAFT) SHAFT SUB ASSEMBLY 4-23
 4.2.7 ASSEMBLY OF 1ST/2ND SHAFT ASSEMBLY 4-25
 4.2.8 ASSEMBLY OF 3RD (OUTPUT SHAFT) SHAFT SUB ASSEMBLY 4-27
 4.2.9 CLUTCH SHAFT SUB ASSEMBLY 4-29

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$