

# Shop Manual

**HYDRAULIC  
EXCAVATOR**

**HB215LC-3**

**SERIAL NUMBERS**      70009 and up  
                                 K70001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

**INDEX**

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-22
FOREWORD, SAFETY, BASIC INFORMATION .....	00-28
HOW TO READ THE SHOP MANUAL .....	00-28
SAFETY NOTICE FOR OPERATION .....	00-30
PRECAUTIONS PARTICULARLY FOR HYBRID MACHINES .....	00-38
PRECAUTIONS TO PREVENT FIRE .....	00-39
ACTIONS IF FIRE OCCURS .....	00-41
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-42
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-43
PRECAUTIONS FOR DEF .....	00-44
STORE AdBlue/DEF .....	00-45
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-49
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-56
PRECAUTIONS FOR MAINTENANCE OF HYBRID SYSTEM .....	00-58
PRECAUTIONS AGAINST HIGH VOLTAGE AND HIGH TEMPERATURE .....	00-59
PRECAUTIONS FOR NORMAL CHECK AND MAINTENANCE .....	00-60
PRECAUTIONS FOR THE MACHINE NOT TO BE TIPPED OVER AND FOR HYBRID COMPO- NENTS NOT TO BE DAMAGED .....	00-61
PRECAUTIONS FOR THE MACHINE NOT TO BE SUBMERGED .....	00-62
PRECAUTIONS FOR THE COLD SEASON .....	00-63
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-64
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-65
PRACTICAL USE OF KOMTRAX .....	00-66
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-67
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-71
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-75
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-76
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-78
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-79
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE . .....	00-81
HOW TO READ THE CODES (SYMBOLS) FOR ELECTRIC CABLE .....	00-82
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-88
STANDARD TIGHTENING TORQUE TABLE .....	00-91
CONVERSION TABLE .....	00-98
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-10
SPECIFICATIONS .....	01-11
WEIGHT TABLE .....	01-15
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION) .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-17
FUNCTION OF UREA SCR SYSTEM .....	10-18
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-30
BOOT-UP SYSTEM .....	10-39
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-39

SYSTEM OPERATING LAMP SYSTEM .....	10-40
BATTERY DISCONNECT SWITCH .....	10-42
ENGINE SYSTEM .....	10-43
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-43
ENGINE CONTROL SYSTEM .....	10-45
AUTO-DECELERATION SYSTEM .....	10-48
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-50
OVERHEAT PREVENTION SYSTEM .....	10-52
TURBOCHARGER PROTECTION SYSTEM .....	10-56
AUTOMATIC IDLE STOP SYSTEM .....	10-58
COMPONENT PARTS OF ENGINE SYSTEM .....	10-62
COOLING SYSTEM.....	10-77
LAYOUT DRAWING OF COOLING SYSTEM .....	10-77
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH .....	10-79
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-81
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
HYBRID SYSTEM.....	10-85
LAYOUT DRAWING OF HYBRID SYSTEM .....	10-85
SYSTEM DIAGRAM OF HYBRID SYSTEM.....	10-86
STRUCTURE OF HYBRID SYSTEM .....	10-87
HYBRID PROTECTION SYSTEM.....	10-88
COOLING SYSTEM OF HYBRID COMPONENTS .....	10-90
INTERLOCK SYSTEM OF HYBRID COMPONENTS .....	10-91
WORKER PROTECTION SYSTEM FOR WHEN DISASSEMBLING THE HYBRID COMPONENTS .....	10-92
COMPONENT PARTS OF HYBRID SYSTEM .....	10-94
CONTROL SYSTEM.....	10-101
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-101
MACHINE MONITOR SYSTEM .....	10-104
KomVision SYSTEM .....	10-106
KOMTRAX SYSTEM.....	10-110
COMPONENT PARTS OF CONTROL SYSTEM.....	10-111
HYDRAULIC SYSTEM.....	10-146
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-146
CLSS .....	10-151
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-168
PUMP AND VALVE CONTROL SYSTEM .....	10-175
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-178
WORK EQUIPMENT SYSTEM .....	10-261
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-261
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-265
PPC LOCK SYSTEM .....	10-267
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-268
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-270
TOOL CONTROL SYSTEM .....	10-272
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-274
SWING SYSTEM.....	10-313
LAYOUT DRAWING OF SWING SYSTEM .....	10-313
SWING CONTROL SYSTEM DIAGRAM .....	10-316
COMPONENT PARTS OF SWING SYSTEM.....	10-320
TRAVEL SYSTEM.....	10-324
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-324
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-328
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-330
UNDERCARRIAGE AND FRAME.....	10-351
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-351
WORK EQUIPMENT.....	10-353
STRUCTURE OF WORK EQUIPMENT .....	10-353

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$