

Shop Manual

HYDRAULIC
EXCAVATOR

PC160LC-7E0

SERIAL NUMBERS 20001 and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC160LC-7E0

Machine model Serial number

PC160LC-7E0 20001 and up

00 Index and foreword

Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 4 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN01892-05 |
| 00 Index and foreword | SEN01893-05 |
| Index | SEN01894-05 ● |
| Foreword and general information | SEN01895-02 |
| 01 Specification | SEN01896-00 |
| Specification and technical data | SEN01897-00 |
| 10 Structure, function and maintenance standard | SEN01898-02 |
| Engine and cooling system | SEN01899-00 |
| Power train system | SEN01900-00 |
| Undercarriage and frame | SEN01901-01 |
| Hydraulic system, Part 1 | SEN01902-00 |
| Hydraulic system, Part 2 | SEN01903-00 |
| Hydraulic system, Part 3 | SEN01967-00 |
| Work equipment | SEN01904-00 |
| Cab and its attachments | SEN01905-00 |
| Electrical system | SEN01906-01 |
| 20 Standard value table | SEN01907-00 |
| Standard service value table | SEN02107-00 |
| 30 Testing and adjusting | SEN01908-03 |
| Testing and adjusting, Part 1 | SEN02108-02 |
| Testing and adjusting, Part 2 | SEN02109-03 ● |
| Testing and adjusting, Part 3 | SEN02110-02 |
| 40 Troubleshooting | SEN01909-03 |
| Failure code table and fuse locations | SEN02111-00 |
| General information on troubleshooting | SEN02112-02 |
| Troubleshooting by failure code, Part 1 | SEN02113-00 |
| Troubleshooting by failure code, Part 2 | SEN02114-01 ● |
| Troubleshooting by failure code, Part 3 | SEN02115-00 |
| Troubleshooting by failure code, Part 4 | SEN02116-00 |
| Troubleshooting of electrical system (E-mode) | SEN02117-00 |

| | |
|---|---------------|
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN02118-00 |
| Troubleshooting of engine (S-mode) | SEN02119-02 |
| 50 Disassembly and assembly | SEN01910-03 |
| General information on disassembly and assembly | SEN02447-02 |
| Engine and cooling system | SEN02448-03 ● |
| Power train | SEN02449-01 |
| Undercarriage and frame | SEN02450-01 |
| Hydraulic system | SEN02451-00 |
| Work equipment Body | SEN02452-01 |
| Cab and its attachments | SEN02453-02 |
| Electrical system | SEN02454-01 |
| 90 Diagrams and drawings | SEN01911-01 |
| Hydraulic diagrams and drawings | SEN01912-00 |
| Electrical diagrams and drawings | SEN01913-01 |

Table of contents

| | |
|---|-------------|
| 00 Index and foreword | |
| Index | SEN01894-05 |
| Composition of shop manual | 2 |
| Table of contents | 4 |
| Foreword and general information | SEN01895-02 |
| Safety notice | 2 |
| How to read the shop manual | 7 |
| Explanation of terms for maintenance standard | 9 |
| Handling of electric equipment and hydraulic component | 11 |
| Handling of connectors newly used for engines | 20 |
| How to read electric wire code | 23 |
| Precautions when carrying out operation | 26 |
| Method of disassembling and connecting push-pull type coupler | 29 |
| Standard tightening torque table | 32 |
| Conversion table | 36 |
| 01 Specification | |
| Specification and technical data | SEN01897-00 |
| Specification dimension drawings | 2 |
| Specifications | 4 |
| Weight table | 6 |
| Table of fuel, coolant and lubricants | 8 |
| 10 Structure, function and maintenance standard | |
| Engine and cooling system | SEN01899-00 |
| Engine related parts | 2 |
| Radiator, oil cooler, aftercooler and fuel cooler | 3 |
| Power train system | SEN01900-00 |
| Power train | 2 |
| Swing circle | 3 |
| Swing machinery | 4 |
| Final drive | 6 |
| Sprocket | 8 |
| Undercarriage and frame | SEN01901-01 |
| Track frame, recoil spring | 2 |
| Idler | 4 |
| Carrier roller | 6 |
| Track roller | 7 |
| Track shoe | 8 |
| Hydraulic system, Part 1 | SEN01902-00 |
| Hydraulic equipment layout drawing | 2 |
| Hydraulic tank | 4 |
| Hydraulic pump | 6 |
| Hydraulic system, Part 2 | SEN01903-00 |
| Control valve | 2 |
| CLSS | 16 |
| Functions and operation by valve | 20 |
| Hydraulic system, Part 3 | SEN01967-00 |
| Valve control | 2 |
| PPC valve | 3 |
| Solenoid valve | 20 |
| Accumulator | 22 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$