

Shop Manual



PC160LC-8

HYDRAULIC
EXCAVATOR

PC160LC-8

SERIAL NUMBERS PC160LC-8 C20001 and up

ecot3

KOMATSU

©2007 KOMATSU
All Right Reserved
Printed in Thailand

KOMATSU

HYDRAULIC EXCAVATOR

PC160LC-8

Machine model Serial number

PC160LC-8 C20001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04566-01
00 Index and foreword	SEN04567-01
100 Index	SEN04568-01 ●
200 Foreword and general information	SEN04569-01 ●
01 Specification	SEN04570-00
100 Specification and technical data	SEN04571-00
10 Structure, function and maintenance standard	SEN04572-00
100 Engine and cooling system	SEN04573-00
200 Power train system	SEN04574-00
300 Undercarriage and frame	SEN04575-00
401 Hydraulic system, Part 1	SEN04576-00
402 Hydraulic system, Part 2	SEN04577-00
403 Hydraulic system, Part 3	SEN04578-00
500 Work equipment	SEN04579-00
600 Cab and its attachments	SEN04580-00
700 Electrical system	SEN04581-00
20 Standard value table	SEN04582-00
100 Standard service value table	SEN04790-00 ○
30 Testing and adjusting	SEN04583-00
101 Testing and adjusting, Part 1	SEN04791-00 ○
102 Testing and adjusting, Part 2	SEN04792-00 ○
103 Testing and adjusting, Part 3	SEN04793-00 ○
40 Troubleshooting	SEN04584-00
100 Failure code table and fuse locations	SEN04794-00 ○
200 General information on troubleshooting	SEN04795-00 ○
301 Troubleshooting by failure code, Part 1	SEN04796-00 ○
302 Troubleshooting by failure code, Part 2	SEN04797-00 ○
303 Troubleshooting by failure code, Part 3	SEN04798-00 ○
304 Troubleshooting by failure code, Part 4	SEN04799-00 ○
400 Troubleshooting of electrical system (E-mode)	SEN04800-00 ○

500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04801-00 ○
600 Troubleshooting of engine (S-mode)	SEN04802-00 ○
50 Disassembly and assembly	SEN04585-00
100 General information on disassembly and assembly	SEN04758-00 ○
200 Engine and cooling system	SEN04759-00 ○
300 Power train	SEN04760-00 ○
400 Undercarriage and frame	SEN04761-00 ○
500 Hydraulic system	SEN04762-00 ○
600 Work equipment Body	SEN04763-00 ○
700 Cab and its attachments	SEN04764-00 ○
800 Electrical system	SEN04765-00 ○
90 Diagrams and drawings	SEN04586-01
100 Hydraulic diagrams and drawings	SEN04587-00
200 Electrical diagrams and drawings	SEN04588-01 ●

Table of contents

00 Index and foreword	
100 Index	SEN04568-01
Composition of shop manual.....	2
Table of contents	4
200 Foreword and general information	SEN04569-00
Safety notice.....	2
How to read the shop manual	7
Explanation of terms for maintenance standard.....	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines.....	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36
01 Specification	
100 Specification and technical data	SEN04571-00
Specification dimension drawings	2
Specifications	4
Weight table	6
Table of fuel, coolant and lubricants.....	8
10 Structure, function and maintenance standard	
100 Engine and cooling system	SEN04573-00
Engine related parts	2
Radiator, oil cooler, aftercooler and fuel cooler	3
200 Power train system	SEN04574-00
Power train	2
Swing circle	3
Swing machinery.....	4
Final drive.....	6
Sprocket	8
300 Undercarriage and frame	SEN04575-00
Track frame, recoil spring.....	2
Idler	4
Carrier roller	6
Track roller.....	7
Track shoe.....	8
401 Hydraulic system, Part 1	SEN04576-00
Hydraulic equipment layout drawing	2
Hydraulic tank.....	4
Hydraulic pump	6
402 Hydraulic system, Part 2	SEN04577-00
Control valve	2
CLSS.....	16
Functions and operation by valve.....	20
403 Hydraulic system, Part 3	SEN04578-00
Valve control.....	2
PPC valve.....	3
Solenoid valve	24
Accumulator	26

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$