

Shop Manual

HYDRAULIC
EXCAVATOR

PC20MR-3

SERIAL NUMBERS 20001 and up

KOMATSU

HYDRAULIC EXCAVATOR

PC20MR-3

| Machine model | Serial number |
|---------------|---------------|
| PC20MR-3 | 20001 and up |

00 Index and foreword

100 Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 3 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN04767-05 |
| 00 Index and foreword | SEN04768-05 |
| 100 Index | SEN04769-05 ● |
| 200 Foreword and general information | SEN04770-00 |
| 01 Specification | SEN04771-00 |
| 100 Specification and technical data | SEN04772-00 |
| 10 Structure, function and maintenance standard | SEN04773-01 |
| 100 Engine and cooling system | SEN04774-00 |
| 200 Power train | SEN04775-00 |
| 300 Undercarriage and frame | SEN04776-00 |
| 410 Hydraulic system, Part 1 | SEN04777-00 |
| 420 Hydraulic system, Part 2 | SEN04778-00 |
| 430 Hydraulic system, Part 3 | SEN04779-00 |
| 500 Work equipment | SEN04780-00 |
| 600 Cab and its attachments | SEN04781-00 |
| 700 Electrical system | SEN04782-01 ● |
| 20 Standard value table | SEN04783-01 |
| 100 Standard service value table | SEN04867-01 |
| 30 Testing and adjusting | SEN04784-01 |
| 100 Testing and adjusting | SEN04868-01 ● |
| 40 Troubleshooting | SEN04785-01 |
| 100 General information on troubleshooting | SEN04869-00 |
| 200 Troubleshooting of electrical system (E-mode) | SEN04870-00 |
| 300 Troubleshooting of hydraulic and mechanical system (H-mode) | SEN04871-00 |
| 400 Troubleshooting of engine (S-mode) | SEN04872-00 |
| 500 Troubleshooting of Machine monitor System(M-mode) | SEN04873-01 |
| 50 Disassembly and assembly | SEN04786-02 |
| 100 General information on disassembly and assembly | SEN04874-00 |
| 200 Engine and cooling system | SEN04875-00 |

| | |
|---|---------------|
| 300 Power train | SEN04876-00 |
| 400 Undercarriage and frame | SEN04877-00 |
| 500 Hydraulic system | SEN04878-00 |
| 600 Work equipment | SEN04879-01 |
| 700 Cab and its attachments..... | SEN04880-00 |
| 800 Electrical system | SEN04881-01 ● |
| 90 Diagrams and drawings..... | SEN04787-01 |
| 100 Hydraulic diagrams and drawings | SEN04788-00 |
| 200 Electrical diagrams and drawings..... | SEN04789-01 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$