

# SHOP

# MANUAL

# KOMATSU

# PC20MRX-1

MACHINE MODEL

SERIAL NUMBER

**PC20MRX-1**

**10001 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- PC20MRX-1 mount the 3D74E-N3A engine.  
For details of the engine, see the 68E-88E Series Engine Shop Manual.

# CONTENTS

	No. of page
01 GENERAL .....	01-1
10 STRUCTURE AND FUNCTION .....	10-1
20 TESTING AND ADJUSTING .....	20-1
30 DISASSEMBLY AND ASSEMBLY .....	30-1
40 MAINTENANCE STANDARD .....	40-1
90 OTHERS .....	90-1

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action required
○	Page to be newly added	Add
●	Page to be replaced	Replace
( )	Page to be deleted	Discard

Pages having no marks are those previously revised or made additions.

### LIST OF REVISED PAGES

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
●	00-1	②		10-6	①		10-49	①		10-96	①		20-122	
	00-2	①		10-7	①		10-50	①		10-97	①		20-123	
●	00-2-1	②		10-8	①		10-51	①		10-98	①		20-124	
●	00-2-2	②		10-9	①		10-52	①		10-99	①		20-201	
	00-3			10-10	①		10-53	①		10-100	①		20-202	
	00-4			10-12	①		10-54	①		10-101	①		20-203	
	00-5			10-13	①		10-55	①		10-102	①		20-204	
	00-6			10-14	①		10-56	①					20-205	
	00-7			10-16	①		10-57	①		20-1			20-206	
	00-8			10-17	①		10-58	①		20-2			20-207	
	00-9			10-18	①		10-59	①		20-3			20-208	
	00-10			10-19	①		10-60	①		20-4			20-209	
	00-11			10-20	①		10-62	①		20-5			20-210	
	00-12			10-21	①		10-63	①		20-6			20-211	
	00-13			10-22	①		10-64	①		20-7			20-212	
	00-14			10-23	①		10-66	①		20-8			20-213	
	00-15			10-24	①		10-67	①		20-9			20-214	
	00-16			10-25	①		10-68	①		20-10			20-215	
	00-17			10-26	①		10-70	①		20-11			20-216	
	00-18			10-27	①		10-71	①		20-12			20-217	
	00-19			10-28	①		10-72	①		20-101			20-218	
	00-20			10-29	①		10-74	①		20-102			20-219	
	00-21			10-30	①		10-75	①		20-103			20-220	
	00-22			10-31	①		10-76	①		20-104			20-221	
				10-32	①		10-77	①		20-105			20-222	
	01-1			10-33	①		10-78	①		20-106			20-223	
	01-2			10-34	①		10-79	①		20-107			20-224	
	01-3			10-35	①		10-80	①		20-108			20-301	
	01-4			10-36	①		10-81	①		20-109			20-302	
	01-5			10-37	①		10-82	①		20-110			20-303	
	01-6			10-38	①		10-83	①		20-111			20-304	
	01-7			10-39	①		10-84	①		20-112			20-305	
	01-8			10-40	①		10-85	①		20-113			20-306	
	01-9			10-41	①		10-86	①		20-114			20-307	
	01-10			10-42	①		10-87	①		20-115			20-308	
				10-43	①		10-88	①		20-116	①		20-309	
	10-1	①		10-44	①		10-89	①		20-117			20-310	
	10-2	①		10-45	①		10-90	①		20-118			20-311	
	10-3	①		10-46	①		10-92	①		20-119			20-312	
	10-4	①		10-47	①		10-93	①		20-120			20-401	
	10-5	①		10-48	①		10-94	①		20-121			20-402	


Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
	20-403			30-20	①		30-63	①		40-17	①			
	20-404			30-21	①		30-64	①		40-18	①			
	20-405			30-22	①		30-65	①		40-19	①			
	20-406			30-23	①		30-66	①		40-20	①			
	20-407			30-24	①		30-67	①		40-21	①			
	20-408			30-25	①		30-68	①		40-22	①			
	20-409			30-26	①		30-69	①		40-23	①			
	20-410			30-27	①		30-70	①		40-24	①			
	20-411			30-28	①		30-71	①		40-25	①			
	20-412			30-29	①		30-72	①		40-26	①			
	20-413		○	30-29-1	②		30-73	①		40-27	①			
	20-414		○	30-29-2	②		30-74	①		40-28	①			
	20-415		○	30-29-3	②		30-75	①		40-29	①			
	20-416		○	30-29-4	②		30-76	①						
	20-417		○	30-29-5	②		30-77	①		90-1				
	20-418		○	30-29-6	②		30-78	①		90-3				
	20-419		○	30-29-7	②		30-79	①		90-5				
	20-420		○	30-29-8	②		30-80	①						
	20-501		○	30-29-9	②		30-81	①						
	20-502		○	30-29-10	②		30-82	①						
	20-503		○	30-29-11	②		30-83	①						
	20-504		●	30-30	①		30-84	①						
	20-505			30-31	①		30-85	①						
	20-506			30-32	①		30-86	①						
	20-507			30-33	①		30-87	①						
	20-508			30-34	①		30-88	①						
	20-509			30-35	①		30-89	①						
	20-510			30-36	①		30-90	①						
	20-511			30-37	①		30-91	①						
	20-512			30-38	①		30-92	①						
	20-513			30-39	①		30-93	①						
	20-514			30-40	①		30-94	①						
	20-515			30-41	①		30-95	①						
	20-516			30-42	①		30-96	①						
				30-43	①		30-97	①						
●	30-1	②		30-44	①		30-98	①						
●	30-2	②		30-45	①		30-99	①						
	30-3	①		30-46	①		30-100	①						
	30-4	①		30-47	①									
	30-5	①		30-48	①		40-1	①						
	30-6	①		30-49	①		40-2	①						
	30-7	①		30-50	①		40-3	①						
	30-8	①		30-51	①		40-4	①						
	30-9	①		30-52	①		40-5	①						
	30-10	①		30-53	①		40-7	①						
	30-11	①		30-54	①		40-8	①						
	30-12	①		30-55	①		40-9	①						
	30-13	①		30-56	①		40-10	①						
	30-14	①		30-57	①		40-11	①						
	30-15	①		30-58	①		40-12	①						
	30-16	①		30-59	①		40-13	①						
	30-17	①		30-60	①		40-14	①						
	30-18	①		30-61	①		40-15	①						
	30-19	①		30-62	①		40-16	①						

# SAFETY

## SAFETY NOTICE

### IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

### GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
  - Always wear safety glasses when hitting parts with a hammer.
  - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, hand shield, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.
6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

### PREPARATIONS FOR WORK

7. Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$