

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC210 -11

PC210LC-11

PC210NLC-11

PC230NHD-11

SERIAL NUMBERS 500007 and up

K70001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD 00-1

 ABBREVIATION LIST 00-19

 FOREWORD, SAFETY, BASIC INFORMATION 00-25

 HOW TO READ THE SHOP MANUAL 00-25

 SAFETY NOTICE FOR OPERATION 00-27

 PRECAUTIONS TO PREVENT FIRE 00-35

 ACTIONS IF FIRE OCCURS 00-37

 PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS 00-38

 ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS 00-39

 PRECAUTIONS FOR DEF 00-40

 STORE AdBlue/DEF 00-41

 PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT 00-42

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS 00-45

 PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT 00-52

 PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT 00-54

 PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT 00-55

 PRACTICAL USE OF KOMTRAX 00-56

 DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER 00-57

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS 00-61

 METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR 00-65

 METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR 00-66

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-68

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-69

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .
..... 00-71

 HOW TO READ ELECTRICAL WIRE CODE 00-72

 EXPLANATION OF TERMS FOR MAINTENANCE STANDARD 00-76

 STANDARD TIGHTENING TORQUE TABLE 00-79

 CONVERSION TABLE 00-86

01 SPECIFICATIONS 01-1

 CONTENTS 01-2

 ABBREVIATION LIST 01-3

 SPECIFICATIONS 01-9

 SPECIFICATION DRAWING 01-9

 WORKING RANGE DRAWINGS 01-10

 SPECIFICATIONS 01-11

 WEIGHT TABLE 01-14

 TABLE OF FUEL, COOLANT, AND LUBRICANTS 01-16

10 STRUCTURE AND FUNCTION 10-1

 CONTENTS 10-2

 ABBREVIATION LIST 10-6

 UREA SCR SYSTEM 10-12

 LAYOUT DRAWING OF UREA SCR SYSTEM 10-13

 UREA SCR SYSTEM DIAGRAM 10-18

 FUNCTION OF UREA SCR SYSTEM 10-19

 COMPONENT PARTS OF UREA SCR SYSTEM 10-29

 BOOT-UP SYSTEM 10-38

 LAYOUT DRAWING OF BOOT-UP SYSTEM 10-38

 SYSTEM OPERATING LAMP SYSTEM 10-40

 BATTERY DISCONNECT SWITCH 10-41

 ENGINE SYSTEM 10-42

 LAYOUT DRAWING OF ENGINE SYSTEM 10-42

 ENGINE CONTROL SYSTEM 10-44

 AUTO-DECELERATION SYSTEM 10-47

 ENGINE AUTOMATIC WARM-UP SYSTEM 10-49

 OVERHEAT PREVENTION SYSTEM 10-51

TURBOCHARGER PROTECTION SYSTEM	10-54
AUTOMATIC IDLE STOP SYSTEM	10-56
COMPONENT PARTS OF ENGINE SYSTEM	10-59
COOLING SYSTEM.....	10-76
LAYOUT DRAWING OF COOLING SYSTEM	10-76
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-78
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-80
COMPONENT PARTS OF COOLING SYSTEM.....	10-82
CONTROL SYSTEM.....	10-83
LAYOUT DRAWING OF CONTROL SYSTEM	10-83
MACHINE MONITOR SYSTEM	10-86
KOMTRAX SYSTEM.....	10-87
PPC LEVERS	10-88
AUTOMATIC GREASE SYSTEM	10-90
COMPONENT PARTS OF CONTROL SYSTEM.....	10-105
SENSOR.....	10-135
HYDRAULIC SYSTEM.....	10-139
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-139
CLSS	10-145
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-163
PUMP AND VALVE CONTROL SYSTEM	10-169
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-172
WORK EQUIPMENT SYSTEM	10-257
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-257
STRUCTURE OF VALVE CONTROL	10-262
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-264
PPC LOCK SYSTEM	10-266
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-267
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-270
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-273
SWING SYSTEM.....	10-296
LAYOUT DRAWING OF SWING SYSTEM	10-296
SWING CONTROL SYSTEM DIAGRAM	10-300
COMPONENT PARTS OF SWING SYSTEM.....	10-304
TRAVEL SYSTEM.....	10-318
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-318
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-322
COMPONENT PARTS OF TRAVEL SYSTEM	10-324
UNDERCARRIAGE AND FRAME.....	10-345
LAYOUT DRAWING OF UNDERCARRIAGE	10-345
WORK EQUIPMENT.....	10-347
STRUCTURE OF WORK EQUIPMENT	10-347
FUNCTION OF WORK EQUIPMENT	10-348
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-349
BUCKET CLEARANCE ADJUSTMENT SHIM	10-350
CAB AND ITS ATTACHMENTS	10-351
ROPS CAB	10-351
CAB MOUNT	10-352
CAB TIPPING STOPPER	10-353
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-10
STANDARD VALUE TABLE FOR MACHINE: PC210-11, PC210LC-11.....	20-10
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-23
STANDARD VALUE TABLE FOR ELECTRICAL	20-27
STANDARD VALUE TABLE FOR ELECTRICAL	20-27

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$