

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC210 -11E0

PC210LC -11E0

PC210NLC-11E0

PC230NHD-11E0

SERIAL NUMBERS K75001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL	00-26
SAFETY NOTICE FOR OPERATION	00-28
PRECAUTIONS TO PREVENT FIRE	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-40
PRECAUTIONS FOR DEF	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-18
FUNCTION OF UREA SCR SYSTEM	10-19
COMPONENT PARTS OF UREA SCR SYSTEM	10-29
BOOT-UP SYSTEM	10-38
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-38
SYSTEM OPERATING LAMP SYSTEM	10-40
BATTERY DISCONNECT SWITCH	10-42
ENGINE SYSTEM	10-43
LAYOUT DRAWING OF ENGINE SYSTEM	10-43
ENGINE CONTROL SYSTEM	10-45
AUTO-DECELERATION SYSTEM	10-48
ENGINE AUTOMATIC WARM-UP SYSTEM	10-50
OVERHEAT PREVENTION SYSTEM	10-52

TURBOCHARGER PROTECTION SYSTEM	10-55
AUTOMATIC IDLE STOP SYSTEM	10-57
COMPONENT PARTS OF ENGINE SYSTEM	10-60
COOLING SYSTEM.....	10-78
LAYOUT DRAWING OF COOLING SYSTEM	10-78
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-80
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-82
COMPONENT PARTS OF COOLING SYSTEM.....	10-84
CONTROL SYSTEM.....	10-85
LAYOUT DRAWING OF CONTROL SYSTEM	10-85
MACHINE MONITOR SYSTEM	10-88
KomVision SYSTEM	10-89
KOMTRAX SYSTEM.....	10-103
PPC LEVERS	10-104
AUTOMATIC GREASE SYSTEM.....	10-106
COMPONENT PARTS OF CONTROL SYSTEM.....	10-121
SENSOR.....	10-156
HYDRAULIC SYSTEM.....	10-159
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-159
CLSS	10-165
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-183
PUMP AND VALVE CONTROL SYSTEM	10-189
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-192
WORK EQUIPMENT SYSTEM	10-277
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-277
STRUCTURE OF VALVE CONTROL.....	10-282
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-284
PPC LOCK SYSTEM	10-286
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-287
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-289
TOOL CONTROL SYSTEM	10-292
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-294
SWING SYSTEM.....	10-323
LAYOUT DRAWING OF SWING SYSTEM	10-323
SWING CONTROL SYSTEM DIAGRAM	10-327
COMPONENT PARTS OF SWING SYSTEM.....	10-331
TRAVEL SYSTEM.....	10-345
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-345
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-349
COMPONENT PARTS OF TRAVEL SYSTEM	10-351
UNDERCARRIAGE AND FRAME.....	10-372
LAYOUT DRAWING OF UNDERCARRIAGE	10-372
WORK EQUIPMENT.....	10-374
STRUCTURE OF WORK EQUIPMENT	10-374
FUNCTION OF WORK EQUIPMENT	10-375
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-376
BUCKET CLEARANCE ADJUSTMENT SHIM	10-377
CAB AND ITS ATTACHMENTS	10-378
ROPS CAB	10-378
CAB MOUNT	10-379
CAB TIPPING STOPPER	10-380
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC210-11E0, PC210LC-11E0, PC210NLC-11E0, PC230NHD-11E0	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-14

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$