

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC210 -11E0

PC210LC -11E0

PC210NLC-11E0

PC230NHD-11E0

SERIAL NUMBERS

PC210-11E0 - K75001 ~ K75349

PC210LC-11E0 - K75001 ~ K75349

PC210NLC-11E0 - K75001 ~ K75209

PC230NHD-11E0 - K75001 ~ K75007

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD 00-1

 ABBREVIATION LIST 00-20

 FOREWORD, SAFETY, BASIC INFORMATION 00-26

 HOW TO READ THE SHOP MANUAL 00-26

 SAFETY NOTICE FOR OPERATION 00-28

 PRECAUTIONS TO PREVENT FIRE 00-36

 ACTIONS IF FIRE OCCURS 00-38

 PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS 00-39

 ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS 00-40

 METHOD FOR CHECKING ENGINE TYPE 00-41

 PRECAUTIONS FOR DEF 00-43

 STORE AdBlue/DEF 00-44

 PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT 00-45

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS 00-48

 PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT 00-55

 PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT 00-57

 PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT 00-58

 PRACTICAL USE OF KOMTRAX 00-59

 DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER 00-60

 PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS 00-64

 METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR 00-68

 METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR 00-69

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ... 00-71

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH .. 00-72

 METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .
..... 00-74

 HOW TO READ ELECTRICAL WIRE CODE 00-75

 EXPLANATION OF TERMS FOR MAINTENANCE STANDARD 00-79

 STANDARD TIGHTENING TORQUE TABLE 00-82

 CONVERSION TABLE 00-89

01 SPECIFICATIONS 01-1

 CONTENTS 01-2

 ABBREVIATION LIST 01-3

 SPECIFICATIONS 01-9

 SPECIFICATION DRAWING 01-9

 WORKING RANGE DRAWINGS 01-11

 SPECIFICATIONS 01-12

 WEIGHT TABLE 01-16

 TABLE OF FUEL, COOLANT, AND LUBRICANTS 01-18

10 STRUCTURE AND FUNCTION 10-1

 CONTENTS 10-2

 ABBREVIATION LIST 10-6

 UREA SCR SYSTEM 10-12

 LAYOUT DRAWING OF UREA SCR SYSTEM 10-13

 UREA SCR SYSTEM DIAGRAM 10-18

 FUNCTION OF UREA SCR SYSTEM 10-19

 COMPONENT PARTS OF UREA SCR SYSTEM 10-40

 BOOT-UP SYSTEM 10-49

 LAYOUT DRAWING OF BOOT-UP SYSTEM 10-49

 SYSTEM OPERATING LAMP SYSTEM 10-51

 BATTERY DISCONNECT SWITCH 10-53

 ENGINE SYSTEM 10-54

 LAYOUT DRAWING OF ENGINE SYSTEM 10-54

 ENGINE CONTROL SYSTEM 10-56

 AUTO-DECELERATION SYSTEM 10-59

 ENGINE AUTOMATIC WARM-UP SYSTEM 10-61

| | |
|---|--------|
| OVERHEAT PREVENTION SYSTEM | 10-63 |
| TURBOCHARGER PROTECTION SYSTEM | 10-66 |
| AUTOMATIC IDLE STOP SYSTEM | 10-68 |
| COMPONENT PARTS OF ENGINE SYSTEM | 10-71 |
| COOLING SYSTEM..... | 10-89 |
| LAYOUT DRAWING OF COOLING SYSTEM | 10-89 |
| FAN SPEED CONTROL SYSTEM OF FAN CLUTCH | 10-91 |
| ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH | 10-93 |
| COMPONENT PARTS OF COOLING SYSTEM..... | 10-95 |
| CONTROL SYSTEM..... | 10-96 |
| LAYOUT DRAWING OF CONTROL SYSTEM | 10-96 |
| MACHINE MONITOR SYSTEM | 10-99 |
| KomVision SYSTEM | 10-100 |
| KOMTRAX SYSTEM..... | 10-114 |
| KOMTRAX TERMINAL | 10-115 |
| PPC LEVERS | 10-117 |
| AUTOMATIC GREASE SYSTEM | 10-119 |
| COMPONENT PARTS OF CONTROL SYSTEM..... | 10-134 |
| SENSOR..... | 10-167 |
| HYDRAULIC SYSTEM..... | 10-170 |
| LAYOUT DRAWING OF HYDRAULIC SYSTEM | 10-170 |
| CLSS | 10-176 |
| ENGINE AND PUMP COMBINED CONTROL SYSTEM..... | 10-195 |
| PUMP AND VALVE CONTROL SYSTEM | 10-201 |
| COMPONENT PARTS OF HYDRAULIC SYSTEM | 10-204 |
| WORK EQUIPMENT SYSTEM | 10-289 |
| LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM | 10-289 |
| STRUCTURE OF VALVE CONTROL | 10-294 |
| ONE-TOUCH POWER MAXIMIZING SYSTEM | 10-296 |
| PPC LOCK SYSTEM | 10-298 |
| WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM | 10-299 |
| OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT..... | 10-301 |
| TOOL CONTROL SYSTEM | 10-304 |
| COMPONENT PARTS OF WORK EQUIPMENT SYSTEM..... | 10-306 |
| SWING SYSTEM..... | 10-335 |
| LAYOUT DRAWING OF SWING SYSTEM | 10-335 |
| SWING CONTROL SYSTEM DIAGRAM | 10-339 |
| COMPONENT PARTS OF SWING SYSTEM..... | 10-343 |
| TRAVEL SYSTEM..... | 10-358 |
| LAYOUT DRAWING OF TRAVEL SYSTEM..... | 10-358 |
| TRAVEL CONTROL SYSTEM DIAGRAM..... | 10-362 |
| COMPONENT PARTS OF TRAVEL SYSTEM | 10-364 |
| UNDERCARRIAGE AND FRAME..... | 10-385 |
| LAYOUT DRAWING OF UNDERCARRIAGE | 10-385 |
| WORK EQUIPMENT..... | 10-387 |
| STRUCTURE OF WORK EQUIPMENT | 10-387 |
| FUNCTION OF WORK EQUIPMENT | 10-388 |
| WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM..... | 10-389 |
| BUCKET CLEARANCE ADJUSTMENT SHIM | 10-390 |
| CAB AND ITS ATTACHMENTS | 10-391 |
| ROPS CAB | 10-391 |
| CAB MOUNT | 10-392 |
| CAB TIPPING STOPPER | 10-393 |
| 20 STANDARD VALUE TABLE | 20-1 |
| CONTENTS | 20-2 |
| ABBREVIATION LIST | 20-3 |
| STANDARD VALUE TABLE FOR ENGINE | 20-9 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$