

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC210 -11E0

PC210LC -11E0

PC210NLC-11E0

PC230NHD-11E0

SERIAL NUMBERS

PC210-11E0 - K75350 and up

PC210LC-11E0 - K75350 and up

PC210NLC-11E0 - K75210 and up

PC230NHD-11E0 - K75008 and up

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL.....	00-26
SAFETY NOTICE FOR OPERATION.....	00-28
PRECAUTIONS TO PREVENT FIRE.....	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-40
METHOD FOR CHECKING ENGINE TYPE	00-41
PRECAUTIONS FOR DEF.....	00-43
STORE AdBlue/DEF	00-44
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-45
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-48
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-55
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-57
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-58
PRACTICAL USE OF KOMTRAX	00-59
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-60
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-64
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-68
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-71
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-72
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-74
HOW TO READ ELECTRICAL WIRE CODE	00-75
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-79
STANDARD TIGHTENING TORQUE TABLE.....	00-82
CONVERSION TABLE	00-89
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-16
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-18
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-13
UREA SCR SYSTEM DIAGRAM	10-18
FUNCTION OF UREA SCR SYSTEM.....	10-19
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-40
BOOT-UP SYSTEM.....	10-49
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-49
SYSTEM OPERATING LAMP SYSTEM	10-51
BATTERY DISCONNECT SWITCH	10-52
ENGINE SYSTEM	10-53
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-53
ENGINE CONTROL SYSTEM	10-55
AUTO-DECELERATION SYSTEM.....	10-58
ENGINE AUTOMATIC WARM-UP SYSTEM.....	10-60

OVERHEAT PREVENTION SYSTEM	10-62
TURBOCHARGER PROTECTION SYSTEM	10-65
AUTOMATIC IDLE STOP SYSTEM	10-67
COMPONENT PARTS OF ENGINE SYSTEM	10-70
COOLING SYSTEM.....	10-88
LAYOUT DRAWING OF COOLING SYSTEM	10-88
FAN SPEED CONTROL SYSTEM OF FAN CLUTCH	10-90
ENGINE OUTPUT CONTROL SYSTEM OF FAN CLUTCH.....	10-92
COMPONENT PARTS OF COOLING SYSTEM.....	10-94
CONTROL SYSTEM.....	10-95
LAYOUT DRAWING OF CONTROL SYSTEM	10-95
MACHINE MONITOR SYSTEM	10-98
KomVision SYSTEM	10-99
KOMTRAX SYSTEM.....	10-113
PPC LEVERS	10-114
AUTOMATIC GREASE SYSTEM.....	10-116
COMPONENT PARTS OF CONTROL SYSTEM.....	10-131
SENSOR.....	10-169
HYDRAULIC SYSTEM.....	10-172
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-172
CLSS	10-178
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-197
PUMP AND VALVE CONTROL SYSTEM	10-203
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-206
WORK EQUIPMENT SYSTEM	10-291
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-291
STRUCTURE OF VALVE CONTROL.....	10-296
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-298
PPC LOCK SYSTEM	10-300
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-301
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-303
TOOL CONTROL SYSTEM	10-306
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-308
SWING SYSTEM.....	10-337
LAYOUT DRAWING OF SWING SYSTEM	10-337
SWING CONTROL SYSTEM DIAGRAM	10-341
COMPONENT PARTS OF SWING SYSTEM.....	10-345
TRAVEL SYSTEM.....	10-360
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-360
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-364
COMPONENT PARTS OF TRAVEL SYSTEM	10-366
UNDERCARRIAGE AND FRAME.....	10-387
LAYOUT DRAWING OF UNDERCARRIAGE	10-387
WORK EQUIPMENT.....	10-389
STRUCTURE OF WORK EQUIPMENT	10-389
FUNCTION OF WORK EQUIPMENT	10-390
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-391
BUCKET CLEARANCE ADJUSTMENT SHIM	10-392
CAB AND ITS ATTACHMENTS	10-393
ROPS CAB	10-393
CAB MOUNT	10-394
CAB TIPPING STOPPER	10-395
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: PC210-11E0, PC210LC-11E0, PC210NLC-11E0, PC230NHD-11E0	20-9

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$