

# Shop Manual



## **KOMATSU**

**PC210-8**

**PC210LC-8**

**PC210NLC-8**

**PC230NHD-8**

**PC240LC-8**

**PC240NLC-8**

SERIAL NUMBERS	PC210-	K50001	and up
	PC210LC-	K50001	
	PC210NLC-	K50001	
	PC230NHD-	K50001	
	PC240LC-	K50001	
	PC240NLC-	K50001	

## **KOMATSU**



# HYDRAULIC EXCAVATOR

**PC210-8**

**PC240LC-8**

**PC210LC-8**

**PC240NLC-8**

**PC210NLC-8**

**PC230NHD-8**

**Machine model      Serial number**

PC210-8	K50001 and up
PC210LC-8	K50001 and up
PC210NLC-8	K50001 and up
PC230NHD-8	K50001 and up
PC240LC-8	K50001 and up
PC240NLC-8	K50001 and up

---

## 00 Index and foreword

### Index

---

---

Organization list of the shop manual .....	2
Table of contents .....	4

## Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00084-07
00 Index and foreword	
Index	UEN00093-07 ●
Foreword and general information	UEN00094-00
01 Specification	
Specification and technical data	UEN00095-02
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00096-01
Power train	UEN00097-00
Undercarriage and frame	UEN00098-00
Hydraulic system, Part 1	UEN00099-01
Hydraulic system, Part 2	UEN00100-00
Hydraulic system, Part 3	UEN00160-04 ●
Work equipment	UEN00101-00
Cab and its attachments	UEN00102-00
Electrical system	UEN00103-03
Auto Grease system	UEN00104-00
20 Standard value table	
Standard service value table	UEN00227-01
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00228-05 ●
Testing and adjusting, Part 2	UEN00229-01
Testing and adjusting, Part 3	UEN00230-00
40 Troubleshooting	
General information on troubleshooting	UEN00231-03
Troubleshooting by failure code (Display of code), Part 1	UEN00240-01
Troubleshooting by failure code (Display of code), Part 2	UEN00241-01
Troubleshooting by failure code (Display of code), Part 3	UEN00242-01
Troubleshooting by failure code (Display of code), Part 4	UEN00243-01
Troubleshooting of electrical system (E-mode)	UEN00244-02

---

Troubleshooting of hydraulic and mechanical system (H-mode)	UEN00245-03 ●
Troubleshooting of engine (S-mode)	UEN00246-02
Troubleshooting of Auto Grease system	UEN00247-00
50 Disassembly and assembly	
Disassembly and assembly related information	UEN00659-00
Engine cooling related	UEN00660-00
Power train	UEN00661-00
Under carriage and frame	UEN00662-00
Hydraulic system	UEN00663-03 ●
Work equipment	UEN00664-00
Cab related	UEN00665-00
Electric components	UEN00666-01
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00112-03
Electrical diagrams and drawings	UEN00113-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$