

Shop Manual

COMPACT
HYDRAULIC
EXCAVATOR

PC25MR-5

SERIAL NUMBERS 25001 and up

KOMATSU

00 Index and Foreword

Index

00 Index and Foreword	00-1
Foreword, Safety, Basic Information	00-8
How to Read the Shop Manual	00-8
Safety Notice for Operation	00-10
Precautions to Prevent Fire	00-18
Procedures If Fire Occurs	00-20
Precautions When You Discard Waste Materials	00-21
Precautions When You Handle Hydraulic Equipment	00-22
Precautions When You Disconnect and Connect Pipings	00-25
Precautions When You Handle Electrical Equipment	00-32
Precautions When You Handle Fuel System Equipment	00-34
Precautions When You Handle Intake System Equipment	00-35
Practical Use of KOMTRAX	00-36
Disconnect and Connect Push-Pull Type Coupler	00-37
Precautions for Disconnection and Connection of Connectors	00-41
Disconnect and Connect Deutsch Connector	00-45
How to Disconnect and Connect Slide Lock Type Connector	00-46
Disconnect and Connect Connector with Lock to Pull	00-48
Disconnect and Connect Connector with Lock to Push	00-49
Disconnect and Connect Connector with Housing to Rotate	00-51
Standard Tightening Torque Table	00-52
Abbreviation List	00-59
01 Specification	01-1
Table of Contents	01-2
Specifications	01-3
Specification Drawing	01-3
Working Range Drawings	01-4
Specifications	01-5
Weight Table	01-10
Fuel, Coolant, Lubricant	01-12
10 Structure and Function	10-1
Table of Contents	10-2
Boot-up System	10-4
Layout Drawing of Boot-up System	10-4
System Operating Lamp System	10-5
Battery Disconnect Switch	10-7
Engine System	10-8
Layout Drawing of Engine System	10-8
Engine Control System	10-9
Component Parts of Engine System	10-11
Cooling System	10-12
Layout Drawing of Cooling System	10-12
Control System	10-14
Layout Drawing of Control System	10-14
Machine Monitor System	10-15
KOMTRAX System	10-16
Component Parts of Control System	10-17
Hydraulic System	10-24
Layout Drawing of Hydraulic System	10-24
CLSS	10-25
Component Parts of Hydraulic System	10-28
Work Equipment System	10-66
Layout Drawing of Work Equipment System	10-66
Structure of Valve Control	10-68
PPC Lock System	10-70
Work Equipment Double Lock System	10-72

Component Parts of Work Equipment System	10-73
Swing System	10-88
Layout Drawing of Swing System.....	10-88
Component Parts of Swing System.....	10-89
Travel System	10-101
Layout Drawing of Travel System.....	10-101
System Diagram of Travel Control System.....	10-103
Component Parts of Travel System.....	10-105
Undercarriage and Frame	10-119
Layout Drawing of Undercarriage.....	10-119
Specifications of Undercarriage	10-120
Idler Cushion.....	10-121
Work Equipment	10-122
Structure of Work Equipment	10-122
Function of Work Equipment.....	10-123
Work Equipment Clearance Adjustment Shim.....	10-124
20 Standard Value Table	20-1
Table of Contents	20-2
Standard Value Table for Engine.....	20-3
Standard Value Table for Engine: PC25MR-5.....	20-3
Standard Value Table for Machine.....	20-5
Standard Value Table for Machine: PC25MR-5	20-5
Gear Pump: PC25MR-5	20-15
Piston Pump PC25MR-5	20-16
Machine Posture and Procedures to Measure Performance	20-17
30 Testing and Adjusting	30-1
Table of Contents	30-2
Related Information on Testing and Adjusting	30-4
Tools for Testing and Adjusting.....	30-4
Engine and Cooling System	30-8
Examine Engine Speed.....	30-8
Examine Exhaust Gas Color	30-13
Examine and Adjust Valve Clearance.....	30-16
Examine Compression Pressure	30-20
Examine Engine Oil Pressure	30-24
Examine and Adjust Fuel Injection Timing.....	30-26
Bleed Air from Fuel System.....	30-29
Examine Fuel Circuit for Leakage	30-30
Examine and Adjust Alternator Belt.....	30-31
Power Train.....	30-33
Examine Swing Circle Bearing Clearance	30-33
Undercarriage and Frame	30-35
Examine and Adjust Track Tension	30-35
Hydraulic System	30-37
Release Remained Pressure in Hydraulic Circuit.....	30-37
Examine and Adjust Oil Pressure in Work Equipment, Travel, and Boom Swing Circuits	30-40
Examine and Adjust Swing and Blade Circuit Oil Pressure	30-48
Examine and Adjust Oil Pressure in Control Circuit.....	30-53
Examine and Adjust Oil Pressure in Pump LS Control Circuit	30-55
Examine Outlet Pressure of Solenoid Valve	30-58
Examine PPC Valve Outlet Pressure.....	30-61
Adjust Play of Work Equipment and Swing PPC Valves	30-65
Examine Swing Parking Brake Release Pressure	30-66
Examine Travel Deviation	30-69
Examine Parts Which Cause Hydraulic Drift of Work Equipment.....	30-70
Examine Oil Leakage	30-72
Bleed Air from Hydraulic System.....	30-78
Pressurize Hydraulic Tank.....	30-80

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$