

Shop Manual

HYDRAULIC
EXCAVATOR

PC27MR-3

PC30MR-3

PC35MR-3

SERIAL NUMBERS

PC27MR-20002

PC30MR-30001

PC35MR-15001

and up

KOMATSU

HYDRAULIC EXCAVATOR

PC27MR-3

PC30MR-3

PC35MR-3

Machine model Serial number

PC27MR-3	20002 and up
PC30MR-3	30001 and up
PC35MR-3	15001 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN04063-08
00 Index and foreword	SEN04064-08
100 Index	SEN04065-08 ●
200 Foreword and general information	SEN04066-02
01 Specification	SEN04067-02
100 Specification and technical data	SEN04068-02
10 Structure, function and maintenance standard	SEN04069-04
100 Engine and cooling system	SEN04070-00
200 Power train	SEN04071-00
300 Undercarriage and frame	SEN04072-00
410 Hydraulic system, Part 1	SEN04073-02
420 Hydraulic system, Part 2	SEN04074-00
430 Hydraulic system, Part 3	SEN04075-02
500 Work equipment	SEN04076-01 ●
600 Cab and its attachments	SEN04077-00
700 Electrical system	SEN04078-01
20 Standard value table	SEN04079-02
100 Standard service value table	SEN04380-02
30 Testing and adjusting	SEN04080-02
100 Testing and adjusting	SEN04381-02
40 Troubleshooting	SEN04081-02
010 Failure code table and failure locations	SEN05815-00
100 General information on troubleshooting	SEN04382-01
110 Troubleshooting by failure code	SEN05816-00
200 Troubleshooting of electrical system (E-mode)	SEN04383-01
300 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN04384-00
400 Troubleshooting of engine (S-mode)	SEN04385-00

50 Disassembly and assembly	SEN04082-02
100 General information on disassembly and assembly	SEN04386-00
200 Engine and cooling system	SEN04387-00
300 Power train	SEN04388-00
400 Undercarriage and frame	SEN04389-00
500 Hydraulic system	SEN04390-00
600 Work equipment	SEN04391-01 ●
700 Cab and its attachments	SEN04392-00
800 Electrical system	SEN04393-01
90 Diagrams and drawings	SEN04083-04
100 Hydraulic diagrams and drawings	SEN04084-01
200 Electrical diagrams and drawings	SEN04085-04 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$