

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC27MR-3**

**PC30MR-3**

**PC35MR-3**

SERIAL NUMBERS

PC27MR-20002

PC30MR-30001

PC35MR-15001

and up

**KOMATSU**



# HYDRAULIC EXCAVATOR

## PC27MR-3

## PC30MR-3

## PC35MR-3

**Machine model      Serial number**

PC27MR-3	20002 and up
PC30MR-3	30001 and up
PC35MR-3	15001 and up

---

## 00 Index and foreword

### 100 Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN04063-10
00 Index and foreword .....	SEN04064-10
100 Index .....	SEN04065-10 ●
200 Foreword and general information .....	SEN04066-02
01 Specification .....	SEN04067-02
100 Specification and technical data.....	SEN04068-02
10 Structure, function and maintenance standard.....	SEN04069-05
100 Engine and cooling system .....	SEN04070-00
200 Power train.....	SEN04071-00
300 Undercarriage and frame .....	SEN04072-00
410 Hydraulic system, Part 1 .....	SEN04073-02
420 Hydraulic system, Part 2 .....	SEN04074-00
430 Hydraulic system, Part 3 .....	SEN04075-02
500 Work equipment.....	SEN04076-01
600 Cab and its attachments .....	SEN04077-00
700 Electrical system .....	SEN04078-02 ●
20 Standard value table.....	SEN04079-02
100 Standard service value table.....	SEN04380-02
30 Testing and adjusting .....	SEN04080-03
100 Testing and adjusting .....	SEN04381-03 ●
40 Troubleshooting.....	SEN04081-03
010 Failure code table and failure locations.....	SEN05815-00
100 General information on troubleshooting.....	SEN04382-01
110 Troubleshooting by failure code .....	SEN05816-00
200 Troubleshooting of electrical system (E-mode).....	SEN04383-02 ●
300 Troubleshooting of hydraulic and mechanical system (H-mode) .....	SEN04384-00
400 Troubleshooting of engine (S-mode).....	SEN04385-00

---

50 Disassembly and assembly .....	SEN04082-03
100 General information on disassembly and assembly.....	SEN04386-00
200 Engine and cooling system .....	SEN04387-00
300 Power train .....	SEN04388-00
400 Undercarriage and frame .....	SEN04389-00
500 Hydraulic system .....	SEN04390-00
600 Work equipment .....	SEN04391-02
700 Cab and its attachments.....	SEN04392-00
800 Electrical system .....	SEN04393-01
90 Diagrams and drawings.....	SEN04083-04
100 Hydraulic diagrams and drawings .....	SEN04084-01
200 Electrical diagrams and drawings.....	SEN04085-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$