

# Shop Manual

**HYDRAULIC  
EXCAVATOR**

**PC290 -11E0**

**PC290LC -11E0**

**PC290NLC-11E0**

**SERIAL NUMBERS K75001 and up**

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-19
FOREWORD, SAFETY, BASIC INFORMATION .....	00-25
HOW TO READ THE SHOP MANUAL .....	00-25
SAFETY NOTICE FOR OPERATION .....	00-27
PRECAUTIONS TO PREVENT FIRE .....	00-35
ACTIONS IF FIRE OCCURS .....	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-39
PRECAUTIONS FOR DEF .....	00-40
STORE AdBlue/DEF .....	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-55
PRACTICAL USE OF KOMTRAX .....	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-71
HOW TO READ ELECTRICAL WIRE CODE .....	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-76
STANDARD TIGHTENING TORQUE TABLE .....	00-79
CONVERSION TABLE .....	00-86
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-6
UREA SCR SYSTEM .....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-13
UREA SCR SYSTEM DIAGRAM .....	10-18
FUNCTION OF UREA SCR SYSTEM .....	10-19
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-29
BOOT-UP SYSTEM .....	10-38
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-38
SYSTEM OPERATING LAMP SYSTEM .....	10-40
BATTERY DISCONNECT SWITCH .....	10-42
ENGINE SYSTEM .....	10-43
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-43
ENGINE CONTROL SYSTEM .....	10-45
AUTO-DECELERATION SYSTEM .....	10-48
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-50
OVERHEAT PREVENTION SYSTEM .....	10-52

TURBOCHARGER PROTECTION SYSTEM .....	10-55
AUTOMATIC IDLE STOP SYSTEM .....	10-57
COMPONENT PARTS OF ENGINE SYSTEM .....	10-60
COOLING SYSTEM.....	10-78
LAYOUT DRAWING OF COOLING SYSTEM .....	10-78
CONTROL SYSTEM.....	10-80
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-80
MACHINE MONITOR SYSTEM .....	10-83
KomVision SYSTEM .....	10-84
KOMTRAX SYSTEM.....	10-88
PPC LEVERS .....	10-89
AUTOMATIC GREASE SYSTEM .....	10-91
COMPONENT PARTS OF CONTROL SYSTEM.....	10-106
HYDRAULIC SYSTEM.....	10-148
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-148
CLSS .....	10-154
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-173
PUMP AND VALVE CONTROL SYSTEM .....	10-179
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-182
WORK EQUIPMENT SYSTEM .....	10-267
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-267
STRUCTURE OF VALVE CONTROL.....	10-272
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-274
PPC LOCK SYSTEM .....	10-276
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-277
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-279
TOOL CONTROL SYSTEM .....	10-282
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-284
SWING SYSTEM.....	10-313
LAYOUT DRAWING OF SWING SYSTEM .....	10-313
SWING CONTROL SYSTEM DIAGRAM .....	10-317
COMPONENT PARTS OF SWING SYSTEM.....	10-321
TRAVEL SYSTEM.....	10-335
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-335
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-339
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-341
UNDERCARRIAGE AND FRAME.....	10-361
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-361
WORK EQUIPMENT.....	10-363
STRUCTURE OF WORK EQUIPMENT .....	10-363
FUNCTION OF WORK EQUIPMENT .....	10-364
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-365
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-366
CAB AND ITS ATTACHMENTS .....	10-367
ROPS CAB .....	10-367
CAB MOUNT .....	10-368
CAB TIPPING STOPPER .....	10-369
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC290LC-11E0, PC290NLC-11E0.....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC290LC-11E0, PC290NLC-11E0 .....	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-26
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-30
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-30
30 TESTING AND ADJUSTING .....	30-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$