

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC290LC-10

PC290NLC-10

**SERIAL NUMBERS 15001 and up
 K60001 and up**

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

PC290LC-10

PC290NLC-10

Model

Serial Number

PC290LC-10 15001 and up, K60001 and up

PC290NLC-10

00 Index and foreword

Index

00 Index and foreword	00-1
Index	00-2
Foreword, safety and general information	00-14
Important safety notice	00-14
How to read the shop manual	00-19
Explanation of terms for maintenance standard	00-21
Handling of fuel system devices	00-23
Handling of intake system parts	00-24
Handling of hydraulic equipment	00-25
Method of disconnecting and connecting push-pull type coupler	00-27
Handling of electrical equipment	00-30
How to read electric wire code	00-38
Precautions when performing operation	00-41
Standard tightening torque table	00-44
List of abbreviation	00-48
Conversion table	00-52
01 Specification	01-1
Table of contents	01-2
Specifications	01-3
Specification drawings	01-3
Working range drawings	01-4
Specifications	01-5
Weight table	01-8
Table of fuel, coolant and lubricants	01-9
10 Structure and function	10-1
Table of contents	10-2
Engine and cooling system	10-3
Engine related parts	10-3
Cooling system	10-5
Power train system	10-7
Power train	10-7
Swing circle	10-9
Swing machinery	10-10
Final drive	10-12
Undercarriage and frame	10-14
Track frame and idler cushion	10-14
Hydraulic system	10-16
Hydraulic equipment layout drawing	10-16
Valve control	10-18
Hydraulic tank	10-19
CLSS	10-21
Main pump	10-26
Control valve	10-50
Swing motor	10-102
Travel motor	10-113
PPC valve	10-127
Solenoid valve	10-148
Attachment circuit selector valve (for low pressure circuit)	10-151
Center swivel joint	10-154
Accumulator	10-156
ATT EPC valve assembly	10-157
Return oil filter	10-159
Quick coupler control valve	10-160
Work equipment	10-163
Work equipment	10-163
Work equipment shim	10-164
Bucket play adjustment shim	10-165
Cab and its attachments	10-166

Cab mount and cab tipping stopper	10-166
ROPS cab	10-167
Electrical system	10-168
Electrical control system	10-168
Machine monitor system	10-212
KOMTRAX system	10-232
Sensors	10-234
PPC levers	10-253
Auto grease system	10-255
20 Standard value table	20-1
Table of contents	20-2
Standard service value table	20-3
Standard value table for engine related parts	20-3
Standard value table for chassis related parts	20-5
30 Testing and adjusting	30-1
Table of contents	30-2
General information on testing and adjusting	30-3
Tools for testing and adjusting	30-3
Sketch of tools for testing and adjusting	30-7
Engine and cooling system	30-9
Checking engine speed	30-9
Measuring boost pressure	30-10
Measuring exhaust gas color	30-11
Measuring and adjusting valve clearance	30-13
Measuring compression pressure	30-16
Measuring blowby pressure	30-20
Measuring engine oil pressure	30-21
Measuring EGR valve and KVGT oil pressure	30-22
Measuring fuel pressure	30-23
Measuring fuel delivery, return and leakage	30-29
Bleeding air from fuel system	30-34
Checking fuel circuit for leakage	30-36
Handling cylinder cutout mode operation	30-37
Handling no injection cranking operation	30-38
Checking and adjusting air conditioner compressor belt tension	30-39
Replacing fan belt	30-40
Power train	30-41
Testing swing circle bearing clearance	30-41
Undercarriage and frame	30-42
Testing and adjusting track shoe tension	30-42
Hydraulic system	30-43
Releasing remaining pressure from hydraulic circuit	30-43
Measuring and adjusting of oil pressure in work equipment, swing, and travel circuits	30-44
Measuring oil pressure in control circuit	30-48
Measuring and adjusting oil pressure in pump PC control circuit	30-49
Measuring and adjusting oil pressure in pump LS control circuit	30-52
Measuring solenoid valve output pressure	30-57
Measuring PPC valve output pressure	30-60
Adjusting play of work equipment and swing PPC valves	30-62
Measuring and adjusting quick coupler control valve output pressure	30-63
Testing pump swash plate sensor	30-64
Isolating the parts causing hydraulic drift in work equipment	30-65
Measuring oil leakage	30-66
Bleeding air from hydraulic circuit	30-69
Cab and its attachments	30-71
Checking cab tipping stopper	30-71
Adjusting mirrors	30-72
Electrical system	30-74
Special functions of machine monitor	30-74

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$