

HYDRAULIC
EXCAVATOR

PC290LC-8
PC290NLC-8

SERIAL NUMBERS PC290LC- K50001
PC290NLC- K50001^{and up}

HYDRAULIC EXCAVATOR

PC290LC-8 PC290NLC-8

Machine model Serial number

PC290LC-8	K50001 and up
PC290NLC-8	K50001 and up

00 Index and foreword

Index

Organization list of the shop manual	2
Table of contents	4

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00001-03 ●
00 Index and foreword	
Index	UEN00002-03 ●
Foreword and general information	UEN00003-00
01 Specification	
Specification and technical data	UEN00004-01 ●
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00005-01 ●
Power train	UEN00006-00
Undercarriage and frame	UEN00007-00
Hydraulic system, Part 1	UEN00008-01
Hydraulic system, Part 2	UEN00009-00
Hydraulic system, Part 3	UEN00010-02 ●
Work equipment	UEN00011-01 ●
Cab and its attachments	UEN00012-00
Electrical system	UEN00013-02 ●
Auto Grease system	UEN00114-00 ○
20 Standard value table	
Standard service value table	UEN00014-01 ●
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00015-01 ●
Testing and adjusting, Part 2	UEN00016-00
Testing and adjusting, Part 3	UEN00017-00
40 Troubleshooting	
General information on troubleshooting	UEN00018-01 ●
Troubleshooting by failure code (Display of code), Part 1	UEN00019-01
Troubleshooting by failure code (Display of code), Part 2	UEN00020-00
Troubleshooting by failure code (Display of code), Part 3	UEN00021-00
Troubleshooting by failure code (Display of code), Part 4	UEN00022-01
Troubleshooting of electrical system (E-mode)	UEN00023-02 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	UEN00024-01

Troubleshooting of engine (S-mode)	UEN00025-01 ●
Troubleshooting of Auto Grease system	UEN00126-00 ○
50 Disassembly and assembly	
General information on disassembly and assembly	UEN00026-00
Engine and cooling system	UEN00027-00
Power train	UEN00028-00
Undercarriage and frame	UEN00029-00
Hydraulic system	UEN00030-00
Work equipment	UEN00031-00
Cab and its attachments	UEN00032-00
Electrical system	UEN00033-00
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00034-01
Electrical diagrams and drawings	UEN00035-02 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$