

Shop Manual

HYDRAULIC
EXCAVATOR

PC300 -7E0

PC300LC-7E0

PC350 -7E0

PC350LC-7E0

SERIAL NUMBERS

PC300,300LC- 50001-50216

PC300,300LC- 55001 and up

PC350,350LC- 30001-30093

PC350,350LC- 55001 and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC300-7E0

PC300LC-7E0

PC350-7E0

PC350LC-7E0

Machine model	Serial number
PC300-7E0	50001 – 50216 55001 and up
PC300LC-7E0	50001 – 50216 55001 and up
PC350-7E0	30001 – 30093 55001 and up
PC350LC-7E0	30001 – 30093 55001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN03537-03
00 Index and foreword	SEN03538-03
Index	SEN03539-03 ●
Foreword and general information	SEN03540-01
01 Specification	SEN03541-00
Specification and technical data	SEN03542-00
10 Structure, function and maintenance standard	SEN03543-02
Engine and cooling system	SEN03544-00
Power train	SEN03545-00
Undercarriage and frame	SEN03546-00
Hydraulic system, Part 1	SEN03547-00
Hydraulic system, Part 2	SEN03548-01 ●
Hydraulic system, Part 3	SEN03549-00
Work equipment	SEN03550-00
Cab and its attachments	SEN03551-00
Electrical system	SEN03552-02 ●
20 Standard value table	SEN03553-01
Standard service value table	SEN03554-01
30 Testing and adjusting	SEN03555-02
Testing and adjusting, Part 1	SEN03556-02
Testing and adjusting, Part 2	SEN03557-01
Testing and adjusting, Part 3	SEN04147-01
40 Troubleshooting	SEN03558-03
Failure code table and fuse locations	SEN04148-02 ●
General information on troubleshooting	SEN03559-03 ●
Troubleshooting by failure code (Display of code), Part 1	SEN03560-02 ●
Troubleshooting by failure code (Display of code), Part 2	SEN03561-01
Troubleshooting by failure code (Display of code), Part 3	SEN03562-01
Troubleshooting of electrical system (E-mode)	SEN03563-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03564-01

Troubleshooting of engine (S-mode)	SEN03565-01
50 Disassembly and assembly	SEN03566-03
General information on disassembly and assembly	SEN03567-03 ●
Engine and cooling system	SEN03568-01
Power train	SEN03569-01
Undercarriage and frame	SEN03570-03 ●
Hydraulic system	SEN03571-01
Work equipment	SEN03572-00
Cab and its attachments	SEN03573-01
Electrical system	SEN03574-01
90 Diagrams and drawings	SEN03575-01
Hydraulic diagrams and drawings	SEN03577-00
Electrical diagrams and drawings	SEN03576-01

Table of contents

00 Index and foreword	
Index	SEN03539-03
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN03540-01
Safety notice	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code.....	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN03542-00
Specification dimension drawings.....	2
Specifications.....	4
Weight table	10
Table of fuel, coolant and lubricants	12
10 Structure, function and maintenance standard	
Engine and cooling system	SEN03544-00
Engine related parts.....	2
Radiator, oil cooler and aftercooler	3
Power train	SEN03545-00
Power train.....	2
Final drive	4
Sprocket.....	6
Swing machinery	8
Swing circle.....	10
Undercarriage and frame	SEN03546-00
Track frame and recoil spring	2
Idler.....	4
Carrier roller.....	6
Track roller	7
Track shoe	8
Hydraulic system, Part 1	SEN03547-00
Hydraulic equipment layout drawing.....	2
Hydraulic tank and filter	4
Hydraulic pump.....	6
Hydraulic system, Part 2	SEN03548-01
Control valve.....	2
CLSS	14
Functions and operation by valve	18
Merge-divider valve	33
Attachment circuit selector valve	58
Hydraulic drift prevention valve.....	60
Hydraulic system, Part 3	SEN03549-00
Valve control	2
PPC valve	3
Solenoid valve	19

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$