

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC360 -11

PC360LC -11

PC360NLC-11

SERIAL NUMBERS K70001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL.....	00-26
SAFETY NOTICE FOR OPERATION.....	00-28
PRECAUTIONS TO PREVENT FIRE.....	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-40
PRECAUTIONS FOR DEF.....	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-77
STANDARD TIGHTENING TORQUE TABLE.....	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING.....	01-9
WORKING RANGE DRAWINGS	01-11
SPECIFICATIONS	01-12
WEIGHT TABLE	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-17
SPECIFICATIONS - PC390HRD-11	01-18
SPECIFICATION DRAWING.....	01-18
SPECIFICATIONS	01-20
WEIGHT TABLE	01-22
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM.....	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM.....	10-17
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-33
BOOT-UP SYSTEM	10-42
LAYOUT DRAWING OF BOOT-UP SYSTEM.....	10-42
SYSTEM OPERATING LAMP SYSTEM	10-44
BATTERY DISCONNECT SWITCH	10-46
ENGINE SYSTEM	10-47
LAYOUT DRAWING OF ENGINE SYSTEM.....	10-47

ENGINE CONTROL SYSTEM	10-49
AUTO-DECELERATION SYSTEM	10-52
ENGINE AUTOMATIC WARM-UP SYSTEM	10-54
OVERHEAT PREVENTION SYSTEM	10-56
TURBOCHARGER PROTECTION SYSTEM	10-58
AUTOMATIC IDLE STOP SYSTEM	10-60
COMPONENT PARTS OF ENGINE SYSTEM	10-63
COOLING SYSTEM.....	10-79
LAYOUT DRAWING OF COOLING SYSTEM	10-79
CONTROL SYSTEM.....	10-81
LAYOUT DRAWING OF CONTROL SYSTEM	10-81
MACHINE MONITOR SYSTEM	10-84
KomVision SYSTEM	10-86
KOMTRAX SYSTEM.....	10-90
PPC LEVERS	10-91
AUTOMATIC GREASE SYSTEM.....	10-93
COMPONENT PARTS OF CONTROL SYSTEM.....	10-108
SENSOR.....	10-147
HYDRAULIC SYSTEM.....	10-159
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-159
CLSS	10-162
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-181
PUMP AND VALVE CONTROL SYSTEM	10-187
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-190
HYDRAULIC SYSTEM - PC390HRD-11	10-277
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-277
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-280
WORK EQUIPMENT SYSTEM	10-297
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-297
STRUCTURE OF VALVE CONTROL.....	10-303
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-305
MACHINE PUSH-UP SYSTEM.....	10-307
PPC LOCK SYSTEM	10-309
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-310
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-312
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-314
WORK EQUIPMENT SYSTEM - PC390HRD-11.....	10-334
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-334
SWING SYSTEM.....	10-338
LAYOUT DRAWING OF SWING SYSTEM	10-338
SWING CONTROL SYSTEM DIAGRAM	10-341
COMPONENT PARTS OF SWING SYSTEM.....	10-345
TRAVEL SYSTEM.....	10-359
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-359
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-363
COMPONENT PARTS OF TRAVEL SYSTEM	10-365
UNDERCARRIAGE AND FRAME.....	10-385
LAYOUT DRAWING OF UNDERCARRIAGE	10-385
WORK EQUIPMENT.....	10-387
STRUCTURE OF WORK EQUIPMENT	10-387
FUNCTION OF WORK EQUIPMENT	10-388
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-389
BUCKET CLEARANCE ADJUSTMENT SHIM	10-390
CAB AND ITS ATTACHMENTS	10-391
ROPS CAB	10-391
CAB MOUNT	10-392
CAB TIPPING STOPPER	10-393
TILTING CAB SYSTEM.....	10-394

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$