

Shop Manual

**HYDRAULIC
EXCAVATOR**

PC360LC -11

PC360NLC -11

PC390HRD-11

SERIAL NUMBERS 90001 and up
 K70001 and up

KOMATSU

00 INDEX AND FOREWORD

INDEX

(ALL-A-0310-001-10-B)

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL	00-26
SAFETY NOTICE FOR OPERATION	00-28
PRECAUTIONS TO PREVENT FIRE	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-40
PRECAUTIONS FOR DEF	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-53
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-55
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-56
PRACTICAL USE OF KOMTRAX	00-57
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-58
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-62
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-67
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-70
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-72
HOW TO READ ELECTRICAL WIRE CODE	00-73
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-77
STANDARD TIGHTENING TORQUE TABLE	00-80
CONVERSION TABLE	00-87
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
WORKING RANGE DRAWINGS	01-10
SPECIFICATIONS	01-11
WEIGHT TABLE	01-14
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-16
SPECIFICATIONS - PC390HRD-11	01-17
SPECIFICATION DRAWING	01-17
SPECIFICATIONS	01-20
WEIGHT TABLE	01-22
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-6
UREA SCR SYSTEM	10-12
LAYOUT DRAWING OF UREA SCR SYSTEM	10-12
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM	10-17
COMPONENT PARTS OF UREA SCR SYSTEM	10-34
BOOT-UP SYSTEM	10-43
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-43
SYSTEM OPERATING LAMP SYSTEM	10-45
BATTERY DISCONNECT SWITCH	10-47
ENGINE SYSTEM	10-48
LAYOUT DRAWING OF ENGINE SYSTEM	10-48

ENGINE CONTROL SYSTEM	10-50
AUTO-DECELERATION SYSTEM	10-53
ENGINE AUTOMATIC WARM-UP SYSTEM	10-55
OVERHEAT PREVENTION SYSTEM	10-57
TURBOCHARGER PROTECTION SYSTEM	10-59
AUTOMATIC IDLE STOP SYSTEM	10-61
COMPONENT PARTS OF ENGINE SYSTEM	10-64
COOLING SYSTEM	10-80
LAYOUT DRAWING OF COOLING SYSTEM	10-80
CONTROL SYSTEM	10-82
LAYOUT DRAWING OF CONTROL SYSTEM	10-82
MACHINE MONITOR SYSTEM	10-85
KOMTRAX SYSTEM	10-87
PPC LEVERS	10-88
AUTOMATIC GREASE SYSTEM	10-90
COMPONENT PARTS OF CONTROL SYSTEM	10-105
SENSOR	10-135
HYDRAULIC SYSTEM	10-148
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-148
CLSS	10-151
ENGINE AND PUMP COMBINED CONTROL SYSTEM	10-170
PUMP AND VALVE CONTROL SYSTEM	10-176
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-179
HYDRAULIC SYSTEM - PC390HRD-11	10-265
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-265
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-268
WORK EQUIPMENT SYSTEM	10-285
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-285
STRUCTURE OF VALVE CONTROL	10-291
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-293
MACHINE PUSH-UP SYSTEM	10-295
PPC LOCK SYSTEM	10-297
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-298
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT	10-300
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM	10-302
WORK EQUIPMENT SYSTEM - PC390HRD-11	10-322
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-322
SWING SYSTEM	10-326
LAYOUT DRAWING OF SWING SYSTEM	10-326
SWING CONTROL SYSTEM DIAGRAM	10-329
COMPONENT PARTS OF SWING SYSTEM	10-333
TRAVEL SYSTEM	10-347
LAYOUT DRAWING OF TRAVEL SYSTEM	10-347
TRAVEL CONTROL SYSTEM DIAGRAM	10-351
COMPONENT PARTS OF TRAVEL SYSTEM	10-353
UNDERCARRIAGE AND FRAME	10-374
LAYOUT DRAWING OF UNDERCARRIAGE	10-374
WORK EQUIPMENT	10-375
STRUCTURE OF WORK EQUIPMENT	10-375
FUNCTION OF WORK EQUIPMENT	10-376
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM	10-377
BUCKET CLEARANCE ADJUSTMENT SHIM	10-378
CAB AND ITS ATTACHMENTS	10-379
ROPS CAB	10-379
CAB MOUNT	10-380
CAB TIPPING STOPPER	10-381
TILTING CAB SYSTEM	10-382
20 STANDARD VALUE TABLE	20-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$