

HYDRAULIC
EXCAVATOR

GALEO

PC450-7E0

PC450LC-7E0

SERIAL NUMBERS PC450-7E0 K45001
PC450LC-7E0 K45001 and up

HYDRAULIC EXCAVATOR

PC450-7E0 PC450LC-7E0

Machine model Serial number

| | |
|-------------|---------------|
| PC450-7E0 | K45001 and up |
| PC450LC-7E0 | K45001 and up |

00 Index and foreword

Index

| | |
|--|---|
| Organization list of the shop manual | 2 |
| Table of contents | 4 |

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | UEN00344-01 ● |
| 00 Index and foreword | |
| Index | UEN00346-01 ● |
| Foreword and general information | UEN00347-00 |
| 01 Specification | |
| Specification and technical data | UEN00349-00 |
| 10 Structure, function and maintenance standard | |
| Engine and cooling system | UEN00351-00 |
| Power train | UEN00352-00 |
| Undercarriage and frame | UEN00353-00 |
| Hydraulic system, Part 1 | UEN00354-00 |
| Hydraulic system, Part 2 | UEN00355-00 |
| Hydraulic system, Part 3 | UEN00356-00 |
| Work equipment | UEN00357-00 |
| Cab and its attachments | UEN00358-00 |
| Electrical system | UEN00359-00 |
| 20 Standard value table | |
| Standard service value table | UEN00364-00 |
| 30 Testing and adjusting | |
| Testing and adjusting, part 1 | UEN00619-00 |
| Testing and adjusting, Part 2 | UEN00620-00 |
| 40 Troubleshooting | |
| Information related to troubleshooting | UEN00622-00 |
| Troubleshooting by failure code (Display of code), Part 1 | UEN00623-00 |
| Troubleshooting by failure code (Display of code), Part 2 | UEN00624-00 |
| Troubleshooting by failure code (Display of code), Part 3 | UEN00625-00 |
| Troubleshooting of electrical system (E-mode) | UEN00626-00 |
| Troubleshooting of hydraulic and mechanical system (H-mode) | UEN00627-00 |
| Troubleshooting of engine (S-mode) | UEN00628-00 |

| | |
|---|---------------|
| 50 Disassembly and assembly | |
| General information on disassembly and assembly | UEN00855-00 ○ |
| Engine and cooling system | UEN00856-00 ○ |
| Power train | UEN00857-00 ○ |
| Undercarriage and frame | UEN00858-00 ○ |
| Hydraulic system | UEN00859-00 ○ |
| Work equipment | UEN00860-00 ○ |
| Cab and its attachments | UEN00861-00 ○ |
| Electrical system | UEN00862-00 ○ |
| 90 Diagrams and drawings | |
| Hydraulic diagrams and drawings | UEN00361-00 |
| Electrical diagrams and drawings | UEN00362-00 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$