

# Shop Manual

COMPACT  
HYDRAULIC  
EXCAVATOR

***PC45MR-5***  
***PC55MR-5***

SERIAL NUMBERS

PC45MR-30001  
PC55MR-20001

and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-11
FOREWORD, SAFETY, BASIC INFORMATION .....	00-17
HOW TO READ THE SHOP MANUAL .....	00-17
SAFETY NOTICE FOR OPERATION .....	00-19
PRECAUTIONS TO PREVENT FIRE .....	00-27
ACTIONS IF FIRE OCCURS .....	00-29
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-30
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-31
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-34
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-41
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-43
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-44
PRACTICAL USE OF KOMTRAX .....	00-45
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-46
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-50
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-54
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-55
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-57
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-58
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-60
HOW TO READ ELECTRICAL WIRE CODE .....	00-61
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-65
STANDARD TIGHTENING TORQUE TABLE .....	00-68
CONVERSION TABLE .....	00-75
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-13
SPECIFICATIONS .....	01-15
WEIGHT TABLE .....	01-23
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-27
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-4
BOOT-UP SYSTEM .....	10-10
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-10
SYSTEM OPERATING LAMP SYSTEM .....	10-12
BATTERY DISCONNECT SWITCH .....	10-14
ENGINE SYSTEM .....	10-15
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-15
ENGINE CONTROL SYSTEM .....	10-16
AUTO-DECELERATION SYSTEM .....	10-20
OVERHEAT PREVENTION SYSTEM .....	10-22
AUTOMATIC IDLE STOP SYSTEM .....	10-24
COMPONENT PARTS OF ENGINE SYSTEM .....	10-26
COOLING SYSTEM .....	10-27
LAYOUT DRAWING OF COOLING SYSTEM .....	10-27
CONTROL SYSTEM .....	10-29
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-29
MACHINE MONITOR SYSTEM .....	10-30
KOMTRAX SYSTEM .....	10-31
COMPONENT PARTS OF CONTROL SYSTEM .....	10-32

HYDRAULIC SYSTEM.....	10-48
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-48
CLSS .....	10-50
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-53
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-56
WORK EQUIPMENT SYSTEM .....	10-118
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-118
STRUCTURE OF VALVE CONTROL.....	10-122
PPC LOCK SYSTEM .....	10-124
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-126
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-127
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-129
SWING SYSTEM .....	10-145
LAYOUT DRAWING OF SWING SYSTEM .....	10-145
COMPONENT PARTS OF SWING SYSTEM.....	10-146
TRAVEL SYSTEM.....	10-156
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-156
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-158
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-160
UNDERCARRIAGE AND FRAME.....	10-171
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-171
IDLER CUSHION.....	10-172
WORK EQUIPMENT.....	10-173
STRUCTURE OF WORK EQUIPMENT .....	10-173
FUNCTION OF WORK EQUIPMENT .....	10-174
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-175
CAB AND ITS ATTACHMENTS .....	10-176
ROPS CAB .....	10-176
TILT TYPE FLOOR .....	10-177
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC45MR-5.....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC55MR-5.....	20-11
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC45MR-5 .....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC55MR-5 .....	20-25
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-37
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-11
TOOLS FOR TESTING AND ADJUSTING.....	30-11
SKETCH OF TOOLS FOR TESTING AND ADJUSTING .....	30-15
ENGINE AND COOLING SYSTEM.....	30-17
TEST ENGINE SPEED .....	30-17
TEST EXHAUST GAS COLOR.....	30-19
TEST AND ADJUST VALVE CLEARANCE .....	30-21
TEST COMPRESSION PRESSURE.....	30-23
TEST ENGINE OIL PRESSURE .....	30-25
BLEED AIR FROM FUEL SYSTEM .....	30-27
TEST FUEL CIRCUIT FOR LEAKAGE .....	30-29
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-30
TEST AND ADJUST ALTERNATOR BELT TENSION .....	30-31
TEST AND ADJUST AIR CONDITIONER COMPRESSOR BELT TENSION .....	30-32
POWER TRAIN.....	30-34
TEST SWING CIRCLE BEARING CLEARANCE .....	30-34

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$