

SHOP MANUAL

WEBM000600



PW75-1

HYDRAULIC EXCAVATOR

SERIAL NUMBER

000001 and up

- This shop manual may contain attachments and optional equipment that are not available in your area.
Please consult your local FKI distributor for those items you may require.
Materials and specifications are subject to change without notice.
- PW75-1 mount the KOMATSU 4D98E-1FB engine.
For detail of the engine, see the KOMATSU series 98 Engine Shop Manual.



FKI FAI KOMATSU INDUSTRIES S.p.A.

HEAD OFFICE: VIA ATHESTE 4 35042 ESTE (PADOVA) ITALY

Tel. +39 0429 616111 • Fax +39 0429 601000

CONTENTS

	No. of page
10 STRUCTURE AND FUNCTION	10-1
20 TESTING AND ADJUSTING	20-1
30 DISASSEMBLY AND ASSEMBLY	30-1
40 MAINTENANCE STANDARD	40-1

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to table below.

Mark	Indication	Action required
○	Page to be newly	Add
●	Page to be replaced	Replace
()	Page to be delete	Discard

Pages having no marks are those previously revised or made additions.

LIST OF REVISED PAGES



Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
	00-1			10-26			10-70			10-110			20-3	
	00-2			10-27			10-71			10-111			20-4	
	00-2-1			10-28			10-72			10-112			20-5	
	00-2-2			10-29			10-73			10-113			20-6	
	00-3			10-30			10-74			10-114			20-7	
	00-4			10-31			10-75			10-115			20-8	
	00-5			10-32			10-76			10-116			20-9	
	00-6			10-33			10-77			10-117			20-10	
	00-7			10-34			10-78			10-118			20-11	
	00-8			10-35			10-79			10-119			20-12	
	00-9			10-36			10-80			10-120			20-13	
	00-10			10-37			10-81			10-121			20-14	
	00-11			10-38			10-82			10-122			20-15	
	00-12			10-39			10-83			10-123			20-16	
				10-40			10-84			10-124			20-17	
	10-1			10-41			10-85			10-125			20-18	
	10-2			10-42			10-86			10-126			20-19	
	10-3			10-43			10-87			10-127			20-20	
	10-4			10-44			10-88			10-128			20-21	
	10-5			10-45			10-89			10-129			20-22	
	10-6			10-46			10-90			10-130			20-23	
	10-7			10-47			10-91			10-131			20-24	
	10-8			10-48			10-92			10-132			20-25	
	10-9			10-49			10-93			10-133			20-26	
	10-10			10-50			10-94			10-134			20-27	
	10-11			10-51			10-95			10-135			20-28	
	10-12			10-52			10-96			10-136			20-29	
	10-13			10-53			10-97			10-137			20-30	
	10-14			10-54			10-98			10-138			20-31	
	10-15			10-55			10-99			10-139			20-32	
	10-16			10-56			10-100			10-140			20-33	
	10-17			10-57			10-101			10-141			20-34	
	10-18			10-59			10-102			10-142			20-35	
	10-19			10-61			10-103			10-143			20-36	
	10-20			10-63			10-104			10-144			20-37	
	10-21			10-65			10-105			10-145			20-38	
	10-22			10-66			10-106			10-146			20-39	
	10-23			10-67			10-107						20-40	
	10-24			10-68			10-108			20-1			20-41	
	10-25			10-69			10-109			20-2			20-42	

Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision	Mark	Page	Time of revision
	20-43			30-22			30-78			30-134			40-20	
	20-44			30-23			30-79			30-135			40-21	
	20-45			30-24			30-80			30-136			40-22	
	20-46			30-25			30-81			30-137			40-23	
	20-47			30-26			30-82			30-138			40-24	
	20-48			30-27			30-83			30-139			40-25	
	20-49			30-28			30-84			30-140			40-26	
	20-50			30-29			30-85			30-141			40-27	
	20-51			30-30			30-86			30-142			40-28	
	20-52			30-31			30-87			30-143			40-29	
	20-53			30-32			30-88			30-144			40-30	
	20-54			30-33			30-89			30-145			40-31	
	20-55			30-34			30-90			30-146			40-32	
	20-56			30-35			30-91			30-147			40-33	
	20-57			30-36			30-92			30-148			40-34	
	20-58			30-37			30-93			30-149			40-35	
	20-59			30-38			30-94			30-150			40-36	
	20-60			30-39			30-95			30-151			40-37	
	20-61			30-40			30-96			30-152			40-38	
	20-62			30-41			30-97			30-153			40-39	
	20-63			30-42			30-98			30-154			40-40	
	20-64			30-43			30-99			30-155			40-41	
	20-65			30-44			30-100			30-156			40-42	
	20-66			30-45			30-101			30-157			40-43	
	20-67			30-46			30-102			30-158			40-44	
	20-68			30-47			30-103			30-159			40-45	
	20-69			30-48			30-104			30-160			40-46	
	20-70			30-49			30-105			30-161			40-47	
	20-71			30-50			30-106			30-162			40-48	
	20-72			30-51			30-107			30-163			40-49	
	20-73			30-52			30-108			30-164			40-50	
	20-74			30-53			30-109			30-165			40-51	
	20-75			30-54			30-110			30-166			40-52	
	20-76			30-55			30-111			30-167			40-53	
				30-56			30-112			30-168				
	30-1			30-57			30-113			30-169				
	30-2			30-58			30-114			30-170				
	30-3			30-59			30-115							
	30-4			30-60			30-116			40-1				
	30-5			30-61			30-117			40-3				
	30-6			30-62			30-118			40-4				
	30-7			30-63			30-119			40-5				
	30-8			30-64			30-120			40-6				
	30-9			30-65			30-121			40-7				
	30-10			30-66			30-122			40-8				
	30-11			30-67			30-123			40-9				
	30-12			30-68			30-124			40-10				
	30-13			30-69			30-125			40-11				
	30-14			30-70			30-126			40-12				
	30-15			30-71			30-127			40-13				
	30-16			30-72			30-128			40-14				
	30-17			30-73			30-129			40-15				
	30-18			30-74			30-130			40-16				
	30-19			30-75			30-131			40-17				
	30-20			30-76			30-132			40-18				
	30-21			30-77			30-133			40-19				



IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for the safe operation of your machine. The service and repair techniques recommended by FKI and describe in this manual are both effective and safe methods of operation. Some of these operations require the use of tools specially designed by FKI for the purpose.

To prevent injury to workers, the symbols  and  are used to mark safety precautions in this manual. The cautions accompanying these symbols should always be carefully followed. If any danger arises or may possibly arise, first consider safety, and take necessary steps to face.



SAFETY

GENERAL PRECAUTIONS

Mistakes in operation extremely dangerous. Read all the Operation and Maintenance Manual carefully BEFORE operating the machine.

1. Before carrying out any greasing or repairs, read all the precautions written on the decals which are stuck on the machine.
2. When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, glasses, cap and other clothes suited for welding work.
4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
5. Keep all tools in good condition and learn the correct way to use them.
6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor.
Smoke only in the areas provided for smoking. Never smoke while working.

PREPARATIONS FOR WORK

7. Before adding or making any repairs, park the machine on hard, level ground, and block the wheels to prevent the machine from moving.
8. Before starting work, lower outrigger, bucket or any other work equipment to the ground. If this is not possible, use blocks to prevent the work equipment from falling down. In addition, be sure to lock all the control levers and hang warning sign on them.
9. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
10. Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine.
Never jump on or off the machine.
If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

PRECAUTIONS DURING WORK

11. When removing the oil filler cap, drain plug or hydraulic pressure measuring plugs, loosen them slowly to prevent the oil from spurting out. Before disconnecting or removing components of the hydraulic circuit and engine cooling circuit, first remove the pressure completely from the circuit.
12. The water and oil in the circuits are not hot when the engine is stopped, so be careful not to get burned.
Wait for the oil water to cool before carrying out any work on the cooling water circuits.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$