

SHOP MANUAL KOMATSU WA180-1LC WHEEL LOADER

MACHINE MODEL	SERIAL NUMBERS
WA180-1LC	75001 and up

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

PRODUCT PUBLICATIONS INFORMATION

VARIOUS PRODUCT PARTS & SERVICE PUBLICATIONS ARE AVAILABLE TO ALL KOMATSU CONSTRUCTION EQUIPMENT OWNERS, INCLUDING OPERATION & MAINTENANCE MANUALS, PARTS BOOKS AND SHOP MANUALS.

SPECIAL PUBLICATIONS SUCH AS SERVICE TOOL, AIR CONDITIONING, AND TURBOCHARGER SHOP MANUALS ARE ALSO AVAILABLE AS WELL AS SELECTED OPERATION & MAINTENANCE AND SHOP MANUALS IN FOREIGN LANGUAGES.

THE PUBLICATIONS LISTED BELOW ARE AVAILABLE FOR THIS PARTICULAR MACHINE(S).

DESCRIPTION	FORM NUMBER
PARTS BOOK - PAPER:	
Engine and Chassis	BEPBW17021
PARTS BOOK - MICROFICHE:	
Engine and Chassis	BEPMW17021
OPERATION & MAINTENANCE MANUAL:	
Chassis	SEAMU417KD10
SHOP MANUAL:	
Chassis	CEBMW17020
Engine:	
Shop Manual	CEBM610SM0
Alternative Repair Manual	CEBM610AR0
SAFETY MANUAL	1085 883 R3

PARTS AND SERVICE PUBLICATIONS CAN ONLY BE ACQUIRED BY AN AUTHORIZED KOMATSU DISTRIBUTOR, USING THE "REQUEST FOR LITERATURE" FORM KDC-EPS-05 SHOWN ON THE REVERSE SIDE OF THIS PAGE.

PLEASE TEAR OUT THIS PAGE AND FILL IN ALL THE INFORMATION REQUESTED ON THE ORDER FORM!

CONTENTS

No. of page

10 ENGINE

11	STRUCTURE AND FUNCTION	11-1
12	TESTING AND ADJUSTING	12-1
13	DISASSEMBLY AND ASSEMBLY	13-1

20 POWER TRAIN

21	STRUCTURE AND FUNCTION	21-1
22	TESTING AND ADJUSTING	22-1
23	DISASSEMBLY AND ASSEMBLY	23-1
24	MAINTENANCE STANDARD	24-1

40 STEERING SYSTEM

41	STRUCTURE AND FUNCTION	41-1
42	TESTING AND ADJUSTING	42-1
43	DISASSEMBLY AND ASSEMBLY	43-1
44	MAINTENANCE STANDARD	44-1

50 BRAKE SYSTEM

51	STRUCTURE AND FUNCTION	51-1
52	TESTING AND ADJUSTING	52-1
53	DISASSEMBLY AND ASSEMBLY	53-1
54	MAINTENANCE STANDARD	54-1

60 WORK EQUIPMENT SYSTEM

61	STRUCTURE AND FUNCTION	61-1
62	TESTING AND ADJUSTING	62-1
63	DISASSEMBLY AND ASSEMBLY	63-1
64	MAINTENANCE STANDARD	64-1

80 ELECTRIC AND ELECTRONIC SYSTEM

81	STRUCTURE AND FUNCTION	81-1
83	DISASSEMBLY AND ASSEMBLY	83-1

90 MISCELLANEOUS

91	CAB AND AIR CONDITIONER STRUCTURE AND FUNCTION	91-1
97	GEAR PUMP	97-1
99	METRIC CONVERSIONS	99-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$