

SHOP

MANUAL

WA200-6

WA200PZ-6

MACHINE MODEL

SERIAL NUMBER

WA200-6

75001 and up

WA200PZ-6

**70136 and up
H00051 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subject to change without notice.
- WA200-6 and WA200PZ-6 mounts the SAA4D107E-1 engine.

WHEEL LOADER

WA200-6

WA200PZ-6

Machine model	Serial number
WA200-6	70001 and up
WA200PZ-6	70136 and up H00051 and up

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual	VEBM600101
00 Index and foreword	SEN03863-00
100 Index	SEN03871-01
200 Foreword and general information	SEN03872-00
01 Specification	SEN03864-00
100 Specification and technical data	SEN03873-00
10 Structure, function and maintenance standard	SEN03865-00
100 Engine and cooling system	SEN03874-00
200 Power train	SEN03875-00
300 Steering system	SEN03876-00
400 Brake system	SEN03877-00
500 Undercarriage and frame	SEN03878-00
600 Hydraulic system	SEN03879-00
700 Work equipment	SEN03880-00
800 Cab and its attachments	SEN03881-00
910 Electrical system, Part 1	SEN03882-00
920 Electrical system, Part 2	SEN03883-00
20 Standard value table	SEN03866-00
100 Standard service value table	SEN03884-00
30 Testing and adjusting	SEN03867-00
110 Testing and adjusting, Part 1	SEN03885-00
120 Testing and adjusting, Part 2	●SEN03886-01
130 Testing and adjusting, Part 3	●SEN03887-01

40 Troubleshooting	SEN03868-00
100 Failure code table and fuse locations	SEN03888-00
200 General information on troubleshooting	SEN03889-00
310 Troubleshooting by failure code (Display of code), Part 1	SEN03890-00
320 Troubleshooting by failure code (Display of code), Part 2	SEN03891-00
330 Troubleshooting by failure code (Display of code), Part 3	SEN03892-00
340 Troubleshooting by failure code (Display of code), Part 4	SEN03893-00
350 Troubleshooting by failure code (Display of code), Part 5	SEN03894-00
360 Troubleshooting by failure code (Display of code), Part 6	SEN03895-00
370 Troubleshooting by failure code (Display of code), Part 7	SEN03896-00
400 Troubleshooting of electrical system (E-mode)	SEN03897-00
500 Troubleshooting of hydraulic and mechanical system (H-mode)	SEN03898-00
600 Troubleshooting of engine (S-mode)	SEN03899-00
50 Disassembly and assembly	SEN03869-00
100 General information on disassembly and assembly	SEN03900-00
200 Engine and cooling system	SEN03901-00
310 Power train, Part 1	SEN03902-00
320 Power train, Part 2	SEN03903-00
400 Undercarriage and frame	SEN03904-00
500 Hydraulic system	SEN03905-00
600 Work equipment	SEN03906-00
700 Cab and its attachments	SEN03907-00
800 Electrical system	SEN03908-00
90 Diagrams and drawings	SEN03870-00
100 Hydraulic diagrams and drawings	●SEN03909-01
200 Electrical diagrams and drawings	SEN03910-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$