#### Shop Manual

# GALEO WA430-6

(KA SPEC.)

WHEEL LOADER

SERIAL NUMBERS WA430-6 65001 and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2007 Komatsu Printed in U.S.A. Komatsu America Corp.

#### WHEEL LOADER

## **WA430-6** (**KA SPEC.**)

Machine model Serial number

WA430-6 (KA SPEC.) 65001 and up

#### 00 Index and foreword

#### Index

Composition of shop manual	2	2
Table of contents	4	1

SEN00846-03 00 Index and foreword

#### **Composition of shop manual**

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly. The marks shown to the right of Form No. denote the following:

- O: New issue (to be filed additionally) •: Revision (to be replaced for each Form No.)
- Note 2: This shop manual can be supplied for each Form No.
- Note 3: To file this shop manual in the special binder for management, handle it as follows:
  - Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
  - File overview and other materials in sections in the order shown below and utilize them accordingly.

Shop Manual, contents binder, binder label and tabs  Ol Index and foreword Index Foreword and general information  SEN00838-03 Foreword and general information  SEN00847-01  Ol Specification Specification and technical data  SEN00849-00 Engine and cooling system Power train Steering system SEN01375-00 Brake system Undercarriage and frame Hydraulic system, Part 1 SEN01378-00 Hydraulic system, Part 2 Work equipment Cab and its attachments Electrical system, Part 1 SEN01380-00 Electrical system, Part 2 SEN01380-00 Electrical system, Part 3  SEN01386-00  Olectrical system, Part 3  SEN01386-00  Olectrical system, Part 3  SEN00841-00 Stendard value table Standard service value table Standard service value table Standard adjusting Testing and adjusting, Part 3  Testing and adjusting, Part 3  SEN01598-01  Testing and adjusting, Part 3  SEN01598-01  Testing and adjusting, Part 3  SEN01723-00  Troubleshooting Failure code table and fuse locations General information on troubleshooting Troubleshooting finding SEN01722-00 Troubleshooting to the part 1 SEN01723-00  Troubleshooting to the part 1 SEN01723-00  SEN01723-00  Troubleshooting to the part 1 SEN01723-00  Troubleshooting to the part 1 SEN01723-00  SEN01723-00  SEN01723-00	Section Title	Form Number
Index Foreword and general information  SEN00847-01  01 Specification Specification and technical data  SEN00848-00  10 Structure, function and maintenance standard Engine and cooling system SEN01375-00 Power train Steering system SEN01377-00 Steering system SEN01377-00 Brake system SEN01378-00 Undercarriage and frame SEN01378-00 Hydraulic system, Part 1 SEN01380-00 Hydraulic system, Part 2 Work equipment SEN01381-00 Cab and its attachments Electrical system, Part 1 SEN01384-00 Electrical system, Part 2 SEN01384-00 Electrical system, Part 3 SEN01385-00 Electrical system, Part 3 SEN01386-00  20 Standard value table Standard service value table Standard service value table Standard service value table Standard service value table SEN01595-01 Testing and adjusting, Part 2 SEN01596-01 Testing and adjusting, Part 3 SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00	Shop Manual, contents binder, binder label and tabs	SEN00837-03
Foreword and general information  SEN00847-01  01 Specification Specification and technical data  SEN00848-00  10 Structure, function and maintenance standard Engine and cooling system SEN01375-00 Power train Steering system SEN01377-00 Brake system SEN01377-00 Brake system SEN01378-00 Undercarriage and frame Hydraulic system, Part 1 SEN01380-00 Hydraulic system, Part 2 SEN01380-00 Cab and its attachments SEN01382-00 Cab and its attachments SEN01383-00 Electrical system, Part 1 SEN01384-00 Electrical system, Part 2 SEN01385-00 Electrical system, Part 3  SEN01386-00  20 Standard value table Standard service value table Standard service value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 SEN01598-01 Testing and adjusting, Part 2 SEN01598-01 Testing and adjusting, Part 3  SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting	00 Index and foreword	SEN00838-03
O1 Specification Specification and technical data SEN00848-00  10 Structure, function and maintenance standard Engine and cooling system Power train SEN01375-00 Steering system SEN01377-00 Brake system SEN01377-00 Brake system SEN01378-00 Undercarriage and frame Hydraulic system, Part 1 SEN01380-00 Hydraulic system, Part 2 SEN01381-00 Work equipment SEN01382-00 Cab and its attachments Electrical system, Part 1 SEN01383-00 Electrical system, Part 2 SEN01384-00 Electrical system, Part 3 SEN01386-00 Standard value table Standard value table Standard service value table SEN01384-00 Testing and adjusting Testing and adjusting, Part 2 SEN01595-00  30 Testing and adjusting, Part 3 SEN01596-01 Testing and adjusting, Part 3 SEN01598-01	Index	SEN00846-03 ●
Specification and technical data  SEN00848-00  10 Structure, function and maintenance standard Engine and cooling system Power train SEN01375-00 Steering system SEN01377-00 Brake system SEN01377-00 Brake system SEN01378-00 Undercarriage and frame Hydraulic system, Part 1 SEN01380-00 Hydraulic system, Part 2 SEN01381-00 Work equipment SEN01382-00 Cab and its attachments Electrical system, Part 1 SEN01383-00 Electrical system, Part 2 SEN01384-00 Electrical system, Part 3  SEN01385-00 Electrical system, Part 3  SEN01386-00  20 Standard value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 Testing and adjusting, Part 2 Testing and adjusting, Part 3  SEN01596-01 Testing and adjusting, Part 3  SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting	Foreword and general information	SEN00847-01
10 Structure, function and maintenance standard Engine and cooling system Power train Steering system Steering	01 Specification	SEN00839-00
Engine and cooling system         SEN01375-00           Power train         SEN01376-00           Steering system         SEN01377-00           Brake system         SEN01378-00           Undercarriage and frame         SEN01379-00           Hydraulic system, Part 1         SEN01380-00           Hydraulic system, Part 2         SEN01381-00           Work equipment         SEN01382-00           Cab and its attachments         SEN01383-00           Electrical system, Part 1         SEN01384-00           Electrical system, Part 2         SEN01385-00           Electrical system, Part 3         SEN01386-00           20 Standard value table         SEN01386-00           Standard service value table         SEN00841-00           Standard service value table         SEN01595-00           30 Testing and adjusting, Part 1         SEN01596-01           Testing and adjusting, Part 2         SEN01597-01           Testing and adjusting, Part 3         SEN01598-01           40 Troubleshooting         SEN00843-01           Failure code table and fuse locations         SEN01721-00           General information on troubleshooting         SEN01722-00	Specification and technical data	SEN00848-00
Power train         SEN01376-00           Steering system         SEN01377-00           Brake system         SEN01378-00           Undercarriage and frame         SEN01379-00           Hydraulic system, Part 1         SEN01380-00           Hydraulic system, Part 2         SEN01381-00           Work equipment         SEN01382-00           Cab and its attachments         SEN01383-00           Electrical system, Part 1         SEN01384-00           Electrical system, Part 2         SEN01385-00           Electrical system, Part 3         SEN01386-00           20 Standard value table         SEN01386-00           Standard value table         SEN01595-00           30 Testing and adjusting         SEN01596-01           Testing and adjusting, Part 1         SEN01596-01           Testing and adjusting, Part 2         SEN01597-01           Testing and adjusting, Part 3         SEN01598-01           40 Troubleshooting         SEN00843-01           Failure code table and fuse locations         SEN01721-00           General information on troubleshooting         SEN01722-00		
Steering system         SEN01377-00           Brake system         SEN01378-00           Undercarriage and frame         SEN01379-00           Hydraulic system, Part 1         SEN01380-00           Hydraulic system, Part 2         SEN01381-00           Work equipment         SEN01382-00           Cab and its attachments         SEN01383-00           Electrical system, Part 1         SEN01384-00           Electrical system, Part 2         SEN01385-00           Electrical system, Part 3         SEN01386-00           20 Standard value table         SEN00841-00           Standard service value table         SEN00842-01           Testing and adjusting         SEN01596-01           Testing and adjusting, Part 1         SEN01596-01           Testing and adjusting, Part 2         SEN01597-01           Testing and adjusting, Part 3         SEN01598-01           40 Troubleshooting         SEN00843-01           Failure code table and fuse locations         SEN01721-00           General information on troubleshooting         SEN01722-00		
Brake system Undercarriage and frame Hydraulic system, Part 1 SEN01378-00 Hydraulic system, Part 2 SEN01381-00 Work equipment Cab and its attachments Electrical system, Part 1 SEN01383-00 Electrical system, Part 2 SEN01384-00 Electrical system, Part 2 SEN01385-00 Electrical system, Part 3 SEN01386-00  20 Standard value table Standard service value table Standard service value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 SEN01596-01 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3 SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00	Power train	
Undercarriage and frame Hydraulic system, Part 1 SEN01380-00 Hydraulic system, Part 2 SEN01381-00 Work equipment Cab and its attachments Electrical system, Part 1 Electrical system, Part 2 Electrical system, Part 2 Electrical system, Part 3 Electrical system, Part 3 Electrical system, Part 3 Electrical system, Part 3 EN01385-00 Electrical system, Part 3 EN01386-00  20 Standard value table SEN00841-00 Standard service value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 SEN01596-01 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3 SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00		SEN01377-00
Hydraulic system, Part 1 SEN01380-00 Hydraulic system, Part 2 Work equipment SEN01382-00 Cab and its attachments SEN01383-00 Electrical system, Part 1 SEN01384-00 Electrical system, Part 2 SEN01385-00 Electrical system, Part 3 SEN01386-00  20 Standard value table Standard service value table Standard service value table SEN00841-00 Standard adjusting Testing and adjusting, Part 1 SEN01595-00  30 Testing and adjusting, Part 2 SEN01596-01 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3 SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00	•	SEN01378-00
Hydraulic system, Part 2 Work equipment SEN01381-00 Cab and its attachments Electrical system, Part 1 Electrical system, Part 2 Electrical system, Part 2 Electrical system, Part 3 EN01385-00 Electrical system, Part 3 EN01386-00  20 Standard value table SEN00841-00 Standard service value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 Esting and adjusting, Part 2 EN01596-01 Testing and adjusting, Part 3 EN01597-01 Testing and adjusting, Part 3 EN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00	· ·	SEN01379-00
Work equipment Cab and its attachments Electrical system, Part 1 Electrical system, Part 2 Electrical system, Part 3  SEN01385-00 Electrical system, Part 3  SEN01385-00 Electrical system, Part 3  SEN01386-00  20 Standard value table Standard service value table Standard service value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 Testing and adjusting, Part 2 Testing and adjusting, Part 3  SEN01596-01 Testing and adjusting, Part 3  SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00		SEN01380-00
Cab and its attachments  Electrical system, Part 1  Electrical system, Part 2  Electrical system, Part 3  SEN01385-00  Electrical system, Part 3  SEN01386-00  20 Standard value table  Standard service value table  Standard service value table  SEN00841-00  SEN01595-00  30 Testing and adjusting  Testing and adjusting, Part 1  SEN01596-01  Testing and adjusting, Part 2  Testing and adjusting, Part 3  SEN01598-01  40 Troubleshooting  Failure code table and fuse locations  General information on troubleshooting  SEN01722-00		SEN01381-00
Electrical system, Part 1 Electrical system, Part 2 Electrical system, Part 3 EN01385-00 Electrical system, Part 3 EN00841-00 SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 Esting and adjusting, Part 2 Esting and adjusting, Part 2 Esting and adjusting, Part 3 EN01597-01 Esting and adjusting, Part 3 EN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01721-00 SEN01722-00	···	SEN01382-00
Electrical system, Part 2 Electrical system, Part 3  SEN01385-00  20 Standard value table Standard service value table Standard service value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 Testing and adjusting, Part 2 Testing and adjusting, Part 3  SEN01596-01 Testing and adjusting, Part 3  SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00	Cab and its attachments	SEN01383-00
Electrical system, Part 3  20 Standard value table Standard service value table Standard service value table  30 Testing and adjusting Testing and adjusting, Part 1 SEN01596-01 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01721-00 SEN01722-00	Electrical system, Part 1	SEN01384-00
20 Standard value table Standard service value table SEN01595-00  30 Testing and adjusting Testing and adjusting, Part 1 SEN01596-01 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3  SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01722-00	Electrical system, Part 2	SEN01385-00
Standard service value table  30 Testing and adjusting Testing and adjusting, Part 1 SEN01596-01 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3  SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01721-00 SEN01722-00	Electrical system, Part 3	SEN01386-00
30 Testing and adjusting Testing and adjusting, Part 1 SEN01596-01 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3 SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01721-00 SEN01722-00	20 Standard value table	SEN00841-00
Testing and adjusting, Part 1 Testing and adjusting, Part 2 SEN01597-01 Testing and adjusting, Part 3 SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01721-00 SEN01722-00	Standard service value table	SEN01595-00
Testing and adjusting, Part 2 Testing and adjusting, Part 3  SEN01597-01 SEN01598-01  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01721-00 SEN01722-00	30 Testing and adjusting	SEN00842-01
Testing and adjusting, Part 3  40 Troubleshooting Failure code table and fuse locations General information on troubleshooting SEN01598-01  SEN01598-01  SEN01721-00 SEN01721-00 SEN01722-00	Testing and adjusting, Part 1	SEN01596-01
40 Troubleshooting SEN00843-01 Failure code table and fuse locations SEN01721-00 General information on troubleshooting SEN01722-00	Testing and adjusting, Part 2	SEN01597-01
Failure code table and fuse locations SEN01721-00 General information on troubleshooting SEN01722-00	Testing and adjusting, Part 3	SEN01598-01
General information on troubleshooting SEN01722-00	40 Troubleshooting	SEN00843-01
	Failure code table and fuse locations	SEN01721-00
Troubleshooting by failure code (Display of code), Part 1 SEN01723-00	General information on troubleshooting	SEN01722-00
	Troubleshooting by failure code (Display of code), Part 1	SEN01723-00
Troubleshooting by failure code (Display of code), Part 2 SEN01724-00	Troubleshooting by failure code (Display of code), Part 2	SEN01724-00
Troubleshooting by failure code (Display of code), Part 3 SEN01725-00	Troubleshooting by failure code (Display of code), Part 3	SEN01725-00

**2** WA430-6 (KA SPEC.)

00 Index and foreword SEN00846-03

Troubleshooting by failure code (Display of code), Part 4	SEN01726-00
Troubleshooting by failure code (Display of code), Part 5	SEN01727-00
Troubleshooting by failure code (Display of code), Part 6	SEN01728-00
Troubleshooting by failure code (Display of code), Part 7	SEN01729-00
Troubleshooting by failure code (Display of code), Part 8	SEN01730-00
Troubleshooting by failure code (Display of code), Part 9	SEN01731-00
Troubleshooting by failure code (Display of code), Part 10	SEN01732-00
Troubleshooting of electrical system (E-mode)	SEN01733-00
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01734-00
Troubleshooting of engine (S-mode)	SEN01735-00
50 Disassembly and assembly	SEN00844-00
General information on disassembly and assembly	SEN02246-00
Engine and cooling system	SEN02247-00
Power train, Part 1	SEN02248-00
Power train, Part 2	SEN02249-00
Steering system	SEN02250-00
Brake system	SEN02251-00
Undercarriage and frame	SEN02252-00
Hydraulic system	SEN02253-00
Work equipment	SEN02254-00
Cab and its attachments	SEN02255-00
Electrical system	SEN02256-00
90 Diagrams and drawings	SEN00845-01
Hydraulic diagrams and drawings	SEN00849-00
Electrical diagrams and drawings	SEN00850-01 ●

It's a preview. You can download the full file by clicking the link below.

### https://shopservicemanual.com/

Service Manuals from 2\$