

# Shop Manual

ENGINE

**88E -7 SERIES**

**KOMATSU**



# TABLE OF CONTENTS

---

## Structure and Function, Testing and Adjusting, Disassembly and Assembly, and Maintenance Standard

	<b>Page</b>
<b>Introduction</b> .....	1-1
<b>Applicable machine</b> .....	2-1
<b>Safety</b> .....	3-1
<b>General Service Information</b> .....	4-1
<b>Periodic Maintenance</b> .....	5-1
<b>Engine</b> .....	6-1
<b>Fuel System</b> .....	7-1
<b>Cooling System</b> .....	8-1
<b>Lubrication System</b> .....	9-1
<b>Starter Motor</b> .....	10-1
<b>Alternator</b> .....	11-1
<b>Electronic Control System</b> .....	12-1
<b>Electric Wiring</b> .....	13-1
<b>Troubleshooting</b>	
<b>Failure Code (DTC) General Description</b> .....	14-1
<b>Method and Procedure of Failure Diagnosis</b> .....	15-1
<b>Mechanical System Failure Diagnosis</b> .....	16-1

# TABLE OF CONTENTS

---

---

**STRUCTURE AND FUNCTION,  
TESTING AND ADJUSTING,  
DISASSEMBLY AND ASSEMBLY,  
AND MAINTENANCE STANDARD**

---

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$