# Shop Manual

830B 850B 870B 830C 850C 870C

## **MOTOR GRADER**

	830B	203163	
	830C	202753	
	850B	202575	
SERIAL NUMBERS	850C	202727	and UP
	870B	202599	
	870C	202775	

This material is proprietary to Komatsu America Corp/ and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or add improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, periodic revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

October 2003 Printed in USA FOREWORD CONTENTS

### **CONTENTS**

01	GENERAL	01-1
10	STRUCTURE AND FUNCTION	10-1
20	TESTING, ADJUSTING AND TROUBLESHOOTING	20-1
30	DISASSEMBLY AND ASSEMBLY	30-1
40	MAINTENANCE STANDARD	40-1
90	OTHER	90-1

#### PRODUCT PUBLICATIONS INFORMATION

Various product Parts and Service Publications are available to all **KOMATSU** construction equipment owners, including operation and maintenance manuals, parts books and service manuals.

Special publications, such as service tool, air conditioning and turbocharger service manuals are also available as well as selected Operation and Service manuals in foreign languages.

The Publications listed below are available for this particular machine(s).

DESCRIPTION	FORM NUMBER
PARTS BOOK - PAPER:	DUDD00001
Chassis and Engine 830B/C	DEDDG58612
Chassis and Engine 870B/C	BEPBG78100
OPERATION AND MAINTENANCE MANUAL:	
Chassis and Engine	CEAM009800
SHOP MANUAL	
Chassis	CEBM011200
Engine 114E-2 Series	CEBM000601
Engine 102E-2 Series	SEBM010016
SAFETY MANUAL	
Machine specific	1085 960 R2

Parts and Service Publications can *only* be acquired by authorized KOMATSU distributors using the Komatsu America Corp. Extranet Literature Ordering System.

If the Extranet Literature Ordering System is not available at the distributor location, then the following Requisition for Technical Service Publications and Service Forms can be used. Form KDC91E is shown on the reverse side of this page. Komatsu America Corp. reserves the right to add a surcharge to all fax orders.

#### REQUISITION FOR TECHNICAL SERVICE PUBLICATIONS AND SERVICE FORMS

COMPLETE FORM AND RETURN TO	DataKom Publications an 440 North Fairway Drive Vernon Hills, IL 60061-811 Attn: Service Publications Fax No. (847) 970-4186 Tel No. (847) 970-5887	2 U.S.A.	
SHIP TO	COMPANY NAME		PURCHASE ORDER NO.
	ATTN.		L
TYPE or PRINT	STREET ADDRESS  CITY, STATE, ZIP CODE		ORDER DATE
	COUNTRY		
PHONE NO.	FAX NO.	SHIPPING METHOD	DISTR/BRANCH CODE

# MACHINE SERIAL NUMBER MUST BE SHOWN.

QTY.	PUBLICATION FORM NO.	<b>₽</b>	ARTS BOOK P-Paper M-Microfiche	PUBLICATION DESCRIPTION	MODEL NUMBER	SERIAL NUMBER
		-				
		-				
		+				
		-				
DC91E (	771403	 HRP	 ENT PRICES	WILL BE CHAP	L RGED	

KDC91E 071403

FOREWORD SAFETY

#### **SAFETY**

#### SAFETY NOTICE

#### IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for the safe operation of your machine. The service and repair techniques recommended and described in this manual are both effective and safe methods of operation. Some of these operations require the use of tools specially designed for the purpose.

To prevent injury to workers, the symbols  $\triangle$  and  $\triangle$  are used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

#### **GENERAL PRECAUTIONS**

Mistakes in operation are extremely dangerous. Read the OPERATION & MAINTENANCE MANUAL carefully BEFORE operating the machine.

- 1. Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
- When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
  - Always wear safety glasses when hitting parts with a hammer.
  - Always wear safety glasses when grinding parts with a grinder, etc.
- 3. If welding repairs are needed, always have a trained, experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, glasses, cap and other clothes suited for welding work.
- 4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
- 5. Keep all tools in good condition and learn the correct way to use them.
- 6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

#### PREPARATIONS FOR WORK

- Before adding oil or making repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
- 2. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3. When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.

It's a preview. You can download the full file by clicking the link below.

# https://shopservicemanual.com/

Service Manuals from 2\$