

Shop Manual

A566E

MOTOR GRADER

SERIAL NUMBERS 100000 and up

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2010 Komatsu
Printed in U.S.A.
Komatsu America Corp.

November 1992

Shop Manual Set SMG-A566E

Covers Model A-566-E
S/N All Serial Numbers

Contains the sections listed below:

1	A-01.40	ARTICULATION JOINT ASSEMBLY (G)
2	A-10.10	CHAR-LYNN ORBITROL UNIT (G-R-P-C)
3	B-01.10	THROTTLE ADJUSTMENT (G)
4	C-11.20	TRANSMISSION, POWER SHIFT (FUNK 2263E13) (G)
5	E-01.10	ALL WHEEL DRIVE PUMP (REXROTH) (G)
6	E-02.45	CONTROL VALVES - "E" SERIES (G)
7	E-03.50	CIRCLE REVERSE MOTOR (G)
8	E-04.50	STEERING & BRAKE PUMP WITH MAIN SYSTEM PUMP (VICKERS) (G)
9	E-12.90	HYDRAULIC MOTOR (VICKERS) (DRUM DRIVE & ALL WHEEL DRIVE) (R-G)
10	E-17.20	HYDRAULIC TROUBLESHOOTING (G)
11	E-30.00	HYDRAULIC OIL SWIVEL BLOCK (2-WAY & 4-WAY) (G)
12	E-30.30	HYDRAULIC CYLINDERS "E" SERIES (G)
13	E-32.90	ALL WHEEL DRIVE (AWD) H.I.C. VALVE (G)
14	F-01.10	CIRCLE REVERSE GEAR CASE (G)
15	F-11.60	TANDEM AND FINAL DRIVE WITH PARKING BRAKE (G)
16	G-01.13	GEARBOX ASSEMBLY (AWD) (G)
17	G-01.14	FRONT AXLE ASSEMBLY (G)
18	G-09.10	FINAL DRIVE ASSEMBLY (ZF) WITH PLANETARY AND NON-PLANETARY REDUCTION (G)
19	H-03.00	CIRCLE ADJUSTMENT (FOUR SHOE) (G)
20	H-04.00	MOLDBOARD BUSHING REPLACEMENT (G)
21	J-02.00	LUBRICATION SPECIFICATIONS (G-R-P-C-M)
22	K-01.10	REBUILD & ADJUSTMENT OF SELF-ADJUSTING BRAKES (G-P)
23	K-10.20	MINNESOTA BRAKE VALVE (G)
24	K-11.00	DUAL RESERVOIR BRAKE CYLINDER AND BOOSTER (G)
25	L-01.10	WIRING DIAGRAMS (G)
26	L-10.00	TROUBLESHOOTING & REMOVAL OF CRANKING MOTORS (M-P-G-R-C)
27	L-11.00	TROUBLESHOOTING & REMOVAL OF ALTERNATORS (M-G-P-R-C)
28	N-01.70	PRE-DELIVERY PROCEDURES (G) (NOT INCLUDED - LISTED FOR REFERENCE ONLY)
29	W-01.20	PERSONNEL HEATER (40000-BTU) (G)
30	Y-01.00	GENERAL TORQUE VALUES (G-R-P-C-M)



LIBRARY COPY

MATERIAL LIFT []
GRADER [X]
PLANER []
ROLLER []
CRANE []

SHOP MANUAL

A-01.40

C3

ARTICULATION JOINT ASSEMBLY

APPLICABLE MODELS

830
850
870
A-400-E
A-400-E (USA BUILT)
A-450-E
A-500
A-525
A-500-E
A-550
A-556
A-560-E
A-566-E
A-600
A-606
S-450-E
S-500-E
S-560-E

SERIAL NUMBERS

100496 & Up
100477 & Up
100481 & Up
N10605 thru N11886
U100262 thru U100419
10605 & Up
10605 & Up
100059 & Up
10605 & Up
10605 & Up
10605 & Up
10605 & Up
10893 & Up
10893 & Up
10605 & Up
10605 & Up
10605 & Up
10605 & Up

CAUTION

- ALL COMPONENTS MUST BE PROPERLY SUPPORTED DURING DISASSEMBLY AND REASSEMBLY.
- ALL JACKING HOISTING AND GENERAL WORKSHOP EQUIPMENT REQUIRED FOR THIS OPERATION MUST BE IN GOOD WORKING ORDER.
- EXTREME CAUTION TO BE OBSERVED AT ALL TIMES TO PREVENT INJURY.
- SAFE WORKSHOP PRACTICES ARE A MUST.

FOR TABLE OF CONTENTS SEE BACK OF COVER

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$