

シヨツプマニユアル

LEO-AX

シヨツプマニユアル

LEO-NEXT

エンジン式フォークリフト

機 種	適 用 号 機
AX	
FG10/14/15/18-18	M210-640001 ~
FG09L/10L/14L/15L/18L-18	M209-640001 ~
FG15H/18H-18	M211-640001 ~
FG10/14/15/18-18	M213-640001 ~
FG10L/14L/15L/18L-18	M213-640001 ~

KOMATSU

小松リフト
Komatsu Forklift Co., Ltd.

CONTENTS

	Page No.
INTRODUCTION	9
EMISSION CONTROL STATEMENTS	10
MODEL TABLE	16
1. SAFETY	
1.1 SAFETY MANAGEMENT	1-2
1.2 SAFE TRAVEL	1-5
1.3 LOADING OPERATIONS	1-12
1.4 SAFETY IN PERIODIC MAINTENANCE	1-16
1.5 TOWING	1-22
1.6 STRUCTURE AND STABILITY OF THE LIFT TRUCK	1-23
2. SPECIFICATIONS AND GENERAL INFORMATION	
2.1 TRUCK DATA - PNEUMATIC TIRE LIFT TRUCKS (OUTDOOR)	2-4
2.2 TRUCK DATA - CUSHION TIRE LIFT TRUCKS (INDOOR)	2-6
2.3 AX50 SERVICE DATA - ALL MODELS	2-8
2.4 WEIGHT TABLE	2-10
2.5 SPECIFICATIONS	2-12
2.6 PERIODIC REPLACEMENT OF CONSUMABLE PARTS	2-13
2.7 STANDARD TIGHTENING TORQUE FOR BOLTS	2-14
2.8 STANDARD TIGHTENING TORQUE FOR PIPE JOINTS	2-15
2.8.1 ELBOWS, NIPPLES AND UNIONS	2-15
2.8.2 HIGH-PRESSURE RUBBER HOSES, PIPES AND SLEEVE NUTS	2-15
2.9 LUBRICANT AND FUEL CAPACITIES	2-16
3. OPERATOR COMPARTMENT	
3.1 STRUCTURE AND FUNCTION	3-2
3.1.1 VEHICLE CONTROLLER	3-2
3.1.1 KOMATSU OPERATOR PRESENT SYSTEM (KOPS)	3-2
3.1.2 CONTROLLER TROUBLESHOOTING	3-3
3.2 PERIODIC INSPECTION AND MAINTENANCE	3-6
3.3 TESTING AND ADJUSTING	3-7
3.3.1 ADJUST STOP LAMP SWITCH	3-8
3.3.2 ADJUST ACCELERATOR PEDAL	3-9
3.3.3 ADJUST PARKING BRAKE LEVER	3-10
3.3.4 COMBINATION SWITCH	3-11
3.4 REMOVAL AND INSTALLATION	3-13
3.4.1 PARKING BRAKE CABLE	3-13
3.5 DISASSEMBLY AND ASSEMBLY	3-14
3.6 MAINTENANCE STANDARD	3-14

4. ENGINE

4.1	STRUCTURE AND FUNCTION	4-2
4.2	PERIODIC INSPECTION AND MAINTENANCE	4-3
4.2.1	LUBRICANTS CHART	4-3
4.2.2	MAINTENANCE INTERVALS	4-4
4.2.3	INSPECTION STANDARDS	4-6
4.2.4	CHECK COOLANT LEVEL	4-11
4.2.5	CHECK OIL LEVEL IN ENGINE OIL PAN	4-11
4.2.6	CHANGE ENGINE OIL	4-11
4.2.7	REPLACE ENGINE OIL FILTER	4-12
4.2.8	INSPECT THE SPARK PLUGS	4-12
4.2.9	DRAIN WATER FROM FUEL FILTER	4-12
4.2.10	REPLACE FUEL FILTER	4-13
4.2.11	REPLACE RADIAL SEAL AIR FILTER	4-13
4.2.12	CLEAN RADIATOR	4-14
4.3	TESTING AND ADJUSTING	4-15
4.3.1	ADJUST IGNITION TIMING	4-15
4.3.2	MEASURE COMPRESSION PRESSURE	4-16
4.3.3	ADJUSTMENT OF VALVE CLEARANCE	4-16
4.4	REMOVAL AND INSTALLATION	4-18
4.4.1	REMOVAL	4-18
4.4.2	INSTALLATION	4-20
4.5	DISASSEMBLY AND ASSEMBLY	4-24
4.6	MAINTENANCE STANDARD	4-24

5. TORQUE CONVERTER

5.1	STRUCTURE AND FUNCTION	5-2
5.1.1	TORQUE CONVERTER	5-2
5.1.2	GEAR PUMP	5-2
5.1.3	TORQUE CONVERTER ASSEMBLY	5-2
5.2	PERIODIC INSPECTION	5-10
5.2.1	TROUBLESHOOTING	5-11
5.3	TESTING AND ADJUSTING	5-13
5.4	REMOVAL AND INSTALLATION	5-13
5.5	DISASSEMBLY AND ASSEMBLY	5-14
5.5.1	DISASSEMBLY	5-14
5.5.2	ASSEMBLY	5-19
5.6	MAINTENANCE STANDARD	5-21

6. TORQFLOW TRANSMISSION

6.1	STRUCTURE AND FUNCTION	6-2
6.2	PERIODIC INSPECTION AND MAINTENANCE	6-5
6.2.1	INSPECTION STANDARDS	6-5
6.2.2	CHECK OIL LEVEL	6-6
6.2.3	REPLACE OIL, INSPECT AND CLEAN STRAINER	6-7
6.2.4	REPLACE LINE FILTER	6-7
6.3	TESTING AND ADJUSTING	6-7

6.4	REMOVAL AND INSTALLATION	6-8
6.4.1	REMOVAL.....	6-8
6.4.2	INSTALLATION.....	6-11
6.5	DISASSEMBLY AND ASSEMBLY.....	6-15
6.5.1	DISASSEMBLY.....	6-15
6.5.2	ASSEMBLY.....	6-21
6.6	MAINTENANCE STANDARD	6-27
6.6.1	TORQFLOW TRANSMISSION.....	6-27
6.6.2	TRANSMISSION CONTROL VALVE	6-29

7. DRIVE AXEL

7.1	STRUCTURE AND FUNCTION.....	7-2
7.2	PERIODIC INSPECTION AND MAINTENANCE.....	7-5
7.3	TESTING AND ADJUSTING	7-6
7.3.1	CHECK OIL LEVEL.....	7-6
7.3.2	REPLACE OIL.....	7-6
7.4	REMOVAL AND INSTALLATION	7-7
7.4.1	REMOVAL.....	7-7
7.4.2	INSTALLATION.....	7-9
7.5	DISASSEMBLY AND ASSEMBLY.....	7-11
7.5.1	ADJUST PINION SHAFT ASSEMBLY WITH SHIM(S).....	7-13
7.5.2	ADJUST PINION GEAR CLEARANCE.....	7-13
7.5.3	INSPECT PINION BEARING CLEARANCE.....	7-14
7.5.4	ADJUST DIFFERENTIAL	7-14
7.6	MAINTENANCE STANDARD	7-18

8. STEERING SYSTEM

8.1	STRUCTURE AND FUNCTION.....	8-2
8.1	STEERING VALVE.....	8-4
8.2	STEERING AXLE.....	8-6
8.3	PERIODIC INSPECTION AND MAINTENANCE.....	8-7
8.4	TESTING AND ADJUSTING	8-9
8.4.1	STEERING VALVE TROUBLESHOOTING CHART.....	8-9
8.5	REMOVAL AND INSTALLATION	8-12
8.5.1	STEERING VALVE.....	8-12
8.5.2	POWER STEERING CYLINDER	8-13
8.5.3	STEERING AXLE	8-14
8.6	DISASSEMBLY AND ASSEMBLY.....	8-16
8.6.1	STEERING VALVE.....	8-16
8.6.2	POWER STEERING CYLINDER	8-35
8.6.3	STEERING AXEL	8-38
8.7	MAINTENANCE STANDARD	8-41
8.7.1	POWER STEERING VALVE.....	8-41
8.7.2	STEERING AXLE	8-42

9. WHEEL BRAKE

9.1	STRUCTURE AND FUNCTION.....	9-2
9.1.1	WHEEL BRAKE	9-2
9.1.2	BRAKE MASTER CYLINDER.....	9-3

9.2	PERIODIC INSPECTION AND MAINTENANCE	9-4
9.2.1	INSPECTION STANDARDS	9-5
9.2.2	BLEEDING BRAKE PIPING	9-9
9.2.3	ADJUST INCHING AND BRAKE PEDAL	9-11
9.3	REMOVAL AND INSTALLATION	9-12
9.3.1	REMOVAL	9-12
9.3.2	INSTALLATION	9-12
9.4	DISASSEMBLY AND ASSEMBLY	9-14
9.4.1	WHEEL BRAKE	9-14
9.4.2	BRAKE MASTER CYLINDER	9-16
9.5	MAINTENANCE STANDARD	9-18
9.5.1	WHEEL BRAKE COMPONENTS	9-18
9.5.2	BRAKE MASTER CYLINDER	9-19

10. HYDRAULIC SYSTEM

10.1	STRUCTURE AND FUNCTION	10-2
10.2	PERIODIC INSPECTION AND MAINTENANCE	10-3
10.2.1	SERVICE HYDRAULIC TANK	10-5
10.3	REMOVAL AND INSTALLATION	10-6
10.3.1	REMOVE HYDRAULIC PUMP	10-6
10.3.2	INSTALL HYDRAULIC PUMP	10-6
10.4	DISASSEMBLY AND ASSEMBLY	10-7
10.4.1	HYDRAULIC PUMP	10-7
10.4.2	CONTROL VALVE	10-12
10.4.3	REPLACE CONTROL VALVE LIP SEALS	10-16
10.4.4	REPLACE CONTROL VALVE SPOOL SEALS	10-17
10.5	MAINTENANCE STANDARD	10-18

11. WORK EQUIPMENT

11.1	STRUCTURE AND FUNCTION	11-2
11.1.1	TILT CYLINDER	11-2
11.2	PERIODIC INSPECTION AND MAINTENANCE	11-4
11.3	MEASURE HYDRAULIC DRIFT OF LIFT AND TILT CYLINDERS	11-6
11.4	REMOVAL AND INSTALLATION	11-7
11.4.1	MAST	11-7
11.4.2	LIFT CYLINDER	11-8
11.5	DISASSEMBLY AND ASSEMBLY	11-10
11.5.1	LIFT CYLINDER	11-10
11.5.2	TILT CYLINDER	11-18
11.5.3	CYLINDER SEAL SERVICE KITS	11-22
11.5.4	SIDESHIFTER	11-27
11.6	MAINTENANCE STANDARD	11-54
11.6.1	MAST, FORK CARRIAGE AND FORK	11-57

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$