SHOP MANUAL

KOMATSU

HD1200 DUMP TRUCK CHASSIS

MACHINE MODEL

SERIAL No.

HD1200

1005 and up

IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for the safe operation of machine. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe methods of operation. Some of these operations require the use of tools specially designed by Komatsu for the purpose.

To prevent injury to workers, the symbols and are used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

HD1200 00-3

FOREWORD

This shop manual has been prepared as an aid in improving the quality of repairs by giving the serviceman an accurate understanding of the product and by showing him the correct way to perform repairs and make judgements. Make sure you understand the contents of this manual and use it to full effect at every availably opportunity.

Organization

This shop manual mainly contains the necessary technical information for operations performed in a service workshop.

For ease of understanding, the manual is divided into chapters for each main group of components; these chapters are further divided into the following sections.

Structure and function

This section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for trouble shooting.

Disassembly and assembly

This section explains the order to be followed when removing, installing, disassembling or assembling each component, as well as precautions to be taken for these operations and explains how to adjust each component.

Maintenance standards

This section gives the judgement standards when inspecting disassembled parts.

HD1200 00-5

USING THE SHOP MANUAL

Volumes

Shop manuals are issued for carrying out repairs.

They are divided as follows:

Chassis volume:

issued for machine chassis

Engine volume:

issued for engine

Electrical volume:

issued for electrical system


This shop manual is chassis volume.

Distribution and Updating

Recipients of shop manuals are recorded at the Komatsu Head Office. Any additions, amendments or other changes will be sent to all recipients without fail, so someone should be appointed to be in charge of manuals. In this way, pages can be added or removed immediately and the manuals kept up to date and easy to use.

Filing Method

- 1) File under the manual title file printed on the bottom of the page.
- 2) Method of taking out the pages for filing is as follows: First order each item number starting with the lowest, and next order according to the consecutive page number for each item.

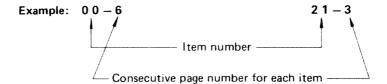

3) Additional pages: Additional pages-are indicated by a dash (-) and number after the page number. File as in the example.

Example:
$$21 - 4$$

 $21 - 4 - 1$
 $21 - 4 - 2$
 $21 - 5$
Pages added between $21 - 4$ and $21 - 5$

Revised Edition Mark

When a manual is revised, a revision number is placed within a circle and printed on the bottom inside corner of the pages to distinguish it from the old manual. Therefore, higher circled numbers supercede lower ones.

Revisions

A table listing revisions and revised pages to the present is printed on the back of the title page, so when there is a revision, revise the title page also, and use it to keep the file in order.

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$