

SEN05900-1-N1-00

# Shop Manual



**DUMP TRUCK**

**HD 785 - 7**

**SERIAL NUMBERS N10561 and up**

**KOMATSU**

# Shop Manual

DUMP TRUCK

**HD785-7**

SERIAL NUMBERS N10561 and up

**KOMATSU**



---

# DUMP TRUCK

## HD785-7

Machine model	Serial number
HD785-7	N10561 and up

---

## 00 Index and foreword

### Index

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN05900-01
00 Index and foreword	SEN05901-01
Index	SEN05902-01 ●
Foreword and general information	SEN05903-00
01 Specification	SEN05904-00
Specification and technical data	SEN05905-00
10 Structure, function and maintenance standard	SEN05906-00
Engine and cooling system	SEN05907-00
Power train, Part 1	SEN05908-00
Power train, Part 2	SEN05909-00
Steering system	SEN05910-00
Brake system	SEN05911-00
Undercarriage and frame	SEN05912-00
Hydraulic system	SEN05913-00
Work equipment (Body)	SEN05914-00
Cab and its attachments	SEN05915-00
Electrical system, Part 1	SEN05916-00
Electrical system, Part 2	SEN05917-00
Electrical system, Part 3	SEN05918-00
Electrical system, Part 4	SEN05919-00
20 Standard value table	SEN05920-00
Standard service value table	SEN05927-00
30 Testing and adjusting	SEN05921-00
Testing and adjusting, Part 1	SEN05928-00
Testing and adjusting, Part 2	SEN05929-00
Testing and adjusting, Part 3	SEN05930-00
Testing and adjusting, Part 4	SEN05931-00
Testing and adjusting, Part 5	SEN05932-00
40 Troubleshooting	SEN05922-00
Failure code table and fuse locations	SEN05933-00

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$