

# Shop Manual

COMPACT  
HYDRAULIC  
EXCAVATOR

***PC18MR-5***

SERIAL NUMBERS 30001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
FOREWORD, SAFETY, BASIC INFORMATION .....	00-8
HOW TO READ THE SHOP MANUAL .....	00-8
SAFETY NOTICE FOR OPERATION .....	00-10
PRECAUTIONS TO PREVENT FIRE .....	00-18
ACTIONS IF FIRE OCCURS .....	00-20
PRECAUTIONS WHEN YOU DISPOSE OF WASTE MATERIALS .....	00-21
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-22
PRECAUTIONS WHEN YOU DISCONNECT AND CONNECT PIPINGS .....	00-25
PRECAUTIONS WHEN YOU HANDLE ELECTRICAL EQUIPMENT .....	00-32
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-34
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-35
PRACTICAL USE OF KOMTRAX .....	00-36
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-37
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-41
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-45
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-46
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-48
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-49
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-51
STANDARD TIGHTENING TORQUE TABLE .....	00-52
CONVERSION TABLE .....	00-59
ABBREVIATION LIST .....	00-64
01 SPECIFICATION .....	01-1
CONTENTS .....	01-2
SPECIFICATIONS .....	01-3
SPECIFICATION DRAWING .....	01-3
WORKING RANGE DRAWINGS .....	01-5
SPECIFICATIONS .....	01-6
WEIGHT TABLE .....	01-11
FUEL, COOLANT, LUBRICANT .....	01-13
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
BOOT-UP SYSTEM .....	10-4
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-4
SYSTEM OPERATING LAMP SYSTEM .....	10-5
BATTERY DISCONNECT SWITCH .....	10-7
ENGINE SYSTEM .....	10-8
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-8
ENGINE CONTROL SYSTEM .....	10-9
ENGINE SYSTEM .....	10-11
COOLING SYSTEM .....	10-12
LAYOUT DRAWING OF COOLING SYSTEM .....	10-12
CONTROL SYSTEM .....	10-14
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-14
MACHINE MONITOR SYSTEM .....	10-15
KOMTRAX SYSTEM .....	10-16
CONTROL SYSTEM .....	10-17
HYDRAULIC SYSTEM .....	10-24
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-24
CLSS .....	10-25
HYDRAULIC SYSTEM .....	10-28
WORK EQUIPMENT SYSTEM .....	10-67
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-67
STRUCTURE OF VALVE CONTROL .....	10-69

PPC LOCK SYSTEM .....	10-71
WORK EQUIPMENT DOUBLE LOCK SYSTEM .....	10-73
WORK EQUIPMENT SYSTEM .....	10-74
SWING SYSTEM .....	10-90
LAYOUT DRAWING OF SWING SYSTEM .....	10-90
SWING SYSTEM .....	10-91
TRAVEL SYSTEM.....	10-97
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-97
SYSTEM DIAGRAM OF TRAVEL CONTROL .....	10-99
TRAVEL SYSTEM .....	10-101
UNDERCARRIAGE AND FRAME.....	10-115
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-115
SPECIFICATIONS OF UNDERCARRIAGE.....	10-116
IDLER CUSHION .....	10-117
WORK EQUIPMENT.....	10-119
STRUCTURE OF WORK EQUIPMENT .....	10-119
FUNCTION OF WORK EQUIPMENT .....	10-120
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-121
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
STANDARD VALUE TABLE FOR ENGINE .....	20-3
STANDARD VALUE TABLE FOR ENGINE: PC18MR-5.....	20-3
STANDARD VALUE TABLE FOR MACHINE.....	20-5
STANDARD VALUE TABLE FOR MACHINE: PC18MR-5.....	20-5
MACHINE POSTURE AND PROCEDURES TO MEASURE PERFORMANCE .....	20-15
30 TESTING AND ADJUSTING.....	30-1
CONTENTS .....	30-2
RELATED INFORMATION ON TESTING AND ADJUSTING .....	30-4
TOOLS FOR TESTING AND ADJUSTING.....	30-4
ENGINE AND COOLING SYSTEM.....	30-8
TEST ENGINE SPEED .....	30-8
TEST EXHAUST GAS COLOR.....	30-13
CHECK AND ADJUST VALVE CLEARANCE.....	30-15
TEST COMPRESSION PRESSURE.....	30-20
TEST ENGINE OIL PRESSURE .....	30-22
TEST AND ADJUST FUEL INJECTION TIMING .....	30-25
BLEED AIR FROM FUEL SYSTEM .....	30-30
TEST FUEL SYSTEM FOR LEAKAGE .....	30-31
TEST AND ADJUST ALTERNATOR BELT TENSION .....	30-32
ADJUST FUEL LEVER LINKAGE .....	30-35
POWER TRAIN.....	30-36
TEST SWING CIRCLE BEARING CLEARANCE .....	30-36
UNDERCARRIAGE AND FRAME.....	30-38
TEST AND ADJUST TRACK TENSION.....	30-38
HYDRAULIC SYSTEM.....	30-40
RELEASE PRESSURE REMAINED IN HYDRAULIC CIRCUIT .....	30-40
TEST AND ADJUST OIL PRESSURE IN WORK EQUIPMENT, TRAVEL, AND SWING CIRCUITS.....	30-43
TEST AND ADJUST OIL PRESSURE IN CONTROL CIRCUIT .....	30-50
TEST AND ADJUST OIL PRESSURE IN PUMP LS CONTROL CIRCUIT.....	30-53
TEST OUTLET PRESSURE IN SOLENOID VALVE.....	30-56
TEST OUTLET PRESSURE IN PPC VALVE.....	30-60
ADJUST PLAY OF WORK EQUIPMENT AND SWING PPC VALVES .....	30-63
TEST RELEASE PRESSURE IN SWING PARKING BRAKE.....	30-64
TEST TRAVEL DEVIATION .....	30-66
TEST THE PARTS WHICH CAUSE HYDRAULIC DRIFT OF WORK EQUIPMENT .....	30-67
TEST OIL LEAKAGE .....	30-70
PRESSURIZE HYDRAULIC TANK .....	30-76

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$