

Shop Manual

HYDRAULIC
EXCAVATOR

PC195LC-8

SERIAL NUMBER J10001 and up

ecot3

KOMATSU

HYDRAULIC EXCAVATOR

PC195LC-8

Machine model Serial number

PC195LC-8 J10001-UP

00 Index and foreword

100 Index

Composition of shop manual	2
Table of contents.....	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	LEBMP19800
00 Index and foreword	
100 Index	LEBMP19802-01 ●
200 Foreword and general information	LEBMP19800-02
01 Specification	
100 Specification and technical data	LEBMP19800-03
10 Structure, function and maintenance standard	
100 Engine and cooling system	LEBMP19800-04
200 Power train system	LEBMP19800-05
300 Undercarriage and frame	LEBMP19800-06
401 Hydraulic system, Part 1	LEBMP19800-07
402 Hydraulic system, Part 2	LEBMP19800-08
403 Hydraulic system, Part 3	LEBMP19800-09
500 Work equipment	LEBMP19800-10
600 Cab and its attachments	LEBMP19800-11
700 Electrical system	LEBMP19800-12
20 Standard value table	
100 Standard service value table	LEBMP19800-14
30 Testing and adjusting	
101 Testing and adjusting, Part 1	LEBMP19800-15
102 Testing and adjusting, Part 2	LEBMP19800-16
103 Testing and adjusting, Part 3	LEBMP19800-17
40 Troubleshooting	
100 Failure code table and fuse locations	LEBMP19800-18
200 General information on troubleshooting	LEBMP19800-19
301 Troubleshooting by failure code, Part 1	LEBMP19800-20
302 Troubleshooting by failure code, Part 2	LEBMP19800-21
303 Troubleshooting by failure code, Part 3	LEBMP19800-22
304 Troubleshooting by failure code, Part 4	LEBMP19800-23

400 Troubleshooting of electrical system (E-mode)	LEBMP19800-24
500 Troubleshooting of hydraulic and mechanical system (H-mode)	LEBMP19800-25
600 Troubleshooting of engine (S-mode)	LEBMP19800-23
50 Disassembly and assembly	
100 General information on disassembly and assembly	LEBMP19800-28
200 Engine and cooling system	LEBMP19800-29
300 Power train	LEBMP19800-30
400 Undercarriage and frame	LEBMP19801-31 ●
500 Hydraulic system	LEBMP19800-32
600 Work equipment Body	LEBMP19800-33
700 Cab and its attachments	LEBMP19800-34
800 Electrical system	LEBMP19800-35
90 Diagrams and drawings	
100 Hydraulic circuit diagram	LEBMP19800-36
200 Electrical diagrams and drawings	LEBMP19801-37 ●

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$