Shop Manual

KOMATSU

PC210-8
PC210LC-8
PC210NLC-8
PC230NHD-8
PC240LC-8
PC240NLC-8

PC210- K50001
PC210LC- K50001
PC210NLC-K50001
PC230NHD-K50001
PC240LC- K50001

PC240NLC-K50001



HYDRAULIC EXCAVATOR

PC210-8 PC210LC-8 PC210NLC-8 PC230NHD-8 PC240LC-8 PC240NLC-8

Machine model Serial number

PC210-8	K50001 and up
PC210LC-8	K50001 and up
PC210NLC-8	K50001 and up
PC230NHD-8	K50001 and up
PC240LC-8	K50001 and up
PC240NLC-8	K50001 and up

00 Index and foreword

Index

Organization list of the shop manual	 2
Table of contents	4

UEN00093-05 00 Index and foreword

Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly. The marks shown to the right of Form No. denote the following:

- O: New issue (to be filed additionally) •: Revision (to be replaced for each Form No.)
- Note 2: This shop manual can be supplied for each Form No.
- Note 3: To file this shop manual in the special binder for management, handle it as follows:
 - Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
 - File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00084-05 ●
00 Index and foreword Index	UEN00093-05 ●
Foreword and general information	UEN00094-00
01 Specification	
Specification and technical data	UEN00095-01 ●
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00096-01 ●
Power train	UEN00097-00
Undercarriage and frame	UEN00098-00
Hydraulic system, Part 1	UEN00099-01
Hydraulic system, Part 2	UEN00100-00
Hydraulic system, Part 3	UEN00160-03 ●
Work equipment	UEN00101-00
Cab and its attachments	UEN00102-00
Electrical system	UEN00103-02 ●
Auto Grease system	UEN00104-00 O
20 Standard value table	
Standard service value table	UEN00227-01 ●
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00228-03 ●
Testing and adjusting, Part 2	UEN00229-01
Testing and adjusting, Part 3	UEN00230-00
40 Troubleshooting	
General information on troubleshooting	UEN00231-02 ●
Troubleshooting by failure code (Display of code), Part 1	UEN00240-01
Troubleshooting by failure code (Display of code), Part 2	UEN00241-01
Troubleshooting by failure code (Display of code), Part 3	UEN00242-01
Troubleshooting by failure code (Display of code), Part 4	UEN00243-01
Troubleshooting of electrical system (E-mode)	UEN00244-02 ●

PC210, 230, 240-8

00 Index and foreword UEN00093-05

Troubleshooting of hydraulic and mechanical system (H-mode) Troubleshooting of engine (S-mode) Troubleshooting of Auto Grease system	UEN00245-01 UEN00246-02 ● UEN00247-00 ○
50 Disassembly and assembly	
Disassembly and assembly related information	UEN00659-00
Engine cooling related	UEN00660-00
Power train	UEN00661-00
Under carriage and frame	UEN00662-00
Hydraulic system	UEN00663-01
Work equipment	UEN00664-00
Cab related	UEN00665-00
Electric components	UEN00666-00
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00112-02
Electrical diagrams and drawings	UEN00113-03 ●

PC210, 230, 240-8

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$