

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC228US -3E0**

**PC228USLC-3E0**

SERIAL NUMBERS PC228US- 40001 and up  
PC228USLC- 40001

**ecot3**

**KOMATSU**



---

# HYDRAULIC EXCAVATOR

## PC228US-3E0 PC228USLC-3E0

Machine model	Serial number
---------------	---------------

PC228US-3E0	40001 and up
PC228USLC-3E0	40001 and up

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual .....	2
Table of contents.....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01418-12
00 Index and foreword	SEN01419-12
Index	SEN01420-12 ●
Foreword and general information	SEN01421-02
01 Specification	SEN01422-01
Specification and technical data	SEN01423-01
10 Structure, function and maintenance standard	SEN01424-05
Engine and cooling system	SEN01425-00
Power train	SEN01426-00
Undercarriage and frame	SEN01427-00
Hydraulic system, Part 1	SEN01428-00
Hydraulic system, Part 2	SEN01429-01
Hydraulic system, Part 3	SEN01430-01
Work equipment	SEN01431-01 ●
Cab and its attachments	SEN01432-00
Electrical system	SEN01433-03
20 Standard value table	SEN01434-02
Standard service value table	SEN01441-02
30 Testing and adjusting	SEN01435-05
Testing and adjusting, Part 1	SEN01879-04
Testing and adjusting, Part 2	SEN01880-04
Testing and adjusting, Part 3	SEN01881-03
40 Troubleshooting	SEN01436-04
Failure code table and fuse locations	SEN01882-04
General information on troubleshooting	SEN01883-03
Troubleshooting by failure code (Display of code), Part 1	SEN01884-02
Troubleshooting by failure code (Display of code), Part 2	SEN01885-04
Troubleshooting by failure code (Display of code), Part 3	SEN01886-02
Troubleshooting by failure code (Display of code), Part 4	SEN01887-02
Troubleshooting of electrical system (E-mode)	SEN01888-02

---

Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01889-02
Troubleshooting of engine (S-mode)	SEN01890-03
50 Disassembly and assembly	SEN01437-05
General information on disassembly and assembly	SEN01923-03
Engine and cooling system	SEN01924-04
Power train	SEN01925-01
Undercarriage and frame	SEN01926-02
Hydraulic system	SEN01927-02
Work equipment	SEN01928-01
Cab and its attachments	SEN01929-01
Electrical system	SEN01930-01
90 Diagrams and drawings	SEN01438-03
Hydraulic diagrams and drawings	SEN01439-01
Electrical diagrams and drawings	SEN01440-03

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$