

# Shop Manual

HYDRAULIC  
EXCAVATOR

***PC290LC-11***

SERIAL NUMBERS 35001 and up

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-19
FOREWORD, SAFETY, BASIC INFORMATION .....	00-25
HOW TO READ THE SHOP MANUAL .....	00-25
SAFETY NOTICE FOR OPERATION .....	00-27
PRECAUTIONS TO PREVENT FIRE .....	00-35
ACTIONS IF FIRE OCCURS .....	00-37
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-38
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS .....	00-39
PRECAUTIONS FOR DEF .....	00-40
STORE AdBlue/DEF .....	00-41
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS .....	00-45
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT .....	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-55
PRACTICAL USE OF KOMTRAX .....	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-71
HOW TO READ ELECTRICAL WIRE CODE .....	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD .....	00-76
STANDARD TIGHTENING TORQUE TABLE .....	00-79
CONVERSION TABLE .....	00-86
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-3
SPECIFICATIONS .....	01-9
SPECIFICATION DRAWING .....	01-9
WORKING RANGE DRAWINGS .....	01-11
SPECIFICATIONS .....	01-12
WEIGHT TABLE .....	01-15
TABLE OF FUEL, COOLANT, AND LUBRICANTS .....	01-17
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-5
UREA SCR SYSTEM .....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-12
UREA SCR SYSTEM DIAGRAM .....	10-17
FUNCTION OF UREA SCR SYSTEM .....	10-18
COMPONENT PARTS OF UREA SCR SYSTEM .....	10-34
BOOT-UP SYSTEM .....	10-43
LAYOUT DRAWING OF BOOT-UP SYSTEM .....	10-43
SYSTEM OPERATING LAMP SYSTEM .....	10-45
BATTERY DISCONNECT SWITCH .....	10-47
ENGINE SYSTEM .....	10-48
LAYOUT DRAWING OF ENGINE SYSTEM .....	10-48
ENGINE CONTROL SYSTEM .....	10-50
AUTO-DECELERATION SYSTEM .....	10-53
ENGINE AUTOMATIC WARM-UP SYSTEM .....	10-55
OVERHEAT PREVENTION SYSTEM .....	10-57

TURBOCHARGER PROTECTION SYSTEM .....	10-60
AUTOMATIC IDLE STOP SYSTEM .....	10-62
COMPONENT PARTS OF ENGINE SYSTEM .....	10-65
COOLING SYSTEM.....	10-84
LAYOUT DRAWING OF COOLING SYSTEM .....	10-84
CONTROL SYSTEM.....	10-86
LAYOUT DRAWING OF CONTROL SYSTEM .....	10-86
MACHINE MONITOR SYSTEM .....	10-89
KomVision SYSTEM .....	10-90
KOMTRAX SYSTEM.....	10-94
COMPONENT PARTS OF CONTROL SYSTEM.....	10-95
HYDRAULIC SYSTEM.....	10-130
LAYOUT DRAWING OF HYDRAULIC SYSTEM .....	10-130
CLSS .....	10-136
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-154
PUMP AND VALVE CONTROL SYSTEM .....	10-160
COMPONENT PARTS OF HYDRAULIC SYSTEM .....	10-163
WORK EQUIPMENT SYSTEM .....	10-249
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM .....	10-249
STRUCTURE OF VALVE CONTROL.....	10-254
ONE-TOUCH POWER MAXIMIZING SYSTEM .....	10-256
PPC LOCK SYSTEM .....	10-258
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM .....	10-259
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-261
TOOL CONTROL SYSTEM .....	10-263
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-265
SWING SYSTEM.....	10-306
LAYOUT DRAWING OF SWING SYSTEM .....	10-306
SWING CONTROL SYSTEM DIAGRAM .....	10-310
COMPONENT PARTS OF SWING SYSTEM.....	10-314
TRAVEL SYSTEM.....	10-328
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-328
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-332
COMPONENT PARTS OF TRAVEL SYSTEM .....	10-334
UNDERCARRIAGE AND FRAME.....	10-355
LAYOUT DRAWING OF UNDERCARRIAGE .....	10-355
WORK EQUIPMENT.....	10-357
STRUCTURE OF WORK EQUIPMENT .....	10-357
FUNCTION OF WORK EQUIPMENT .....	10-358
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-359
BUCKET CLEARANCE ADJUSTMENT SHIM .....	10-360
CAB AND ITS ATTACHMENTS .....	10-361
ROPS CAB .....	10-361
CAB MOUNT .....	10-362
CAB TIPPING STOPPER .....	10-363
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: PC290LC-11 .....	20-9
STANDARD VALUE TABLE FOR MACHINE.....	20-13
STANDARD VALUE TABLE FOR MACHINE: PC290LC-11 .....	20-13
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE .....	20-26
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-30
STANDARD VALUE TABLE FOR ELECTRICAL .....	20-30
30 TESTING AND ADJUSTING .....	30-1
CONTENTS .....	30-2
ABBREVIATION LIST .....	30-5

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$