SHOP

MANUAL

KOMATSU PC75UU-2

MACHINE MODEL

SERIAL No.

PC75UU-2

5001 and up

 This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require.

Materials and specifications are subject to change without notice.

PC75UU-2 mount the 4D95L-1 engine.
 For details of the engine, see the 95 Series Engine Shop Manual.

CONTENTS

		No. of page
01	GENERAL	01-1
10	STRUCTURE AND FUNCTION	10-1
20	TESTING AND ADJUSTING	20-1
30	DISASSEMBLY AND ASSEMBLY	30-1
40	MAINTENANCE STANDARD	40-1

The affected pages are indicated by the use of the following marks. It is requested that necessary actions be taken to these pages according to the table below.

Mark	Indication	Action required
0	Page to be newly added	Add
•	Page to be replaced	Replace
()	Page to be deleted	Discard

Pages having no marks are those previously revised or made additions.

LIST OF REVISED PAGES

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page	Revision number
•	00-1	2		10-3			20-36			20-79			20-123	
	00-2	1		10-4			20-37			20-80			20-124	
•	00-2-1	2		10-5			20-38			20-81			20-126	
•	00-2-2	2		10-6			20-39			20-82			20-127	
	00-3			10-7			20-40			20-83			20-128	
	00-4						20-41			20-84			20-129	
	00-5			20-1			20-42			20-85			20-131	
	00-6			20-2			20-43			20-86			20-132	
	00-7			20-3			20-44			20-87			20-133	
	8-00			20-4			20-45			20-88			20-134	
	00-9			20-5			20-46			20-89			20-135	
	00-10			20-6			20-47			20-90			20-136	
	00-11			20-7			20-48			20-91			20-137	
	00-12			20-8			20-49			20-93			20-138	
	00-13			20-9			20-50			20-94			20-139	
	00-14			20-10			20-52			20-95			20-140	
	00-15			20-11			20-53			20-97			20-141	
	00-16			20-12			20-55			20-99			20-142	
	00-17			20-13			20-56			20-100			20-143	
	00-18			20-14			20-57			20-101			20-144	
	00-19			20-15			20-58			20-102			20-145	
	00-20			20-16			20-59			20-103			20-146	
	00-21			20-17			20-60			20-104			20-148	
	00-22			20-18			20-61			20-105			20-149	
				20-19			20-62			20-106			20-150	
	01-1	1		20-20			20-63			20-107			20-151	
	01-2	Ĭ		20-21			20-64			20-108			20-152	
	01-3	(1)		20-22			20-65			20-109			20-153	
	01-4	$\widecheck{\mathbb{O}}$		20-23			20-66			20-110			20-154	
	01-5	Ĭ		20-24			20-67			20-111			20-155	
	01-6	$\overset{\smile}{\mathbb{O}}$		20-25			20-68			20-112			20-156	
	01-7	$\overset{\smile}{\mathbb{O}}$		20-26			20-69			20-113			20-157	
	01-8	1		20-27			20-70			20-114			20-158	
	01-9	1		20-28			20-71			20-115			20-159	
	01-10	1		20-29			20-72			20-116			20-160	
	01-11	1		20-30			20-73			20-117		1	20-161	
	01-12	1		20-31			20-74			20-118			20-161	
	01-13	1)		20-32			20-75			20-119			20-162	
	50	\cdot		20-33			20-76			20-113			20-163	
	10-1			20-34			20-77			20-120			20-164	
	10-2			20-35			20-77			20-121			20-166	
	10 2			20 00			20-70			20-122			20-100	,

Mark	Page	Revision number	Mark	Page	Revision number	Mark	Page		vision imber	Mark	Page	Revision number	Mark	Page	Revision number
	20-167		0	30-43-4	2	0	30-81-		- 1		30-130	1			
			0	30-43-5	2	0	30-81-		- 1		30-131	1			
•	30-1	2	0	30-43-6	2	0	30-81-				30-132	1			
•	30-2	2	0	30-43-7	2	0	30-81-				30-133	1			
	30-3	1	0	30-43-8	2	0	30-81-				30-134	1	1		
	30-4	1	0	30-43-9	2	0	30-81-				30-135	1			
	30-5	1	0	30-43-1	_	•	30-82		①						
•	30-7	2		30-44	1		30-83		1		40-1				
	30-8	1		30-45	1		30-84		1		40-2				
•	30-9	2		30-46	1		30-85		①		40-3				
0	30-9-1	2		30-47	1		30-86		①		40-4				
0	30-9-2	2		30-48	1		30-87		1		40-5				
0	30-9-3	2		30-49	1		30-88		1		40-6				
0	30-9-4	2		30-50	1		30-89		1		40-7				
0	30-9-5	2		30-51	1		30-90		1		40-8				
0	30-9-6	2		30-52	1		30-91		1		40-9				
0	30-9-7	2		30-53	1		30-92		1		40-10				
•	30-10	1		30-54	1		30-93		1		40-11				
	30-11	1		30-55	1		30-94		1		40-12				
	30-12	1		30-56	1		30-95		1		40-13		ł		
	30-13	1		30-57	1		30-96		1		40-14				
	30-14	1		30-58	1		30-97		1		40-15				
	30-15	①		30-59	1		30-98		①		40-16				
	30-16	1		30-60	1	ļ	30-99	_	1		40-17				
	30-17	1		30-61	1		30-10		1		40-18				
	30-18	①		30-62	1		30-10		1		40-19				
	30-19	①		30-63	1		30-10		1		40-20				
	30-20	①		30-64	①	İ	30-10		1		40-21				
	30-21	1		30-65	1		30-10		1		40-22				
	30-22	①		30-66	1		30-10 30-10		1		40-23				
	30-23	①		30-67	1				1						
	30-24 30-25	①		30-68 30-69	①		30-10° 30-10°		1						
	30-25	①		30-69	①		30-10		1						
	30-20	1		30-70	1		30-10								
	30-27	1		30-71	1		30-11		①						
	30-28	1		30-72	1		30-11		1						
	30-23	1		30-73	1		30-11		1	ł					
	30-30	1		30-74	1		30-11		1						
	30-31	1		30-75	1		30-11		1						
	30-32	1	1	30-70	1		30-11		1						
	30-33	1		30-77	1		30-11		1						
	30-35	1		30-78	1		30-11		1						
	30-35	1		30-73	1		30-11		1						
	30-37	1		30-81	1		30-11		1						
	30-38	1		30-81-1			30-12		①				}		
	30-39	1	0	30-81-2	_		30-12		1						
	30-40	1	0	30-81-3	_		30-12		1						
	30-41	1	0	30-81-4	_	1	30-12		1						
	30-42	1	0	30-81-5	_		30-12		1						
	30-43	1		30-81-6	_		30-12		1				1		
0	30-43-	_	0	30-81-7	_	1	30-12		1						
0	30-43-	_	0	30-81-8	_		30-12		1						
0	30-43-	_	0	30-81-9	_		30-12		1						

SAFETY SAFETY NOTICE

SAFETYSAFETY NOTICE

IMPORTANT SAFETY NOTICE

Proper service and repair is extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol **1** is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

GENERAL PRECAUTIONS

Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully BEFORE operating the machine.

- Before carrying out any greasing or repairs, read all the precautions given on the decals which are fixed to the machine.
- When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- If welding repairs are needed, always have a trained, experienced welder carry out the work.
 When carrying out welding work, always wear welding gloves, apron, hand shield, cap and other clothes suited for welding work.
- 4. When carrying out any operation with two or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR signs on the controls in the operator's compartment.
- 5. Keep all tools in good condition and learn the correct way to use them.

6. Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.

PREPARATIONS FOR WORK

- Before adding oil or making any repairs, park the machine on hard, level ground, and block the wheels or tracks to prevent the machine from moving.
- 8. Before starting work, lower blade, ripper, bucket or any other work equipment to the ground. If this is not possible, insert the safety pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- When disassembling or assembling, support the machine with blocks, jacks or stands before starting work.
- 10.Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$