

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC800 -8**

**PC800LC -8**

	PC800-	50001	
SERIAL NUMBERS	PC800LC-	50001	and up
	PC800-	K50001	
	PC800LC-	K50001	



# HYDRAULIC EXCAVATOR

## PC800-8

## PC800LC-8

Machine model	Serial number
PC800-8	50001 and up
PC800LC-8	50001 and up
PC800-8	K50001 and up
PC800LC-8	K50001 and up

---

# 00 Index and foreword

## Index

---

---

Index	
Organization list of the shop manual .....	2
Table of contents .....	4

## Organization list of the shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN00373-05 ●
00 Index and foreword	
Index	UEN00375-05 ●
Foreword and general information	UEN00376-00
01 Specification	
Specification and technical data	UEN00378-01
10 Structure, function and maintenance standard	
Engine and cooling system	UEN00380-00
Power train	UEN00381-00
Undercarriage and frame	UEN00382-00
Hydraulic system, Part 1	UEN00383-00
Hydraulic system, Part 2	UEN00384-00
Work equipment	UEN00385-00
Cab and its attachments	UEN00396-00
Electrical system	UEN00386-00
20 Standard value table	
Standard service value table	UEN00784-01
30 Testing and adjusting	
Testing and adjusting, Part 1	UEN00786-00
Testing and adjusting, Part 2	UEN00788-00
Testing and adjusting, Part 3	UEN00912-00
Testing and adjusting, Part 4	UEN00913-00
Testing and adjusting, Part 5	UEN00914-02 ●
40 Troubleshooting	
General information on troubleshooting	UEN00789-01
Troubleshooting by failure code (Display of code), Part 1	UEN00790-00
Troubleshooting by failure code (Display of code), Part 2	UEN00791-00
Troubleshooting by failure code (Display of code), Part 3	UEN00792-00
Troubleshooting of electrical system (E-mode)	UEN00793-00
Troubleshooting of hydraulic and mechanical system (H-mode)	UEN00794-00
Troubleshooting of engine (S-mode)	UEN00795-00

50 Disassembly and assembly	
General information on disassembly and assembly	UEN01052-00
Engine and cooling system, Part 1	UEN01053-00
Engine and cooling system, Part 2	UEN01054-00
Power train	UEN01055-00
Undercarriage and frame	UEN01056-00
Hydraulic system	UEN01057-00
Work equipment	UEN01058-00
Cab and its attachments	UEN01059-00
Electrical system	UEN01060-01
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN00392-00
Electrical diagrams and drawings	UEN00393-02

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$