

# Shop Manual

ENGINE

**SAA4D102SE-1**

MACHINE MODEL WB93R-8E0  
WB93S-8E0  
WB97R-8E0  
WB97S-8E0



# Contents

---

## INTRODUCTION

<b>ENGINE</b> .....	<b>54</b>
[54.01] ENGINE ASSEMBLY .....	54.1
[54.04] ENGINE MOUNTING .....	54.2
[54.06] CYLINDER HEAD ASSEMBLY .....	54.3
[54.07] EXHAUST AND INTAKE MANIFOLDS .....	54.4
[54.08] ENGINE COMPONENTS .....	54.5
[54.12] TIMING GEAR .....	54.6
[54.20] FUEL FEED .....	54.7
[54.24] SUPERCHARGING .....	54.8
[54.30] LUBRICATION .....	54.9
[54.31] LUBRICANT COOLING .....	54.10
[54.32] WATER COOLING .....	54.11
[54.34] FAN AND COOLING CONTROL .....	54.12
<b>INJECTION</b> .....	<b>77</b>
[77.10] INJECTION PUMP .....	77.1
[77.26] ELECTRONIC GOVERNOR .....	77.2
[77.30] LIFT FEED PUMP .....	77.3
[77.31] ADDITIONAL FUEL FILTERS .....	77.4
[77.45] HYDRAULIC ACCUMULATOR .....	77.5
[77.50] INJECTORS .....	77.6
<b>CHASSIS</b> .....	<b>50</b>
[50.51] AIR FILTERS AND PIPES .....	50.1
[50.60] RADIATOR AND PIPES .....	50.2
[50.74] AD-BLUE SYSTEM .....	50.3
<b>ELECTRICAL COMPONENTS</b> .....	<b>76</b>
[76.03] ALTERNATOR .....	76.1

[76.08] STARTER MOTOR .....	76.2
[76.19] ENGINE PREHEATING DEVICE.....	76.3
[76.20] BATTERIES .....	76.4
[76.42] PRESSURE GAUGES, INDICATORS, SENDERS .....	76.5
[76.61] CONTROL UNITS, RESISTORS, FUSES .....	76.6
[76.91] CABLES AND CONNECTIONS .....	76.7

# Contents

---

## INTRODUCTION

Foreword .....	4
International symbols .....	6
Grouped Safety Message .....	7
Grouped Safety Message .....	9
Safety rules .....	12
Conversion factors .....	14
Product identification - Correspondence between technical codes and commercial codes ..	15
Product identification - Technical Code .....	16
Product identification - Commercial Code .....	17
Scheduled maintenance .....	18
Scheduled maintenance ATS system .....	20

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$