

# Shop Manual

ENGINE

**107E -3 SERIES**

**KOMATSU**



---

# 00 INDEX AND FOREWORD

---

# INDEX

00 INDEX AND FOREWORD .....	00-1
ABBREVIATION LIST .....	00-5
FOREWORD, SAFETY, BASIC INFORMATION .....	00-11
HOW TO READ THE ENGINE SHOP MANUAL .....	00-11
SAFETY NOTICE FOR OPERATION.....	00-13
PRECAUTIONS TO PREVENT FIRE.....	00-21
ACTIONS IF FIRE OCCURS .....	00-23
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS .....	00-24
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS.....	00-25
PRECAUTIONS FOR DEF.....	00-26
STORE AdBlue/DEF .....	00-27
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT .....	00-28
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS.....	00-31
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT.....	00-38
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT .....	00-40
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT .....	00-41
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER .....	00-42
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS .....	00-46
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR .....	00-50
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR .....	00-51
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ...	00-53
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-54
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-56
HOW TO READ ELECTRICAL WIRE CODE .....	00-57
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD.....	00-61
STANDARD TIGHTENING TORQUE TABLE.....	00-64
CONVERSION TABLE .....	00-71
01 SPECIFICATIONS .....	01-1
CONTENTS .....	01-2
ABBREVIATION LIST .....	01-4
SPECIFICATIONS .....	01-10
OUTLINE OF EXHAUST GAS REGULATION.....	01-10
LIST OF APPLICABLE MACHINES: 107E-3.....	01-13
SPECIFICATIONS .....	01-14
ENGINE GENERAL VIEW .....	01-29
ENGINE PERFORMANCE CURVE .....	01-85
10 STRUCTURE AND FUNCTION .....	10-1
CONTENTS .....	10-2
ABBREVIATION LIST .....	10-5
UREA SCR SYSTEM.....	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM .....	10-11
UREA SCR SYSTEM DIAGRAM .....	10-19
UREA SCR SYSTEM DIAGRAM .....	10-21
FUNCTION OF UREA SCR SYSTEM.....	10-22
FUNCTION OF UREA SCR SYSTEM.....	10-23
COMPONENT PARTS OF UREA SCR SYSTEM.....	10-45
ENGINE SYSTEM .....	10-57
LAYOUT OF ENGINE COMPONENTS .....	10-57
INTAKE AND EXHAUST SYSTEM PARTS .....	10-61
ENGINE MAIN BODY PARTS.....	10-68
TURBOCHARGER SYSTEM.....	10-84
LUBRICATION SYSTEM.....	10-118
FUEL SYSTEM.....	10-130
COOLING SYSTEM.....	10-139
ELECTRICAL SYSTEM .....	10-146

COMPONENT PARTS OF ELECTRICAL SYSTEM .....	10-146
SENSOR.....	10-172
20 STANDARD VALUE TABLE .....	20-1
CONTENTS .....	20-2
ABBREVIATION LIST .....	20-3
STANDARD VALUE TABLE FOR ENGINE .....	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-3 (D51EX-24, D51EXI-24, D51PX-24, D51PXI-24).....	20-9
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-3 (HB215LC-3).....	20-12
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-3 (PC170LC-11).....	20-15
STANDARD VALUE TABLE FOR ENGINE: SAA4D107E-3 (WA200-8) .....	20-18
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (BR380JG-3, BR380JG-3E0).....	20-21
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (D61EX-24, D61EXI-24, D61PX-24, D61PXI-24).....	20-24
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (D61EX-24E0, D61EXI-24E0, D61PX-24E0, D61PXI-24E0).....	20-27
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (GD655-6, GD655-7, GD675-6, GD675-7E0).....	20-30
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (PC210LC-11, PC210LCI-11, PC210LCI-11E0).....	20-33
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (PC228USLC-11, PC238USLC-11)....	20-36
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (PC240LC-11).....	20-39
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (PC290LC-11, PC290LCI-11).....	20-42
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (WA270-8, WA270-8E0).....	20-45
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (WA320-8, WA320-8E0).....	20-48
STANDARD VALUE TABLE FOR ENGINE: SAA6D107E-3 (WA380-8, WA380-8E0).....	20-51
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD .....	20-54
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D107E-3 (D51EX-24, D51EXI-24, D51PX-24, D51PXI-24).....	20-54
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D107E-3 (HB215LC-3).....	20-56
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D107E-3 (PC170LC-11)....	20-57
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA4D107E-3 (WA200-8) .....	20-59
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (BR380JG-3, BR380JG-3E0).....	20-61
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (D61EX-24, D61EXI-24, D61PX-24, D61PXI-24).....	20-63
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (D61EX-24E0, D61EXI-24E0, D61PX-24E0, D61PXI-24E0).....	20-65
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (GD655-6, GD655-7, GD675-6, GD675-7E0).....	20-67
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (PC210LC-11, PC210LCI-11, PC210LCI-11E0).....	20-69
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (PC228USLC-11, PC238USLC-11).....	20-71
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (PC240LC-11)....	20-73
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (PC290LC-11, PC290LCI-11).....	20-75
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (WA270-8, WA270-8E0).....	20-77
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (WA320-8, WA320-8E0).....	20-79
RUNNING-IN STANDARD AND PERFORMANCE TEST STANDARD: SAA6D107E-3 (WA380-8, WA380-8E0).....	20-81
50 DISASSEMBLY AND ASSEMBLY.....	50-1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$