

# Shop Manual

ENGINE

**SAA4D99E-1**

MACHINE MODEL WB93R-8  
WB93S-8  
WB97R-8  
WB97S-8



# Contents

---

## INTRODUCTION

<b>ENGINE .....</b>	<b>54</b>
[54.01] ENGINE ASSEMBLY .....	54.1
[54.04] ENGINE MOUNTING .....	54.2
[54.06] CYLINDER HEAD ASSEMBLY .....	54.3
[54.07] INTAKE+EXHAUST MANIFOLDS .....	54.4
[54.08] ENGINE COMPONENTS .....	54.5
[54.12] TIMING GEAR .....	54.6
[54.20] FUEL SUPPLY .....	54.7
[54.24] SUPERCHARGING .....	54.8
[54.30] LUBRICATION .....	54.9
[54.31] LUBRICANT COOLING .....	54.10
[54.32] WATER COOLING .....	54.11
[54.34] FAN AND COOLING CONTROL .....	54.12
<b>INJECTION .....</b>	<b>77</b>
[77.10] INJECTION PUMP .....	77.1
[77.26] ELECTRONIC GOVERNOR .....	77.2
[77.30] LIFT FEED PUMP .....	77.3
[77.31] AUXILIARY FUEL FILTERS .....	77.4
[77.45] HYDRAULIC ACCUMULATOR .....	77.5
[77.50] INJECTORS .....	77.6
<b>CHASSIS .....</b>	<b>50</b>
[50.51] AIR FILTERS AND PIPES .....	50.1
[50.60] RADIATOR AND PIPES .....	50.2
[50.74] AD-BLUE SYSTEM .....	50.3
<b>ELECTRICAL COMPONENTS .....</b>	<b>76</b>
[76.03] ALTERNATOR .....	76.1

[76.08] STARTER MOTOR.....	76.2
[76.19] COLD START DEVICE.....	76.3
[76.20] BATTERIES .....	76.4
[76.42] GAUGES,INDICATORS,SENDERS.....	76.5
[76.61] CTR UNIT,RESIST,FUSES.....	76.6
[76.91] CABLES AND CONNECTIONS.....	76.7

# Contents

---

## INTRODUCTION

Foreword .....	5
International symbols .....	7
Grouped Safety Message .....	8
Grouped Safety Message .....	10
Safety rules .....	13
Conversion factors .....	15
Product identification - Correspondence between technical codes and commercial codes ..	17
Product identification - Technical coding .....	18
Product identification - Commercial coding .....	19
Scheduled maintenance .....	20
Scheduled maintenance ATS system .....	22

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$