

# Shop Manual

ENGINE

**114E -3 SERIES**

**KOMATSU**



---

# **ENGINE**

## **114E-3 Series**

---

### **00 Index and foreword**

#### **Index**

---

---

Composition of shop manual .....	2
Table of contents.....	3

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00169-21
00 Index and foreword	SEN00170-21
Index	SEN00171-21
Foreword and general information	SEN00172-05
01 Specification	SEN00173-09
Specification and technical data	SEN00174-09
10 Structure, function and maintenance standard	SEN00175-11
Structure and function, maintenance standard	SEN00176-11
20 Standard value table	SEN00260-09
Standard service value table	SEN00261-09
30 Testing and adjusting	SEN00454-02
Testing and adjusting	SEN00455-02
40 Troubleshooting	SEN00456-04
General Information on troubleshooting	SEN00457-03
Troubleshooting of electrical system (E-mode), Part 1	SEN00459-02
Troubleshooting of electrical system (E-mode), Part 2	SEN00460-03
Troubleshooting of mechanical system (S-mode)	SEN00458-02
50 Disassembly and assembly	SEN00461-07
General information on disassembly and assembly	SEN00462-04
Disassembly and assembly, Part 1	SEN00463-01
Disassembly and assembly, Part 2	SEN00464-05
Disassembly and assembly, Part 3	SEN03962-00
90 Repair and Replacement of parts	SEN05217-04
Information related repair and replacement	SEN05218-00
Parts related to cylinder head	SEN05219-01
Parts related to cylinder block	SEN05220-03

## Table of contents

00 Index and foreword	
Index	SEN00171-21
Composition of shop manual .....	2
Table of contents .....	3
Foreword and general information	SEN00172-05
Safety notice .....	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard .....	9
Handling of electric equipment and hydraulic component .....	11
Handling of connectors newly used for engines .....	20
How to read electric wire code .....	23
Precautions when carrying out operation .....	26
Method of disassembling and connecting push-pull type coupler .....	29
Standard tightening torque table .....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN00174-09
General.....	2
Specifications .....	3
General view.....	12
Dimensions table .....	36
Engine performance curves.....	37
10 Structure, function and maintenance standard	
Structure, function and maintenance standard	SEN00176-11
Intake, exhaust system .....	3
Intake system .....	3
Exhaust system .....	4
Turbocharger .....	5
Lubricating oil system.....	8
Cooling system.....	10
Fuel system (common rail).....	12
Maintenance standard.....	17
Turbocharger .....	17
Cylinder head .....	18
Cylinder block .....	20
Cylinder liner.....	22
Crankshaft .....	24
Piston, piston ring and piston pin.....	25
Connecting rod .....	26
Vibration damper .....	28
Timing gear.....	29
Camshaft .....	30
Valve and valve guide.....	32
Rocker arm, shaft and tappet .....	34
Flywheel and flywheel housing.....	36
Oil pump .....	38
Water pump drive .....	40
Water pump .....	41
Thermostat .....	42
Fan drive.....	43
Alternator .....	44

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$