

# **Shop Manual**

# **140E-5 SERIES**

## **ENGINE**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2007 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

June 2007



---

# **ENGINE**

## **140E-5 Series**

---

### **00 Index and foreword**

#### **Index**

---

---

Composition of shop manual.....	2
Table of contents .....	3

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00074-06
00 Index and foreword	SEN00075-06
Index	SEN00076-06 ●
Foreword and general information	SEN00077-05
01 Specification	SEN00078-03
Specification and technical data	SEN00079-03 ●
10 Structure, function and maintenance standard	SEN00080-03
Structure, function and maintenance standard, Part 1	SEN00081-03 ●
Structure, function and maintenance standard, Part 2	SEN00082-03 ●
20 Standard value table	SEN00083-04
Standard service value table	SEN00147-04 ●
30 Testing and adjusting	SEN00148-02
Testing and adjusting	SEN00149-02
40 Troubleshooting	SEN00150-02
General information on troubleshooting	SEN00151-02
Troubleshooting of electrical system (E-mode), Part 1	SEN00153-02
Troubleshooting of electrical system (E-mode), Part 2	SEN00154-02
Troubleshooting of mechanical system (S-mode)	SEN00152-02
50 Disassembly and assembly	SEN00155-02
General information on disassembly and assembly	SEN00156-01
Disassembly and assembly, Part 1 (with EGR)	SEN00157-02
Disassembly and assembly, Part 2 (EGR-less)	SEN00158-02
Disassembly and assembly, Part 3	SEN00159-02

## Table of contents

00 Index and foreword	
Index	SEN00076-06
Composition of shop manual .....	2
Table of contents .....	3
Foreword and general information	SEN00077-05
Safety notice .....	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard .....	9
Handling of electric equipment and hydraulic component .....	11
Handling of connectors newly used for engines .....	20
How to read electric wire code .....	23
Precautions when carrying out operation .....	26
Method of disassembling and connecting push-pull type coupler .....	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN00079-03
Outline .....	2
Specifications.....	6
General view.....	22
Weight table.....	43
Engine performance curves.....	45
10 Structure, function and maintenance standard	
Structure, function and maintenance standard, Part 1	SEN00081-03
Air intake and exhaust system .....	3
Air intake and exhaust unit .....	3
Air cleaner .....	5
Turbocharger .....	8
Aftercooler .....	19
Muffler.....	20
EGR system .....	24
Engine unit .....	32
Cylinder head .....	32
Cylinder block .....	36
Cylinder liner.....	39
Main moving parts .....	40
Crankshaft .....	42
Camshaft .....	43
Cam follower and push rod.....	44
Piston, piston ring and piston pin.....	46
Connecting rod .....	48
Flywheel and flywheel housing.....	49
Vibration damper .....	52
Timing gear.....	54
Valve system .....	58
Valve and valve guide.....	60
Rocker arm and shaft .....	62
Crosshead and guide .....	63

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$