

Shop Manual

ENGINE

140E-5 SERIES

KOMATSU

ENGINE

140E-5 Series

00 Index and foreword

Index

| | |
|----------------------------------|---|
| Composition of shop manual | 2 |
| Table of contents | 3 |

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title | Form Number |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs | SEN00074-11 |
| 00 Index and foreword | SEN00075-11 |
| Index | SEN00076-11 ● |
| Foreword and general information | SEN00077-07 |
| 01 Specification | SEN00078-06 |
| Specification and technical data | SEN00079-06 ● |
| 10 Structure, function and maintenance standard | SEN00080-07 |
| Structure, function and maintenance standard, Part 1 | SEN00081-07 ● |
| Structure, function and maintenance standard, Part 2 | SEN00082-05 ● |
| 20 Standard value table | SEN00083-06 |
| Standard service value table | SEN00147-06 ● |
| 30 Testing and adjusting | SEN00148-05 |
| Testing and adjusting | SEN00149-05 ● |
| 40 Troubleshooting | SEN00150-05 |
| General information on troubleshooting | SEN00151-04 |
| Troubleshooting of mechanical system (S-mode) | SEN00152-03 |
| Troubleshooting of electrical system (E-mode), Part 1 | SEN00153-02 |
| Troubleshooting of electrical system (E-mode), Part 2 | SEN00154-02 |
| 50 Disassembly and assembly | SEN00155-05 |
| General information on disassembly and assembly | SEN00156-03 |
| Disassembly and assembly, Part 1 (with EGR) | SEN00157-04 ● |
| Disassembly and assembly, Part 2 (EGR-less) | SEN00158-04 ● |
| Disassembly and assembly, Part 3 | SEN00159-04 ● |
| 90 Repair and replacement of parts | SEN05197-00 |
| Information related to repair and replacement | SEN05198-00 |
| Parts related to cylinder head | SEN05199-00 |
| Parts related to cylinder block | SEN05200-00 |

Table of contents

| | |
|---|-------------|
| 00 Index and foreword | |
| Index | SEN00076-11 |
| Composition of shop manual | 2 |
| Table of contents | 3 |
| Foreword and general information | SEN00077-07 |
| Safety notice | 2 |
| How to read the shop manual | 7 |
| Explanation of terms for maintenance standard | 9 |
| Handling of electric equipment and hydraulic component | 11 |
| Handling of connectors newly used for engines | 20 |
| How to read electric wire code | 23 |
| Precautions when carrying out operation | 26 |
| Method of disassembling and connecting push-pull type coupler | 29 |
| Standard tightening torque table | 32 |
| Conversion table | 36 |
| 01 Specification | |
| Specification and technical data | SEN00079-06 |
| Outline | 2 |
| Specifications | 6 |
| General view | 24 |
| Weight table | 55 |
| Engine performance curves | 58 |
| 10 Structure, function and maintenance standard | |
| Structure, function and maintenance standard, Part 1 | SEN00081-07 |
| Air intake and exhaust unit | 3 |
| Air cleaner | 5 |
| Turbocharger | 8 |
| Aftercooler | 19 |
| Muffler | 20 |
| EGR system | 25 |
| Cylinder head | 32 |
| Cylinder block | 36 |
| Cylinder liner | 39 |
| Main moving parts | 40 |
| Crankshaft | 42 |
| Camshaft | 43 |
| Cam follower and push rod | 44 |
| Piston, piston ring and piston pin | 46 |
| Connecting rod | 48 |
| Flywheel and flywheel housing | 49 |
| Vibration damper | 52 |
| Timing gear | 54 |
| Valve system | 58 |
| Valve and valve guide | 60 |
| Rocker arm and shaft | 62 |
| Crosshead and guide | 63 |
| Structure, function and maintenance standard, Part 2 | SEN00082-05 |
| Lubrication system | 4 |
| Lubrication system diagram | 4 |
| Oil pump | 8 |
| EGR oil pump | 9 |
| Oil filter | 10 |
| Oil cooler | 12 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$