

Shop Manual

ENGINE

170E -5 SERIES

KOMATSU

ENGINE**170E-5 Series****00 Index and foreword****Index**

Composition of shop manual	2
Table of contents	3

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00190-17
00 Index and foreword	SEN00191-17
Index	SEN00192-17
Foreword and general information	SEN00193-05
01 Specification	SEN00194-06
Specification and technical data	SEN00195-06
10 Structure, function and maintenance standard	SEN00196-08
Structure, function and maintenance standard, Part 1.....	SEN00197-08
Structure, function and maintenance standard, Part 2.....	SEN00198-06
20 Standard value table.....	SEN00199-06
Standard service value table.....	SEN00367-06
30 Testing and adjusting	SEN00200-04
Testing and adjusting	SEN00368-04
40 Troubleshooting	SEN00201-03
General information on troubleshooting.....	SEN00369-03
Troubleshooting of electrical system (E-mode), Part 1	SEN00371-02
Troubleshooting of electrical system (E-mode), Part 2	SEN00372-01
Troubleshooting of mechanical system (S-mode).....	SEN00370-02
50 Disassembly and assembly	SEN00202-06
General information on disassembly and assembly	SEN00765-04
Disassembly and assembly, Part 1 (With EGR).....	SEN00766-04
Disassembly and assembly, Part 2 (EGR-less)	SEN00767-04
Disassembly and assembly, Part 3	SEN00768-02
90 Repair and replacement of parts	SEN05193-02
Information related to repair and replacement	SEN05194-02
Parts related to cylinder head	SEN05195-01
Parts related to cylinder block.....	SEN05196-01

Table of contents

00 Index and foreword	
Index	SEN00192-17
Composition of shop manual	2
Table of contents	3
Foreword and general information	SEN00193-05
Safety notice	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component.....	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN00195-06
Outline	2
Specifications	6
General view.....	16
Weight table.....	33
Engine performance curves.....	35
10 Structure, function and maintenance standard	
Structure, function and maintenance standard, Part 1	SEN00197-08
Air cleaner	4
Turbocharger	6
EGR system	11
Cylinder head	18
Cylinder block	22
Cylinder liner.....	26
Main moving parts	28
Crankshaft	30
Camshaft	32
Connecting rod	33
Piston, piston ring and piston pin.....	34
Flywheel and flywheel housing	35
Vibration damper	36
Gear train.....	37
Timing gear.....	42
Valve system	46
Valve and valve guide	48
Rocker arm and shaft	49
Crosshead and guide	50
Tappet and push rod.....	51
Structure, function and maintenance standard, Part 2	SEN00198-06
Lubrication system	4
Lubrication system diagram.....	4
Oil pump	8
Oil filter and safety valve	12
Oil cooler	13
Fuel system.....	14
CRI system diagram	14
Outline of CRI system.....	15

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$