

# Shop Manual

ENGINE

**170E -7 SERIES**

**KOMATSU**



---

## **00 Index and Foreword**

---

# Index

00 Index and Foreword .....	00-1
Abbreviation List .....	00-4
Foreword, Safety, Basic Information.....	00-10
How to Read the Engine Shop Manual .....	00-10
Safety Notice for Operation .....	00-12
Precautions to Prevent Fire.....	00-20
Procedures If Fire Occurs .....	00-22
Precautions for Disposing of Waste Materials .....	00-23
Procedures for Exhaust Gas Regulations.....	00-24
Precautions for DEF.....	00-25
Store DEF .....	00-26
Precautions When You Handle Hydraulic Equipment.....	00-27
Precautions When You Disconnect and Connect Pipings.....	00-30
Precautions When You Handle Electrical Equipment .....	00-37
Precautions When You Handle Fuel System Equipment .....	00-39
Precautions When You Handle Intake System Equipment .....	00-40
Disconnect and Connect Push-Pull Type Coupler .....	00-41
Precautions for Disconnection and Connection of Connectors .....	00-45
How to Disconnect and Connect Deutsch Connector .....	00-49
How to Disconnect and Connect Slide Lock Type Connector .....	00-50
How to Disconnect and Connect Connector with Lock to Pull .....	00-52
How to Disconnect and Connect Connector with Lock to Push .....	00-53
How to Disconnect and Connect Connector with Housing to Rotate .....	00-55
How to Read the Codes for Electric Cable .....	00-56
Explanation of Terms for Maintenance Standard .....	00-60
Standard Tightening Torque Table.....	00-63
Conversion Table .....	00-70
01 Specifications.....	01-1
Table of Contents .....	01-2
Specifications.....	01-3
Outline of Exhaust Gas Regulation .....	01-3
List of Applicable Machines: 170E-7 .....	01-14
Specifications.....	01-15
Engine General View .....	01-21
Weight Table .....	01-45
Engine Performance Curve .....	01-50
10 Structure and Function .....	10-1
Table of Contents .....	10-2
Abbreviation List .....	10-5
Urea SCR System.....	10-11
Layout Drawing of Urea SCR System .....	10-11
Urea SCR System Diagram .....	10-15
Function of Urea SCR System .....	10-17
Component Parts of Urea SCR System .....	10-33
Engine System.....	10-43
Layout of Engine Components .....	10-43
Intake and Exhaust System Parts .....	10-45
Engine Main Body Parts.....	10-53
Turbocharger System.....	10-69
Lubrication System.....	10-103
Fuel System.....	10-114
Cooling System.....	10-138
Electrical System .....	10-147
Component Parts of Electrical System .....	10-147
Sensor .....	10-196
20 Standard Value Table .....	20-1

Table of Contents .....	20-2
Abbreviation List .....	20-3
Standard Value Table for Engine .....	20-9
Standard Value Table for Engine: SAA6D170E-7 (D375A-8, D375A-8E0, D375AI-8, D375AI-8E0).....	20-9
Standard Value Table for Engine: SAA6D170E-7 (HD465-8, HD465-8E0, HD605-8, HD605-8E0)..	20-11
Standard Value Table for Engine: SAA6D170E-7 (HD465-10, HD465-10E0, HD605-10, HD605-10E0)...	20-13
Standard Value Table for Engine: SAA6D170E-7 (PC1250-11, PC1250-11E0, PC1250LC-11, PC1250SP-11, PC1250SP-11E0).....	20-15
Standard Value Table for Engine: SAA6D170E-7 (PC1250-11R, PC1250SP-11R).....	20-17
Standard Value Table for Engine: SAA6D170E-7 (WA600-8, WA600-8E0) .....	20-19
Running-in Standard and Performance Test Standard .....	20-21
Running-in Standard and Performance Test Standard: SAA6D170E-7 (D375A-8, D375A-8E0, D375AI-8, D375AI-8E0).....	20-21
Running-in Standard and Performance Test Standard: SAA6D170E-7 (HD465-8, HD465-8E0, HD605-8, HD605-8E0) .....	20-23
Running-in Standard and Performance Test Standard: SAA6D170E-7 (HD465-10, HD465-10E0, HD605-10, HD605-10E0) .....	20-25
Running-in Standard and Performance Test Standard: SAA6D170E-7 (PC1250-11, PC1250-11E0, PC1250LC-11, PC1250SP-11, PC1250SP-11E0).....	20-27
Running-in Standard and Performance Test Standard: SAA6D170E-7 (PC1250-11R, PC1250SP-11R) ..	20-29
Running-in Standard and Performance Test Standard: SAA6D170E-7 (WA600-8, WA600-8E0) ...	20-31
50 Disassembly and Assembly .....	50-1
Table of Contents .....	50-2
Precautions Before Work .....	50-3
Abbreviation List .....	50-4
Related Information on Disassembly and Assembly .....	50-10
How to Read This Manual .....	50-10
Coating Materials List.....	50-11
Special Tool List.....	50-16
Sketches of Special Tools .....	50-18
Engine System.....	50-19
Disassemble and Assemble Engine Generally .....	50-19
Remove and Install Supply Pump Assembly .....	50-201
Remove and Install Engine Front Oil Seal.....	50-224
Remove and Install Engine Rear Oil Seal .....	50-227
60 Maintenance Standard .....	60-1
Table of Contents .....	60-2
Abbreviation List .....	60-3
Engine System.....	60-9
Intake and Exhaust System Parts .....	60-9
Engine Main Body Parts.....	60-12
Lubrication System.....	60-37
Cooling System .....	60-42
Index.....	1

It's a preview. You can download the full file by  
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$